

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

2005-08 ELECTRICAL**Fuse/Relay Boxes - RL****CONNECTOR TO FUSE/RELAY BOX INDEX****UNDER-HOOD FUSE/RELAY BOX****UNDER-HOOD FUSE/RELAY BOX REFERENCE**

Socket	Ref	Terminal	Connects to
A/C compressor clutch relay	2	4	
A (ELD unit)	5	3	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
B	7	1	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
Blower motor relay	1	4	
C	8	2	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
D	4	9	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
E	9	16	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
F	10	20	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
Fog lights relay	14	4	
G	6	2	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
H	11	14	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
J	13	10	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
K	12	5	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
Rear window defogger relay	3	4	
Windshield wiper relay	15	4	
T1	17		Starter cable (see CONNECTOR TO HARNESS INDEX)
T101	16		Engine wire harness (see ENGINE WIRE HARNESS (FRONT BRANCH))

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

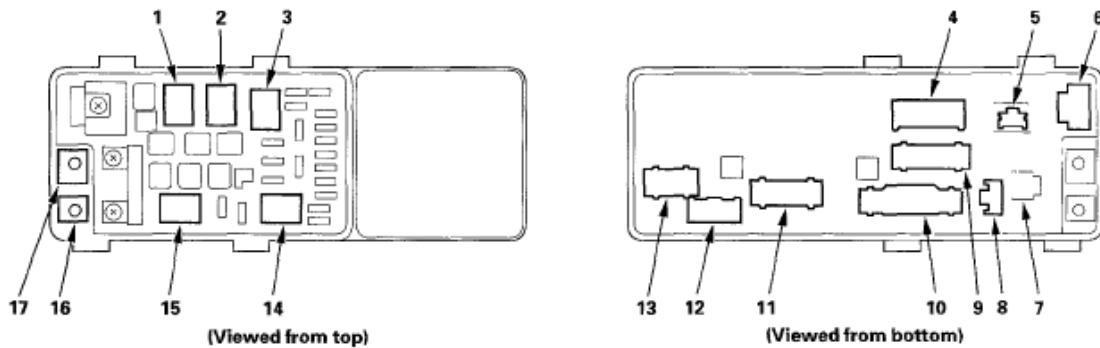


Fig. 1: Identifying Under-Hood Fuse/Relay Box Terminals
Courtesy of AMERICAN HONDA MOTOR CO., INC.

AUXILIARY UNDER-HOOD RELAY BOX

AUXILIARY UNDER-HOOD RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
Daytime running lights relay (Canada models)	1	5	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
Adaptive cruise control (ACC) relay ('06-08 models)	3	5	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))
Radiator fan control (RFC) unit relay	2	4	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))

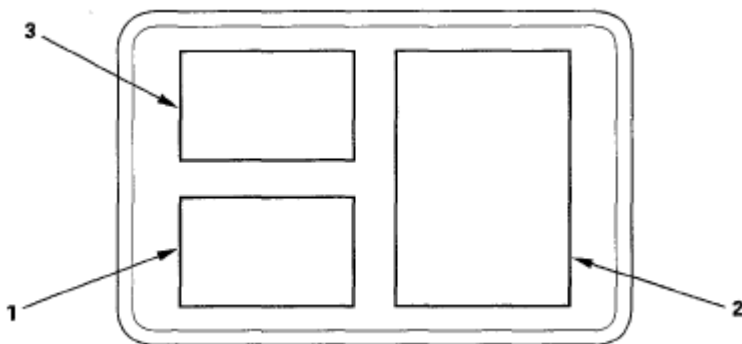


Fig. 2: Identifying Auxiliary Under-Hood Relay Box Terminals
Courtesy of AMERICAN HONDA MOTOR CO., INC.

DRIVER'S UNDER-DASH FUSE/RELAY BOX

DRIVER'S UNDER-DASH FUSE/RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
A	6	6	<ul style="list-style-type: none"> Dashboard wire harness B ('05 model) (see DASHBOARD WIRE HARNESS B ('05 MODEL)) Dashboard wire harness A ('06-08 models) (see DASHBOARD WIRE HARNESS A (LEFT

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

			<u>BRANCH) ('06-08 MODELS))</u>
Accessory power socket relay	19	4	
A/F sensor relay	20	4	
B	12	6	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))</u>)
C	11	12	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))</u>)
D	13	17	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))</u>)
E	8	16	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>)
F	9	14	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>)
G	14	6	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>)
H	15	14	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>)
Ignition coil relay	23	4	
J	27	21	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>)
K	26	12	Driver's door subharness (see <u>DRIVER'S DOOR SUBHARNESS)</u>)
M	25	3	MICU service check connector Dashboard wire harness A
N	2	45	<ul style="list-style-type: none"> '05 model (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL))</u>) '06-08 models (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('06-08 MODELS))</u>) Dashboard wire harness A
P (MICU)	17	30	<ul style="list-style-type: none"> '05 model (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL))</u>) '06-08 models (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('06-08 MODELS))</u>)
PGM-FI main relay 1 (FI MAIN)	21	4	
PGM-FI main relay 2 (FUEL PUMP)	24	4	
	22		Not used
Q (MICU)	16	14	Left side wire harness (see <u>LEFT SIDE WIRE HARNESS (FRONT BRANCH))</u>) Dashboard wire harness A
R (MES connector)	3	2	<ul style="list-style-type: none"> '05 model (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL))</u>) '06-08 models (see <u>DASHBOARD WIRE HARNESS A</u>)

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

			(LEFT BRANCH) ('06-08 MODELS))
			Dashboard wire harness A
S	5	2	<ul style="list-style-type: none"> '05 model (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL)) '06-08 models (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('06-08 MODELS))
Starter cut relay 2	18	4	Dashboard wire harness A
T	7	6	<ul style="list-style-type: none"> '05 model (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL)) '06-08 models (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('06-08 MODELS))
Turn signal/hazard relay	4	6	
W	10	5	Left side wire harness (see LEFT SIDE WIRE HARNESS (FRONT BRANCH))
			Dashboard wire harness A
X	1	39	<ul style="list-style-type: none"> '05 model (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('05 MODEL)) '06-08 models (see DASHBOARD WIRE HARNESS A (LEFT BRANCH) ('06-08 MODELS))

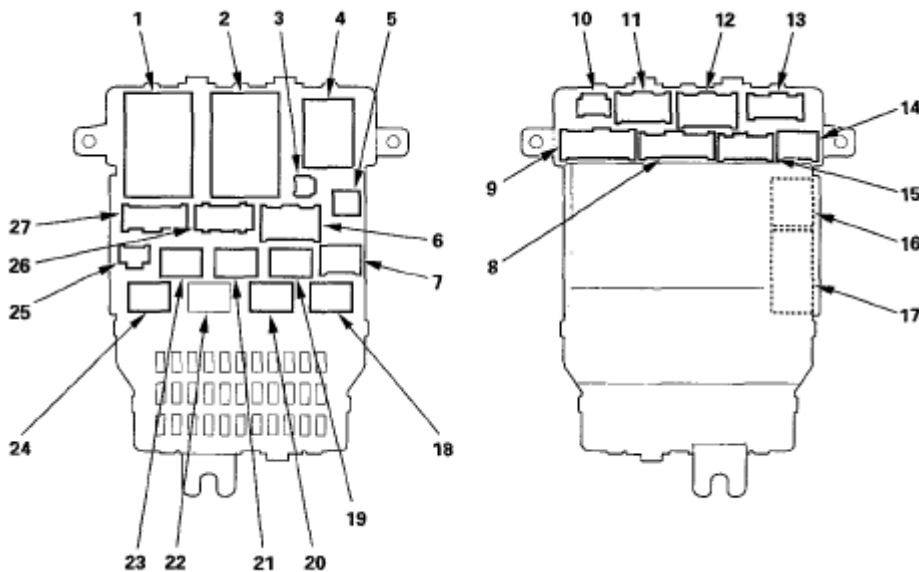


Fig. 3: Identifying Driver's Under-Dash Fuse/Relay Box Terminals
Courtesy of AMERICAN HONDA MOTOR CO., INC.

PASSENGER'S UNDER-DASH FUSE/RELAY BOX

PASSENGER'S UNDER-DASH FUSE/RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
--------	-----	----------	-------------

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

A	1	1	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (RIGHT BRANCH)</u>)
B	2	10	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (RIGHT BRANCH)</u>)
C	9	5	Right side wire harness (see <u>RIGHT SIDE WIRE HARNESS (FRONT BRANCH)</u>)
D	6	17	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (RIGHT BRANCH)</u>)
E	11	14	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (RIGHT BRANCH)</u>)
Fuel fill door open relay	5	4	
F	7	8	Right side wire harness (see <u>RIGHT SIDE WIRE HARNESS (FRONT BRANCH)</u>)
G	8	14	Right side wire harness (see <u>RIGHT SIDE WIRE HARNESS (FRONT BRANCH)</u>)
H	10	3	Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (RIGHT BRANCH)</u>)
J	3	13	Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (RIGHT BRANCH)</u>)
Headlight washer relay ⁽¹⁾	12	4	
Seat heater relay	4	4	
Throttle actuator control relay	13	4	

(1) Canada models

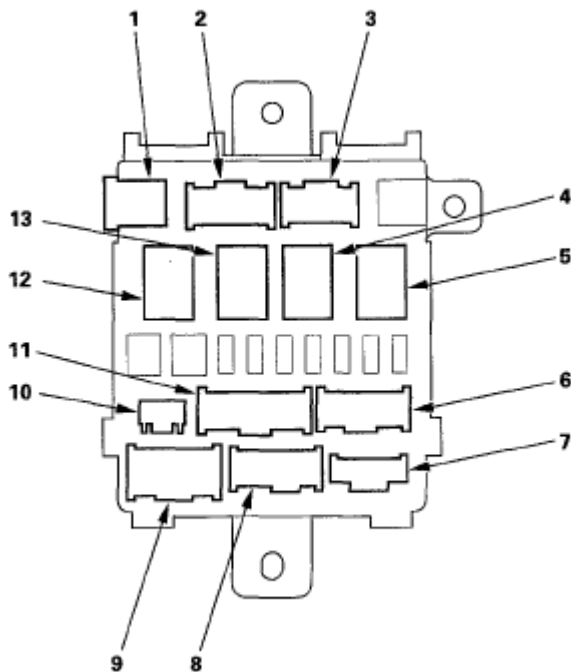


Fig. 4: Identifying Passenger's Under-Dash Fuse/Relay Box Terminals
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2007 Acura RL

2005-08 ELECTRICAL Fuse/Relay Boxes - RL

AUXILIARY UNDER-DASH RELAY HOLDER

AUXILIARY UNDER-DASH RELAY HOLDER REFERENCE

Socket	Ref	Terminal	Connects to
Starter cut relay 1	1	4	Engine compartment wire harness (see ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH))

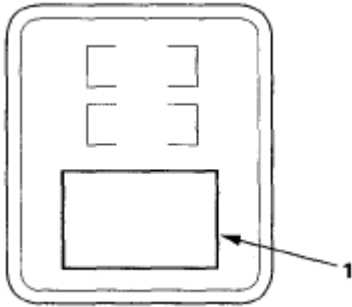


Fig. 5: Identifying Auxiliary Under-Dash Relay Holder Terminals
Courtesy of AMERICAN HONDA MOTOR CO., INC.

AUXILIARY UNDER-DASH RELAY BOX

AUXILIARY UNDER-DASH RELAY BOX REFERENCE

Socket	Ref	Terminal	Connects to
ACC cut relay	3	5	Dashboard wire harness B (see DASHBOARD WIRE HARNESS B ('05 MODEL)) ⁽¹⁾ Dashboard Wire Harness A (See DASHBOARD WIRE HARNESS A (AROUND THE STEERING COLUMN) ('06-08 MODELS)) ⁽²⁾
Ig2 Cut Relay	2	5	Dashboard Wire Harness B (See DASHBOARD WIRE HARNESS B ('05 MODEL)) ⁽¹⁾ Dashboard Wire Harness A (See DASHBOARD WIRE HARNESS A (AROUND THE STEERING COLUMN) ('06-08 MODELS)) ⁽²⁾

(1) '05 Model

(2) '06-08 Models

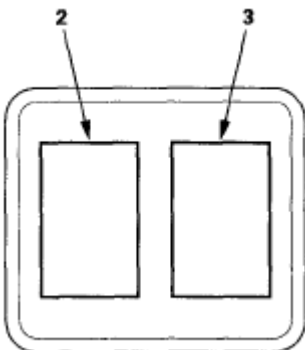


Fig. 6: Identifying Auxiliary Under-Dash Relay Box Terminals
Courtesy of AMERICAN HONDA MOTOR CO., INC.