


2005-08 ACCESSORIES AND EQUIPMENT

Ignition Switch - RL

TEST

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before performing repairs or servicing.

1. Make sure you have the anti-theft codes for the radio system and navigation system (if equipped). Make sure the ignition switch is OFF.
2. Disconnect the negative battery cable.
3. Remove the left front door sill trim and left kick panel (see **TRIM REMOVAL/INSTALLATION - DOOR AREAS**).
4. Disconnect the 6P connector from the driver's under-dash fuse/relay box.

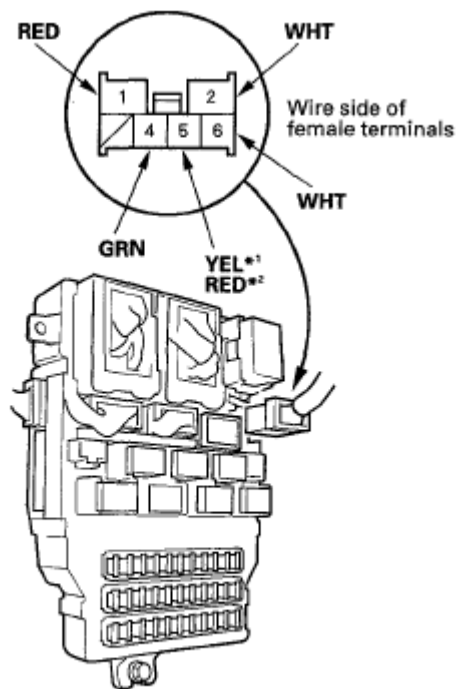

*1: '05 model
*2: '06-08 models

Fig. 1: Identifying Driver's Under-Dash Fuse/Relay Box 6P Connector

5. Check for continuity between the terminals in each switch position according to the table.

2007 Acura RL

2005-08 ACCESSORIES AND EQUIPMENT Ignition Switch - RL

Terminal Position	YEL *1 RED *2 (ACC)	WHT (BAT)	WHT (IG1)	GRN (IG2)	RED (ST)
O (LOCK)					
I (ACC)	○	○			
II (ON)	○	○	○	○	
III (START)		○	○	○	○

*1: '05 model

*2: '06-08 models

Fig. 2: Terminals Continuity Chart

6. If the continuity checks do not agree with the table, replace the steering lock/switch.
7. Connect the negative cable to the battery.
8. Do the steering column position memorization (see **STEERING COLUMN POSITION MEMORIZATION**).
9. Enter the anti-theft codes for audio system and navigation system (if equipped), and set the clock.