

2005-08 ACCESSORIES AND EQUIPMENT

Seat Heaters - RL

COMPONENT LOCATION INDEX

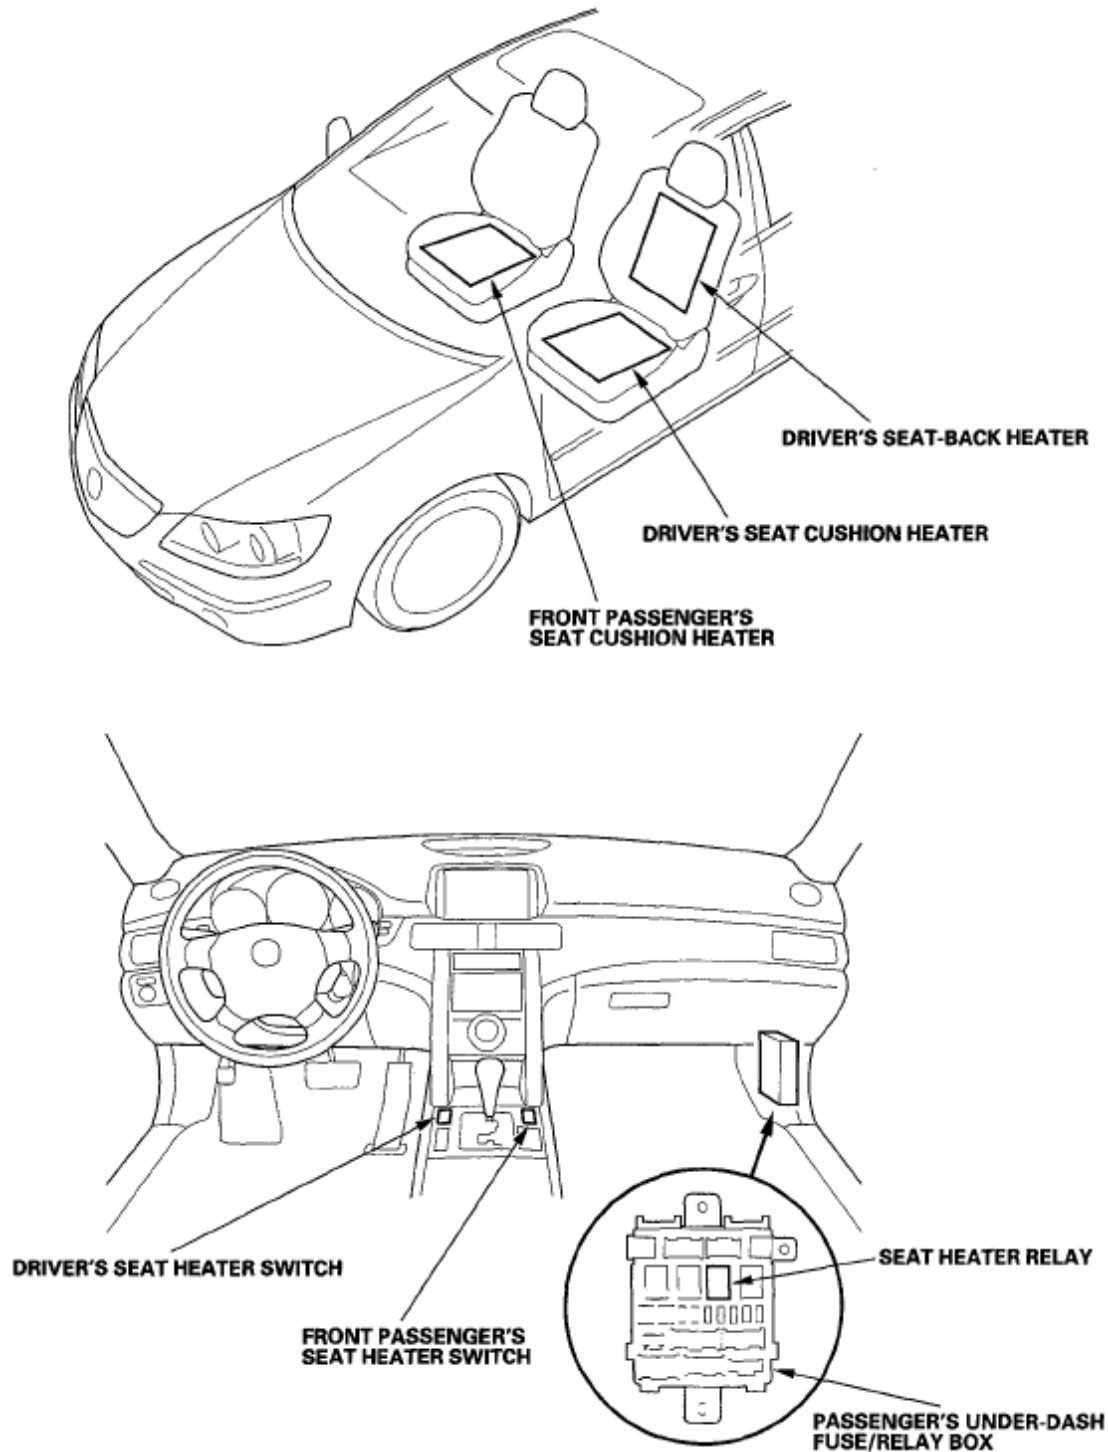
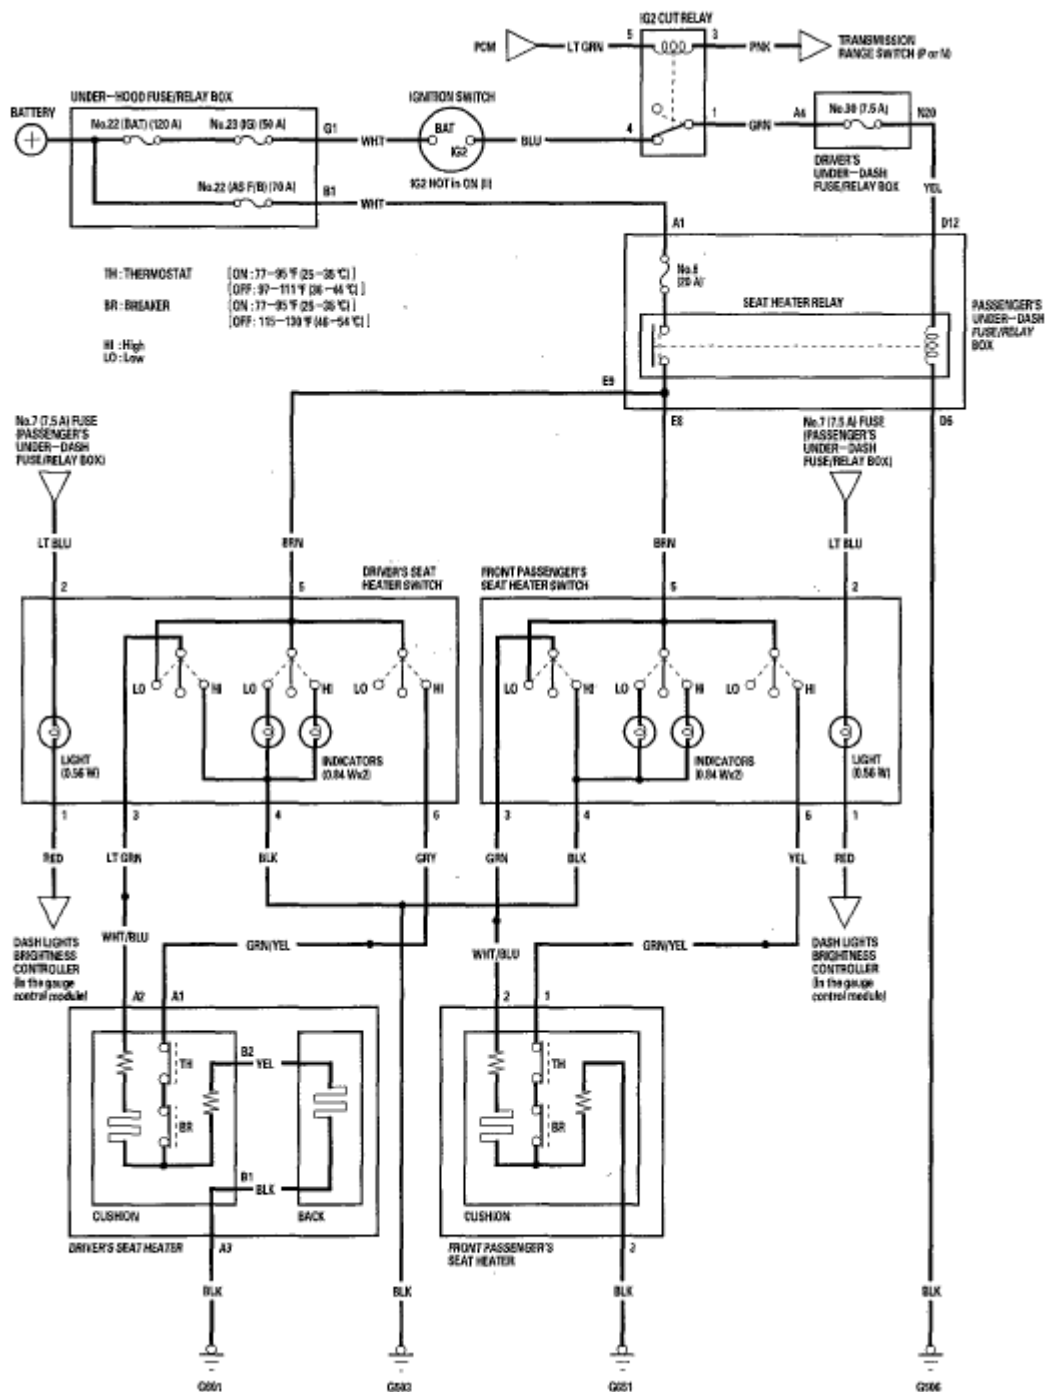


Fig. 1: Identifying Seat Heaters Component Location
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CIRCUIT DIAGRAM

**Fig. 2: Seat Heaters - Circuit Diagram**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

SEAT HEATER TEST

DRIVER'S SEAT

1. Remove the driver's seat (see **FRONT SEAT REMOVAL/INSTALLATION**).

2. Disconnect the 4P connector (A) and 2P connector (B) from the seat heater.

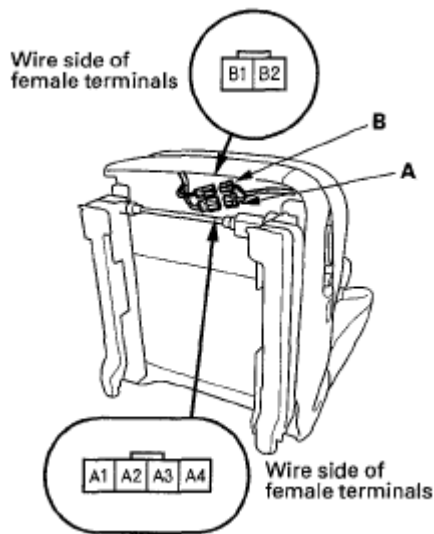


Fig. 3: Identifying Driver's Side Seat Heater 4P And 2P Connector
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Seat-back

3. Check for continuity between the B1 and B2 terminals of the seat-back heater 2P connector. There should be continuity.

Seat Cushion

4. Check for continuity between the A3 and B1 terminals, the A1 and B2 terminals, and the A2 and B2 terminals. There should be continuity.
5. If the continuity is not as specified, replace the appropriate seat heater.

FRONT PASSENGER'S SEAT

1. Remove the passenger's seat (see **FRONT SEAT REMOVAL/INSTALLATION**).
2. Disconnect the 4P connector (A) from the seat heater.

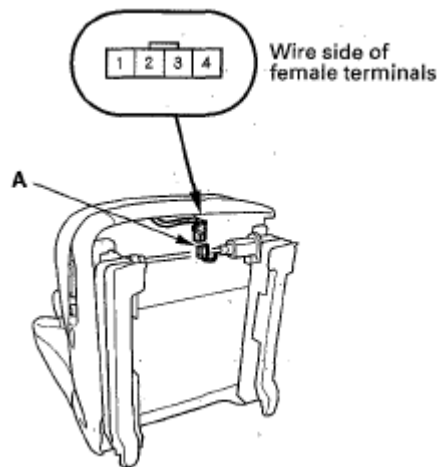


Fig. 4: Identifying Front Passenger's Seat Heater And 4P Connector
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the No. 1 and No. 2 terminals, and No. 1 and No. 3 terminals of the 4P connector. There should be continuity.
4. If the continuity is not as specified, replace the seat heater.

SWITCH TEST/REPLACEMENT

1. Remove the center console panel (see **CENTER CONSOLE REMOVAL/INSTALLATION**).
2. Disconnect the 6P connector from the seat heater switch (A).

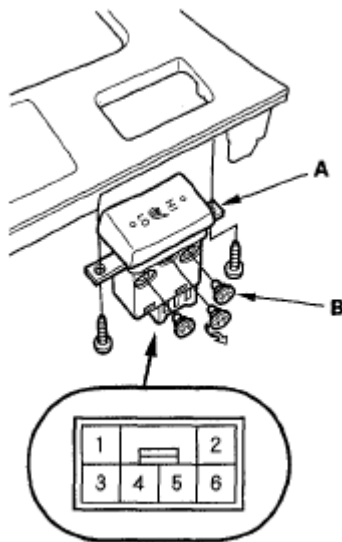


Fig. 5: Identifying Seat Heater Switch And 6P Connector
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the two screws and the switch.
4. Check for continuity between the terminals in each switch position (see **Fig. 6**).

2007 Acura RL

2005-08 ACCESSORIES AND EQUIPMENT Seat Heaters - RL

Terminal Position		1	2	3	4	5	6
ON	HIGH	○	○	○	○	○	○
	LOW	○	○	○	○	○	○
OFF		○	○	○			

Fig. 6: Checking For Continuity Between Terminals In Each Switch Position
Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. If the continuity is not as specified, replace the illumination bulbs (B) or the switch.