

AIR CONDITIONING

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

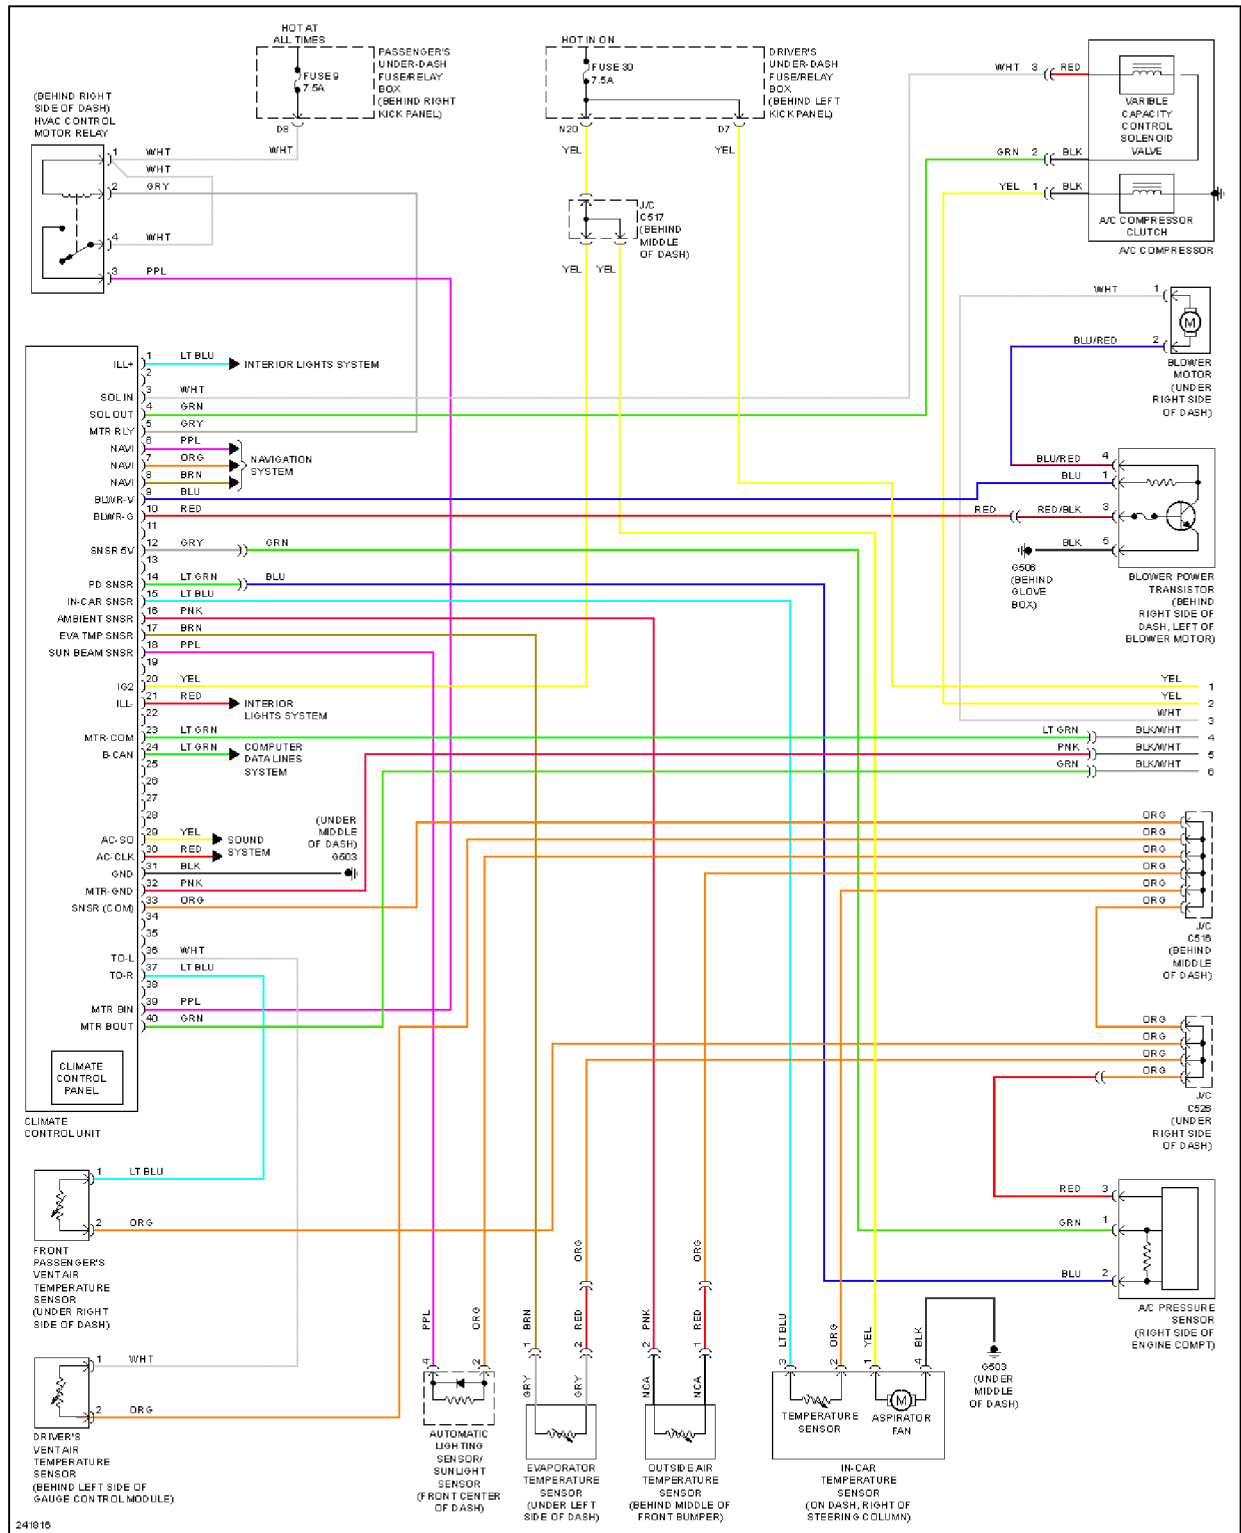


Fig. 1: Automatic A/C Circuit (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

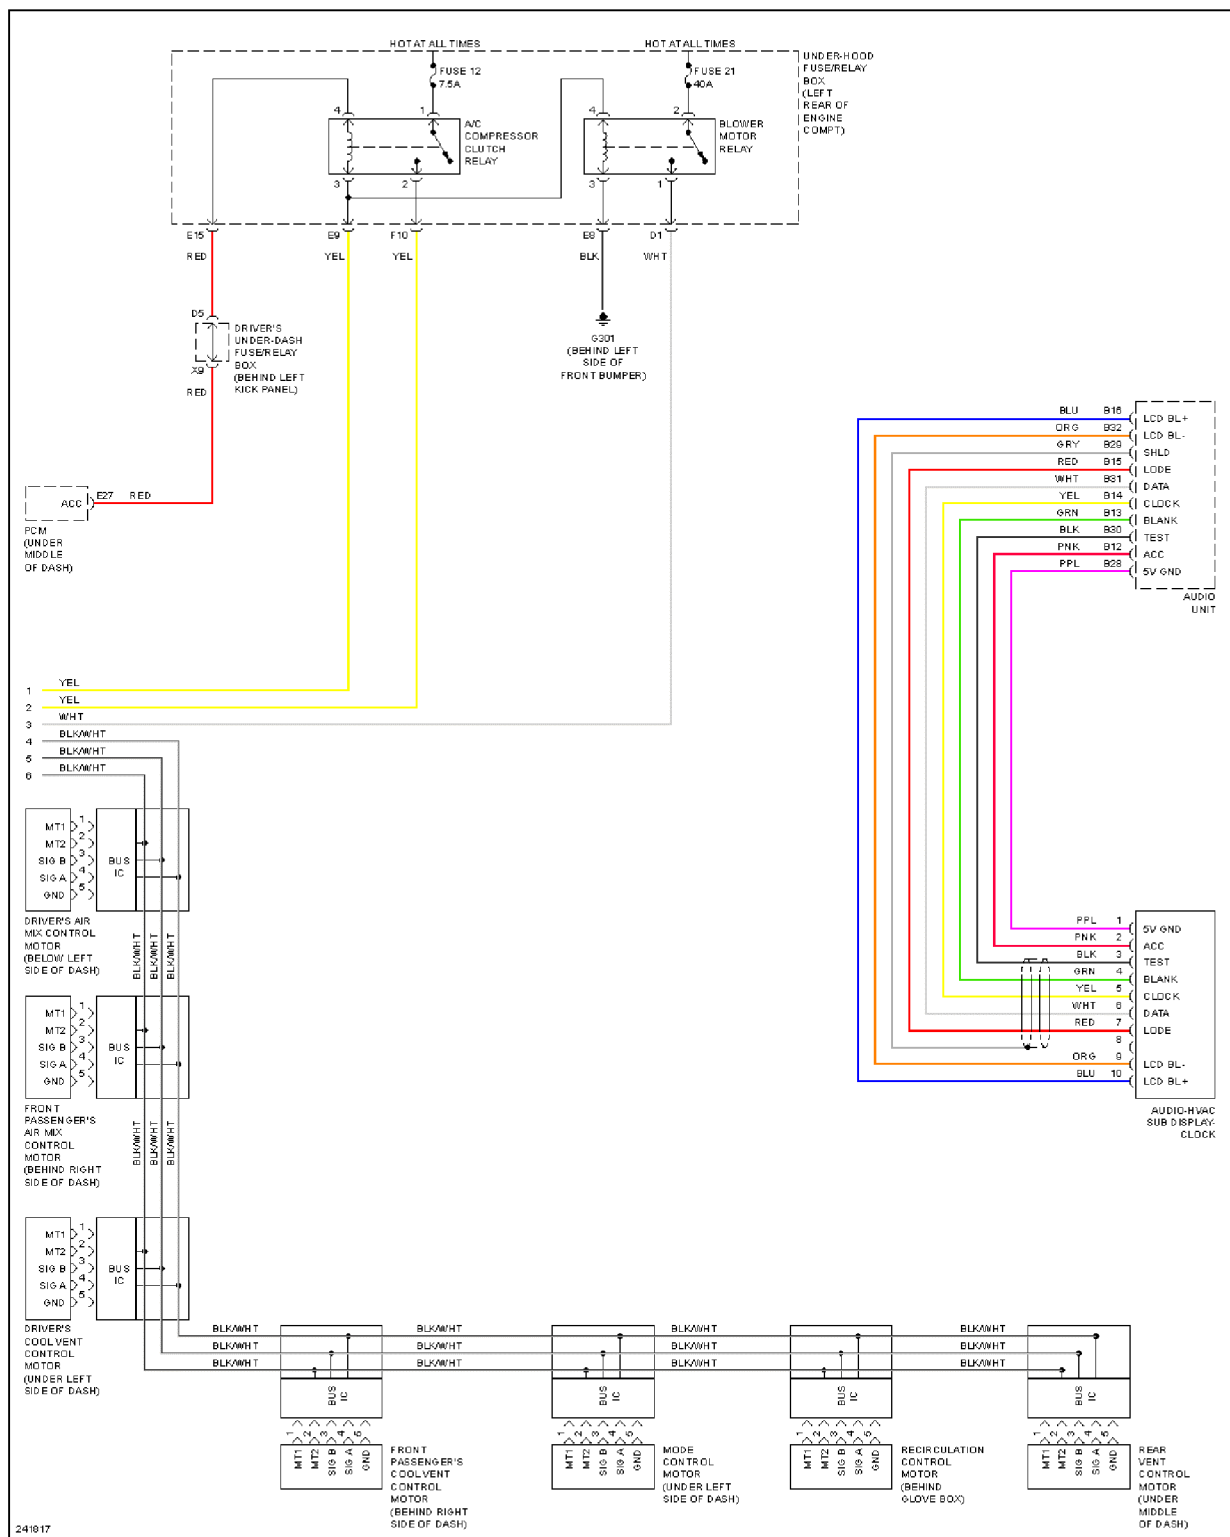


Fig. 2: Automatic A/C Circuit (2 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

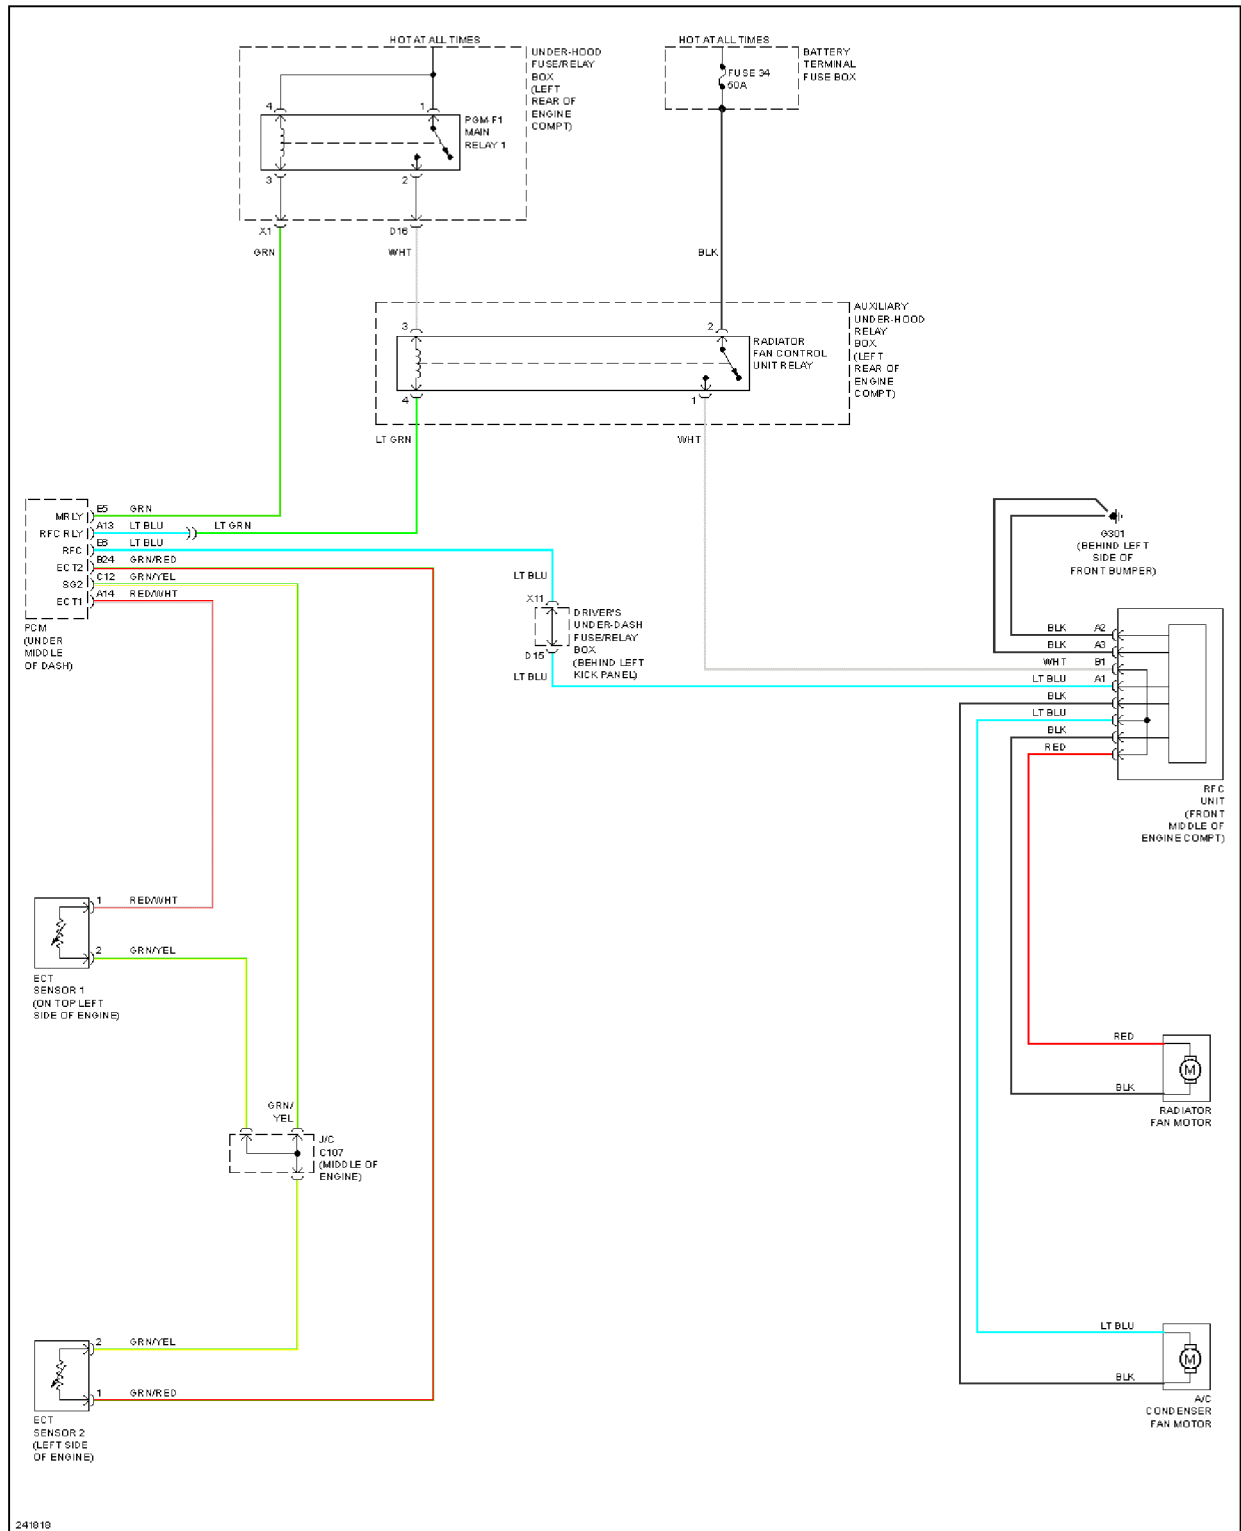


Fig. 3: Automatic A/C Circuit (3 of 3)

ANTI-LOCK BRAKES

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 4: Anti-lock Brakes Circuit (1 of 2)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

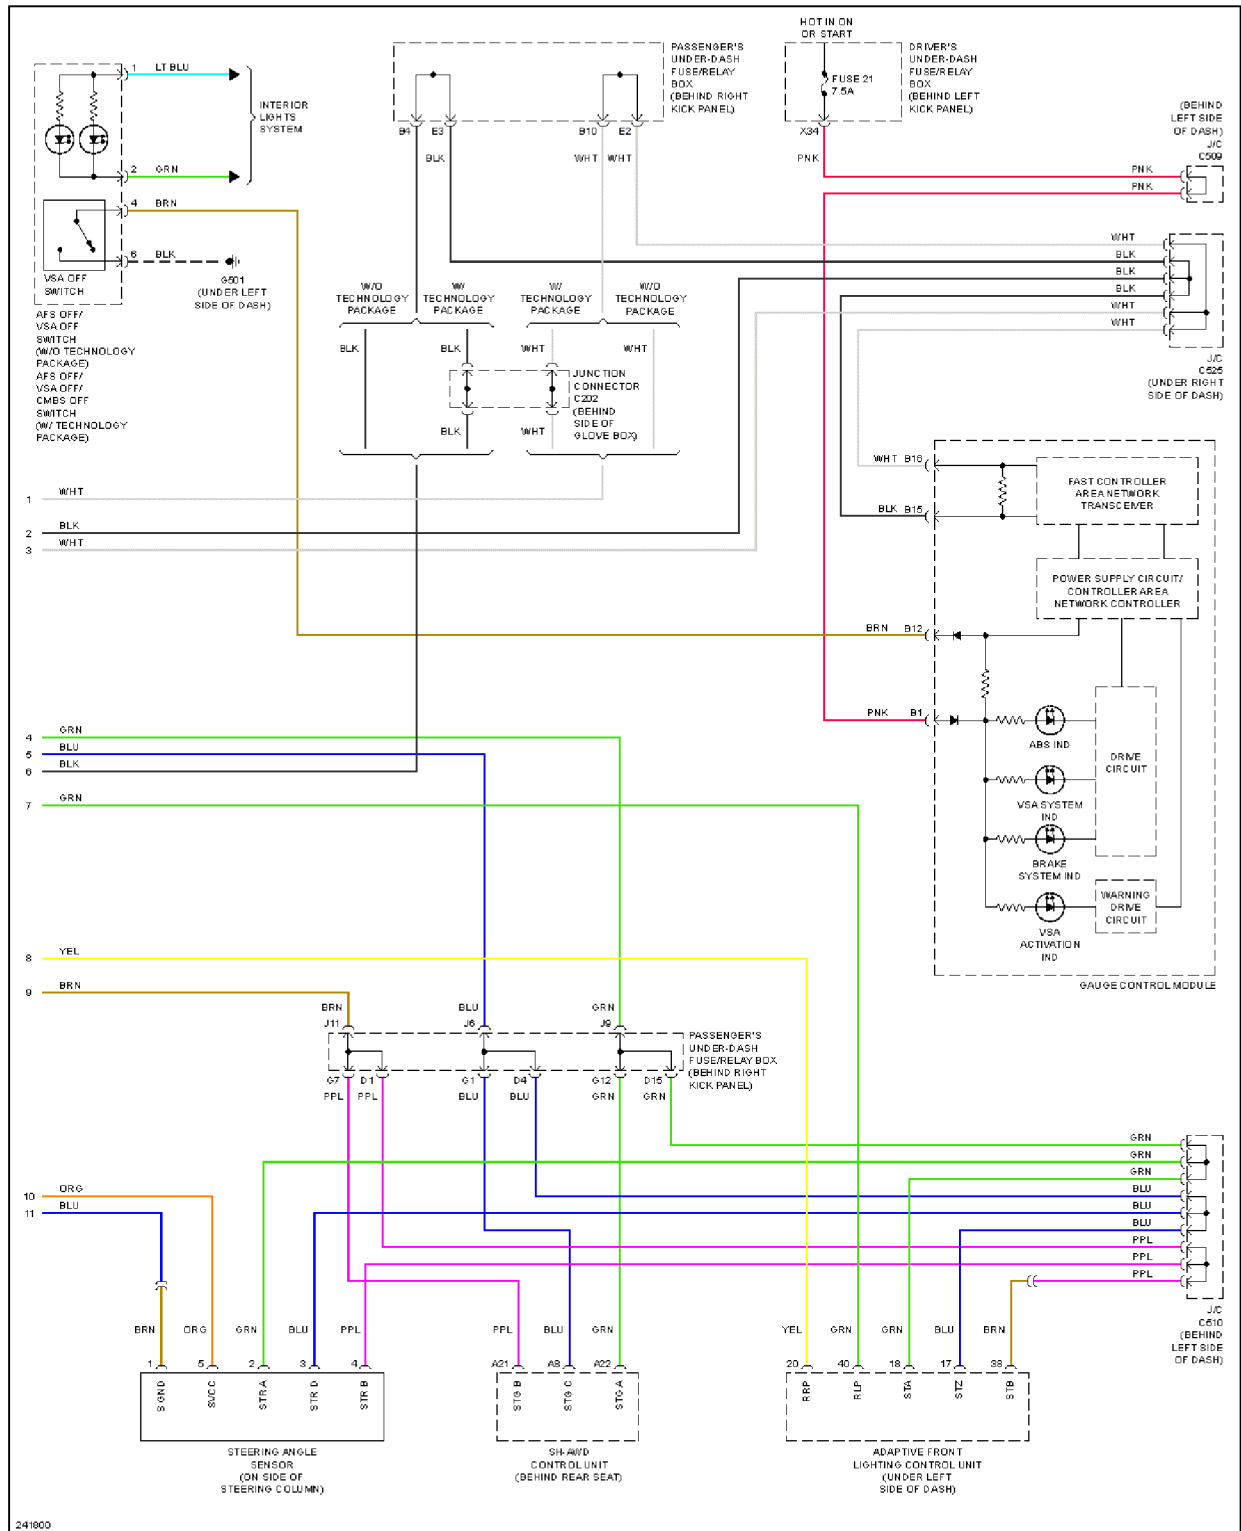


Fig. 5: Anti-lock Brakes Circuit (2 of 2)

ANTI-THEFT

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 6: Anti-theft Circuit (1 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 7: Anti-theft Circuit (2 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 8: Anti-theft Circuit (3 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

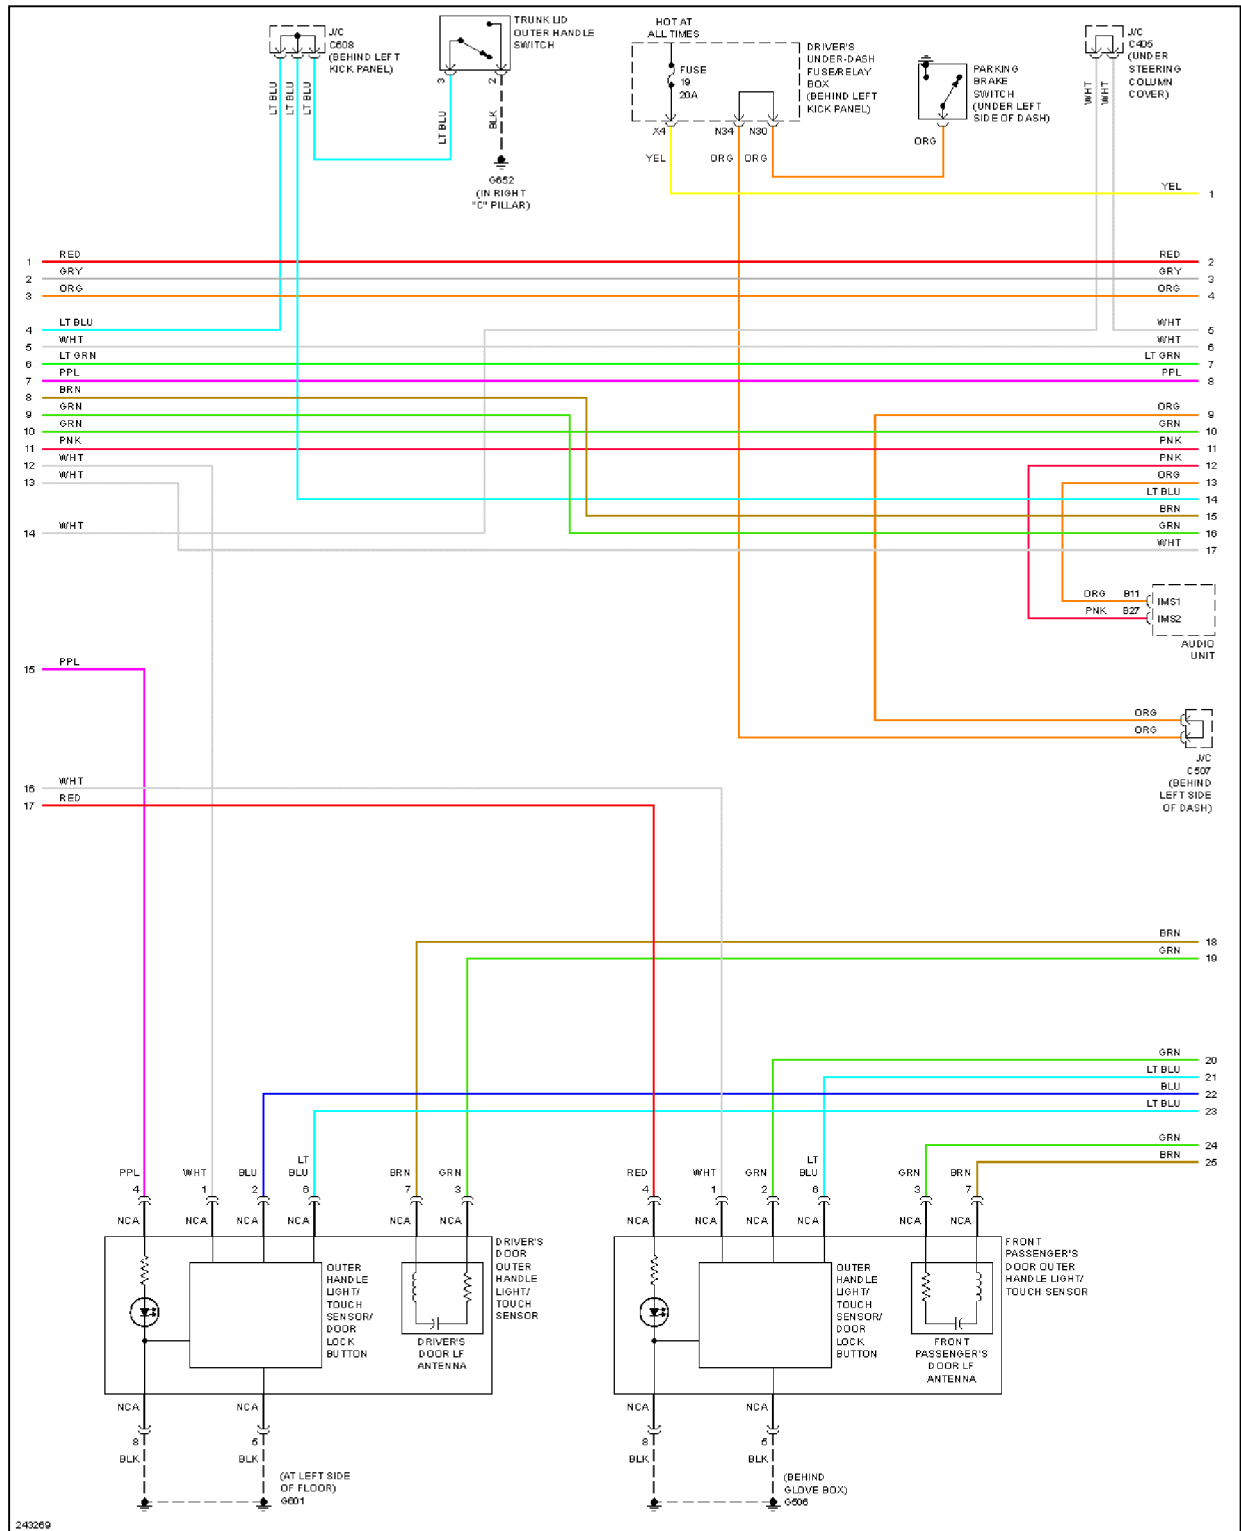


Fig. 9: Anti-theft Circuit (4 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

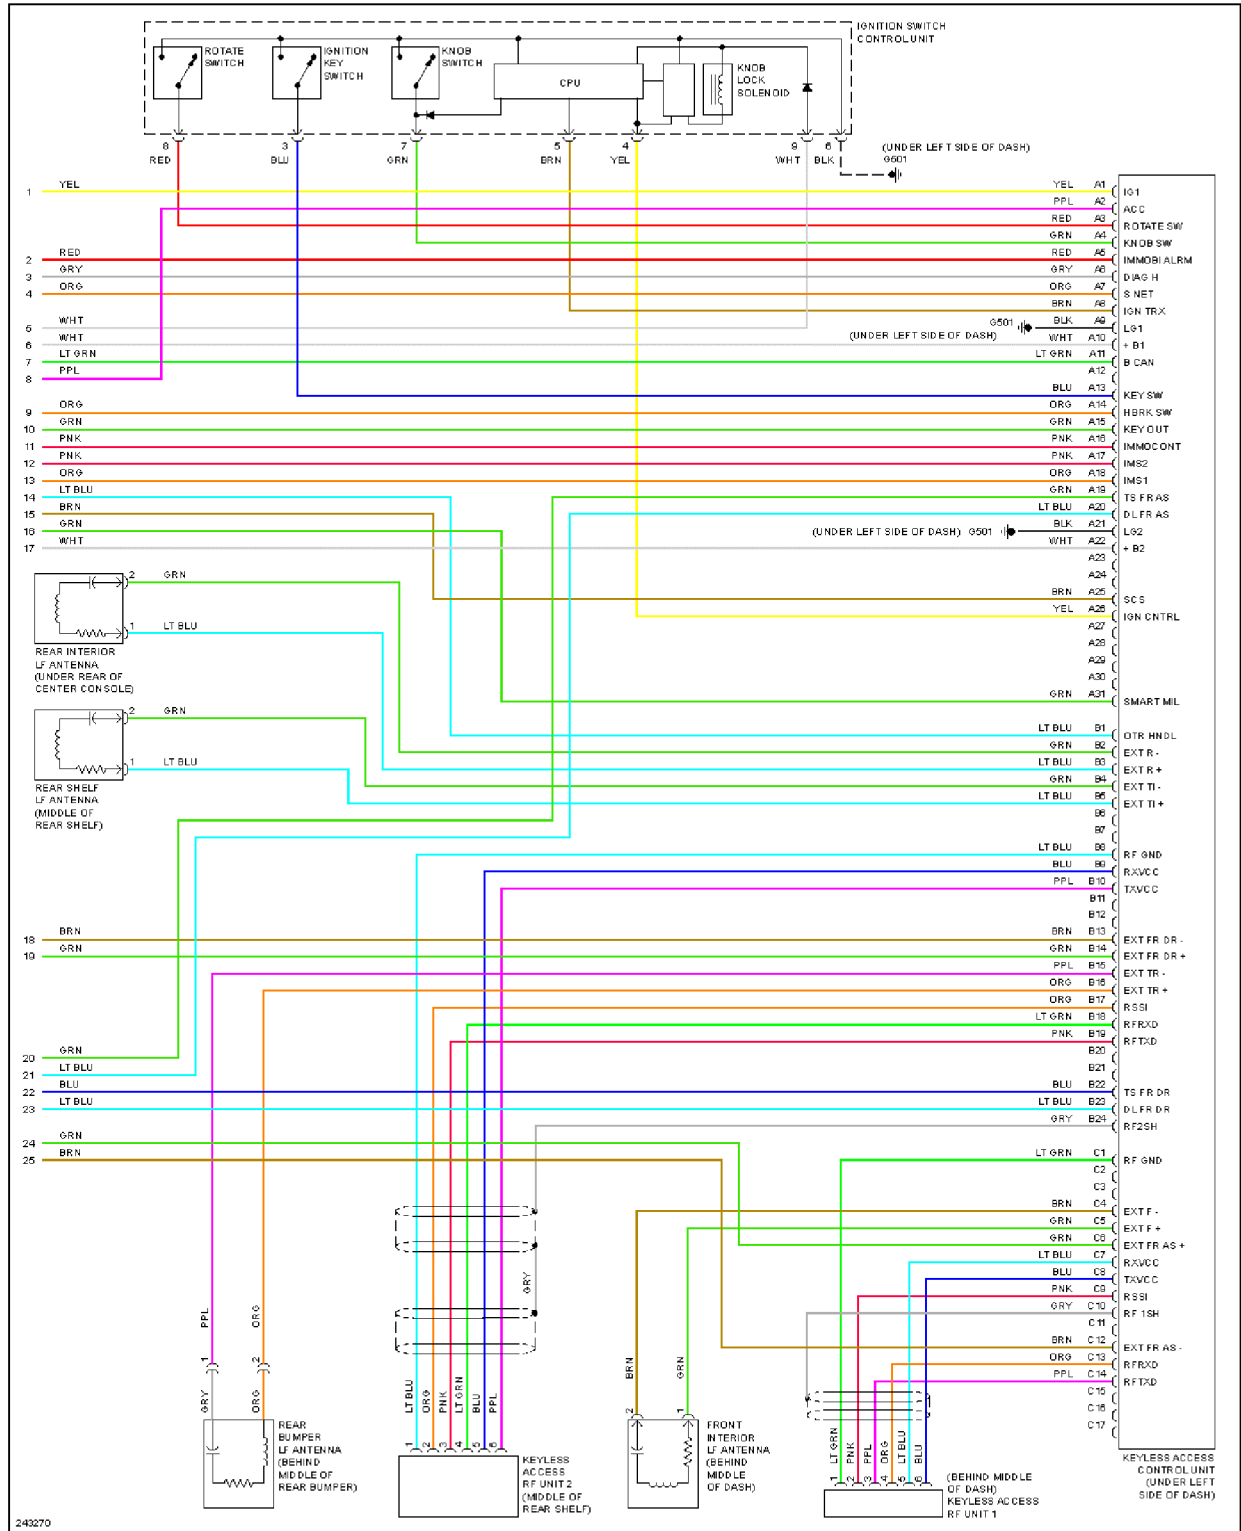


Fig. 10: Anti-theft Circuit (5 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

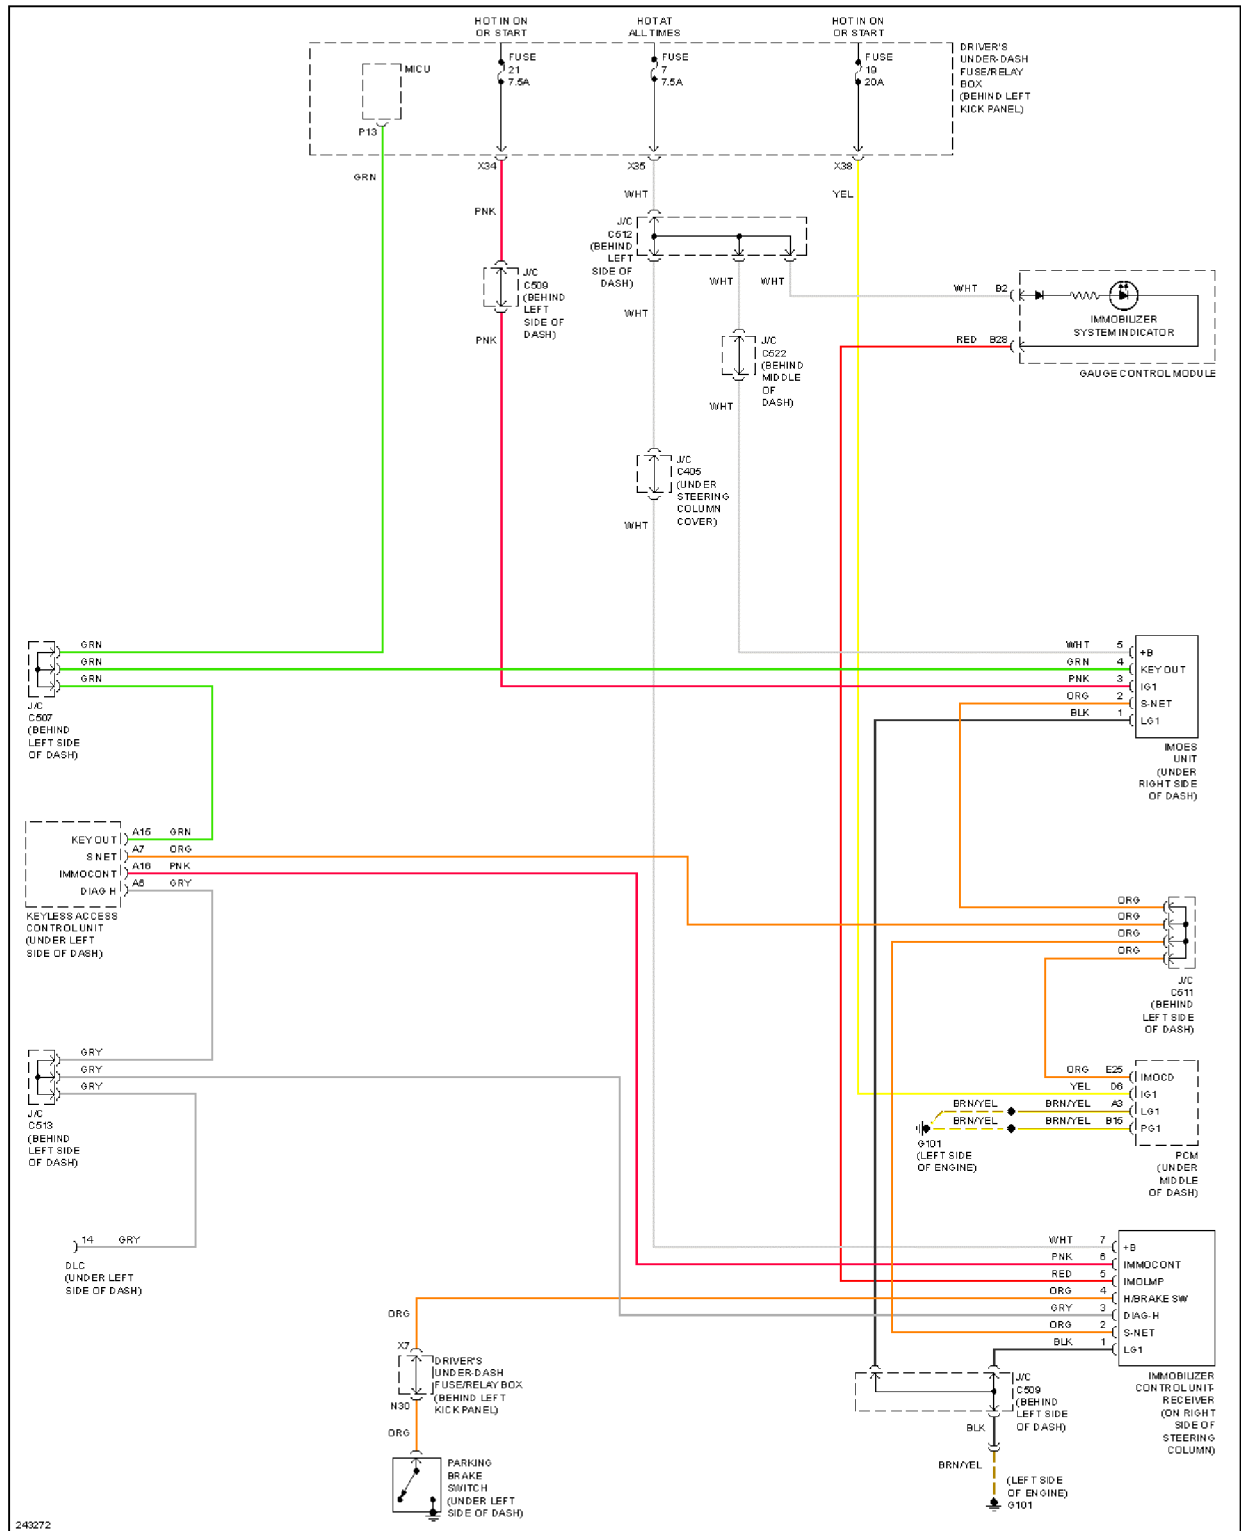


Fig. 11: Immobilizer Circuit

BODY CONTROL MODULES

2006 SYSTEM WIRING DIAGRAMS Acura - RL



COMPUTER DATA LINES

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

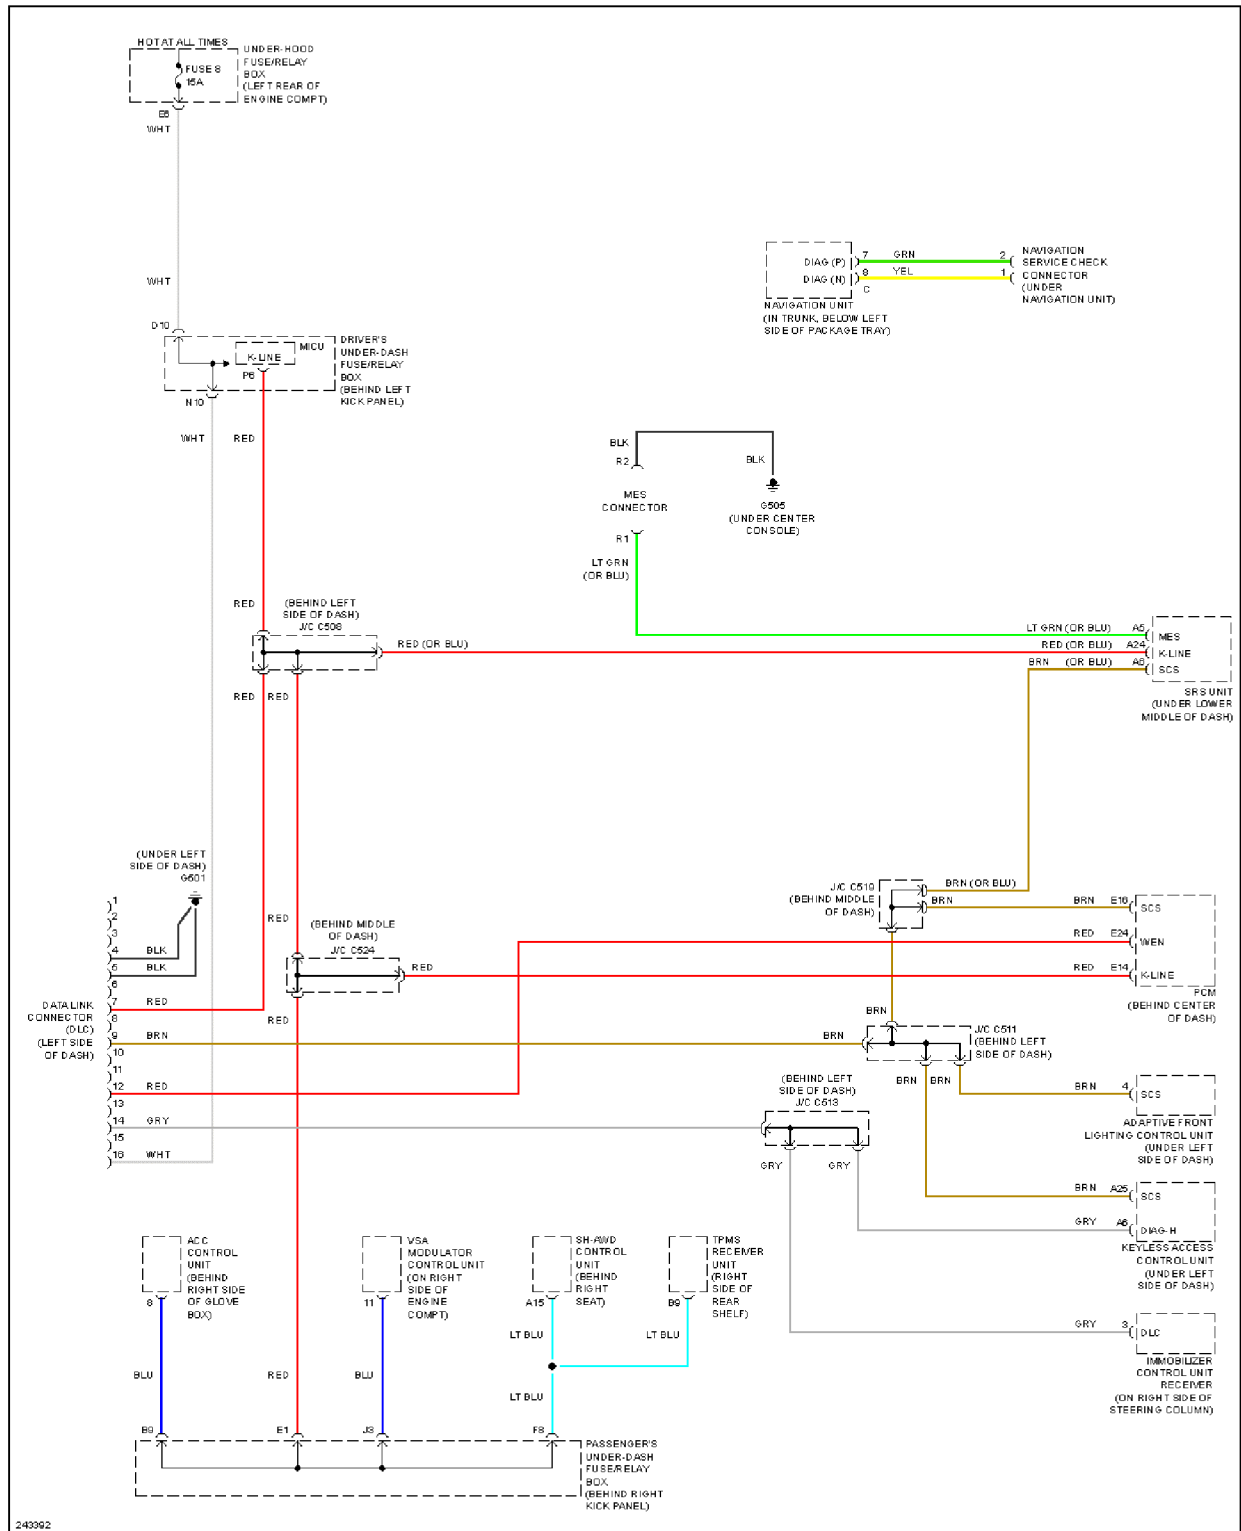


Fig. 13: Data Link Connector Circuit

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

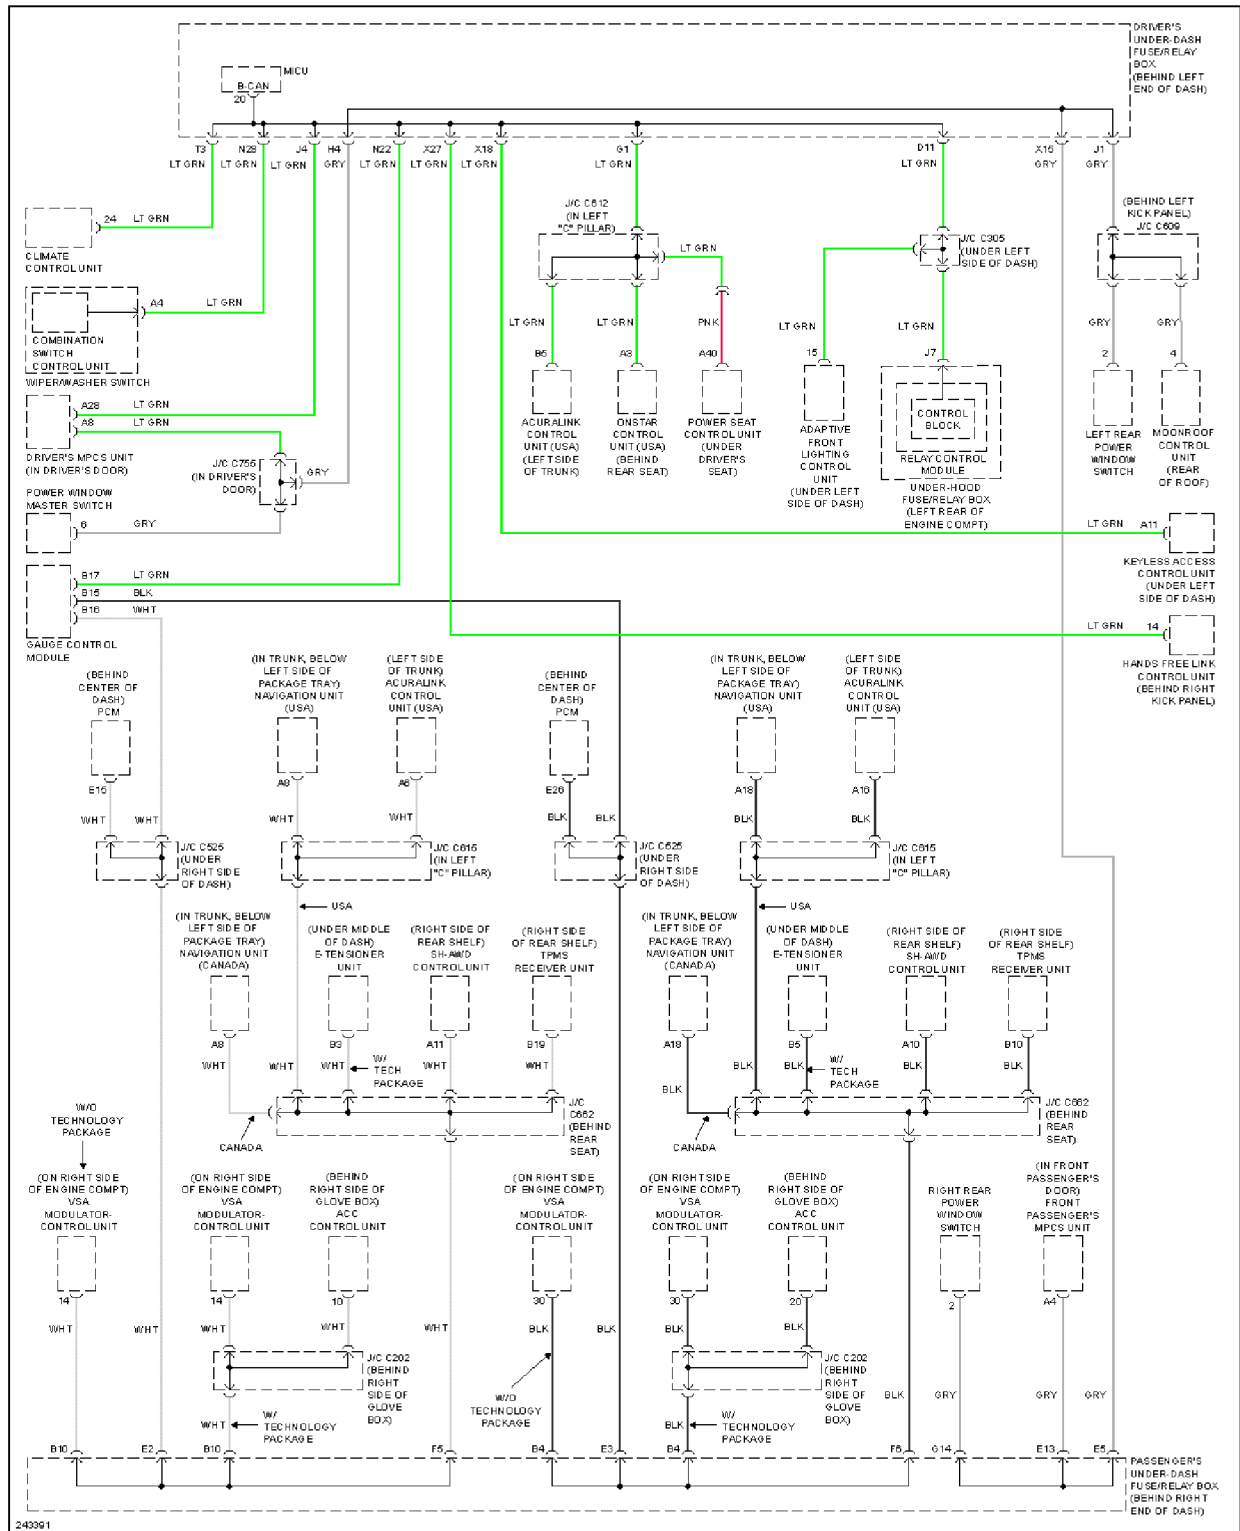


Fig. 14: High/Low Bus Circuit

COOLING FAN

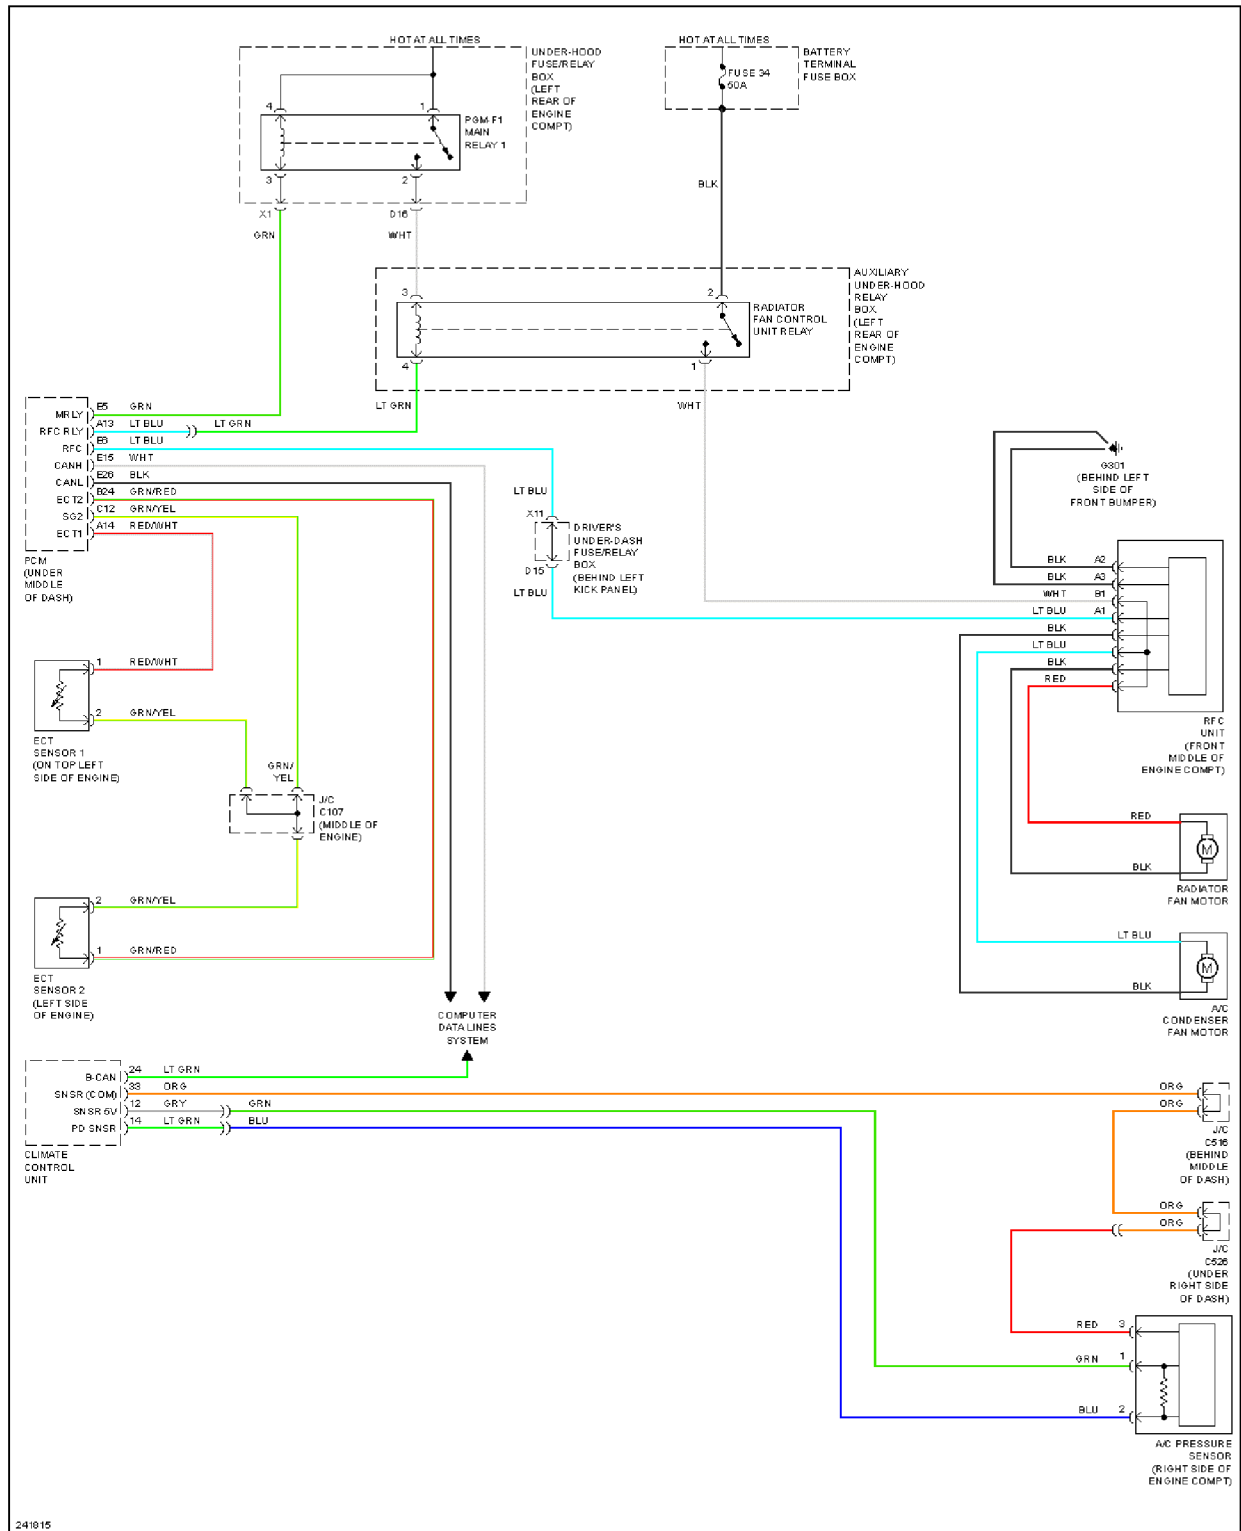


Fig. 15: Cooling Fan Circuit

CRUISE CONTROL

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

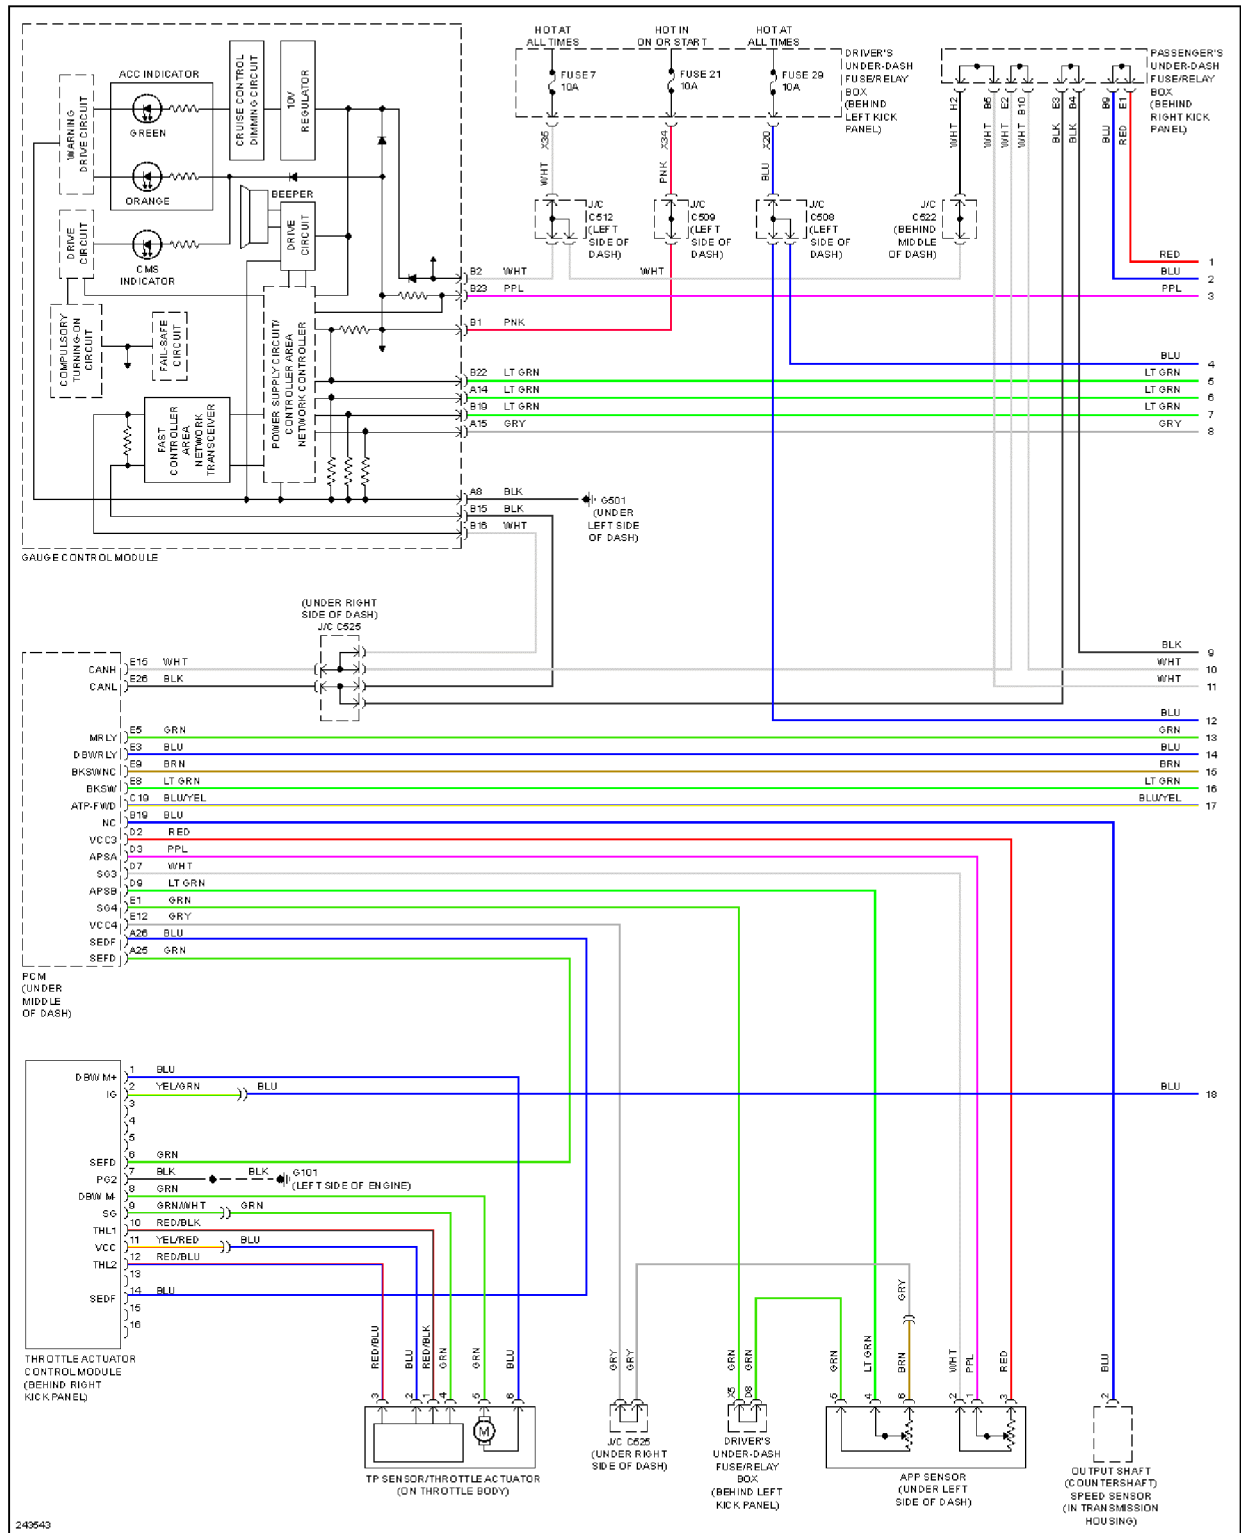


Fig. 16: Cruise Control Circuit, W/ Technology Package (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

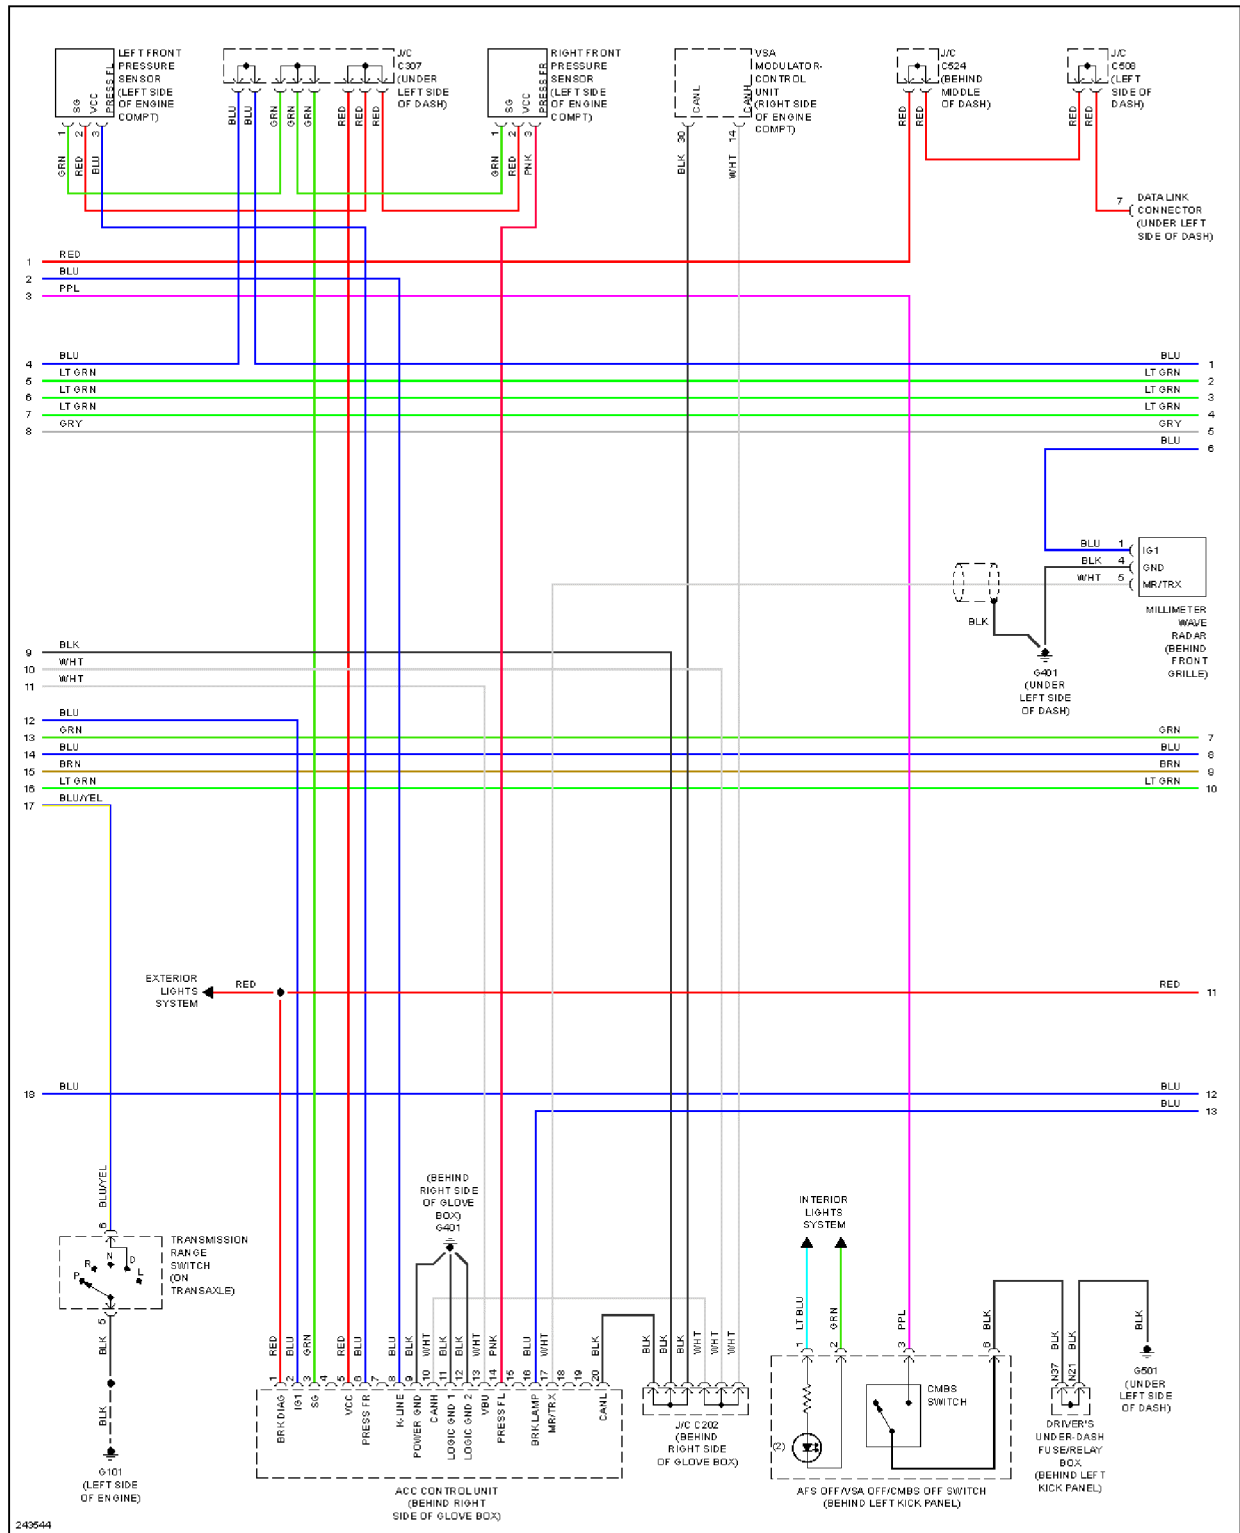


Fig. 17: Cruise Control Circuit, W/ Technology Package (2 of 3)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

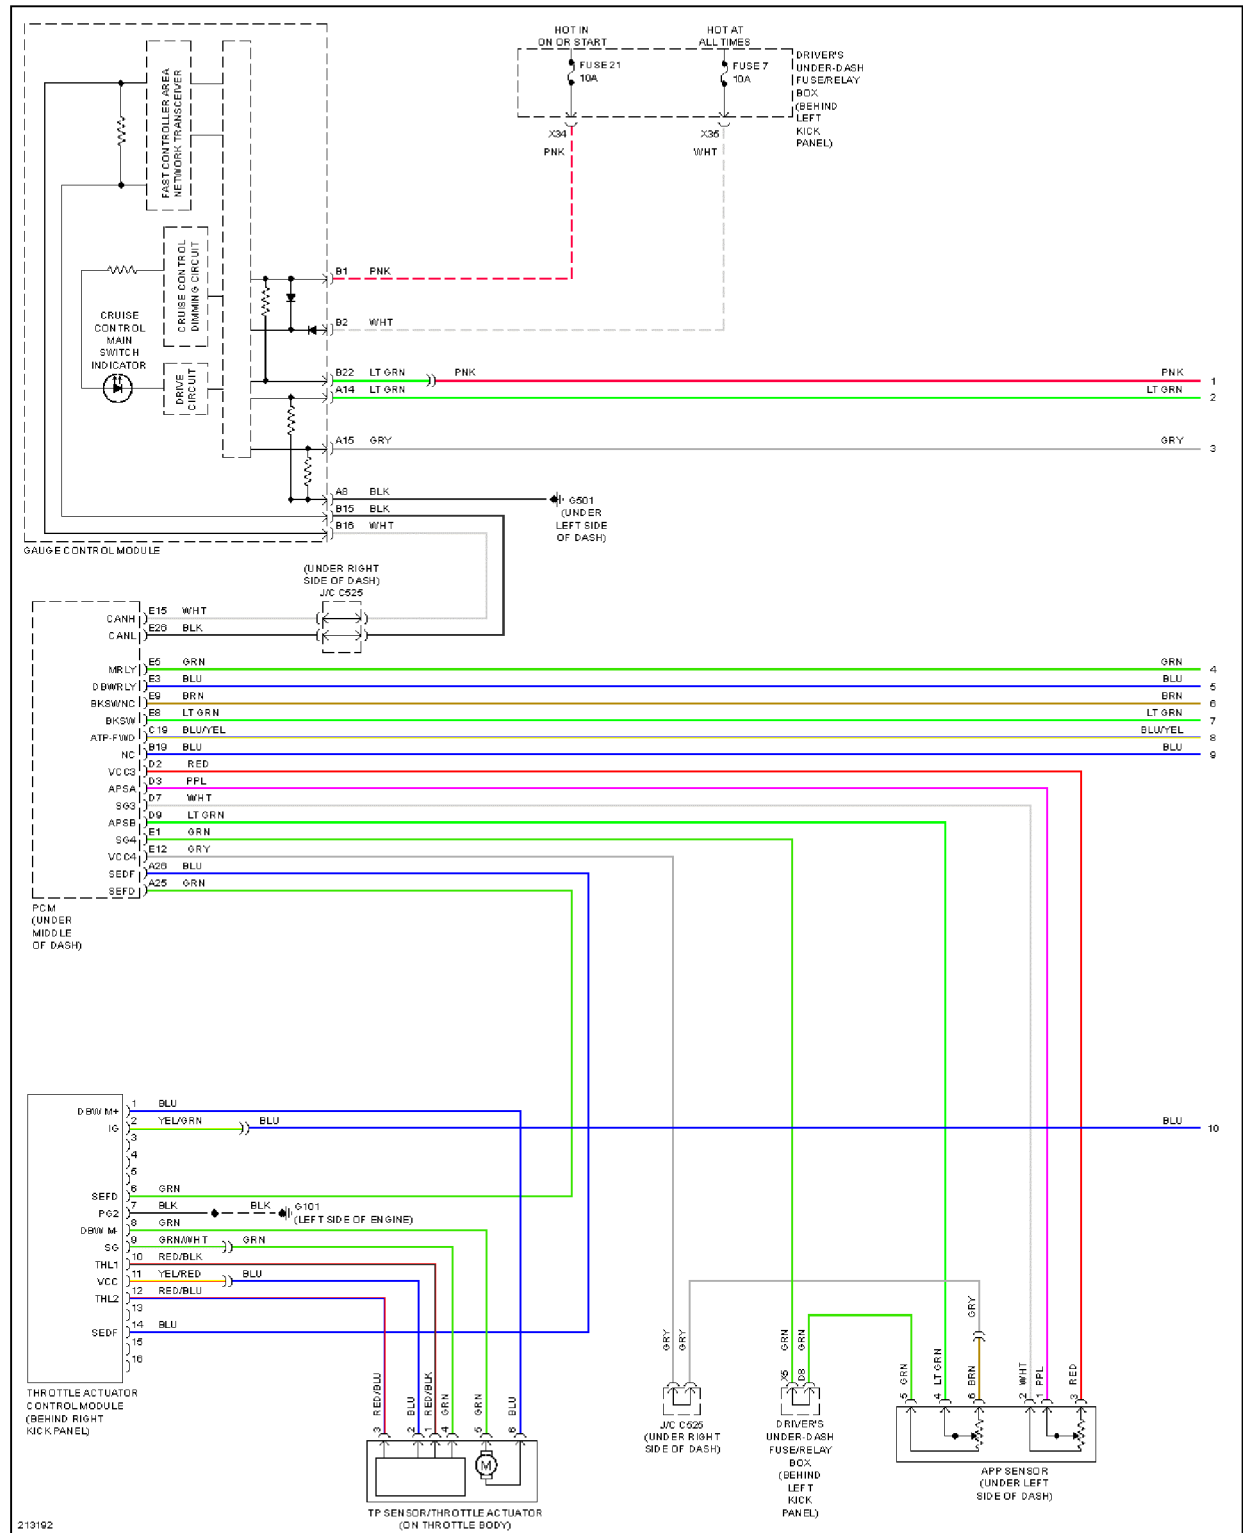


Fig. 19: Cruise Control Circuit, W/O Technology Package (1 of 2)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

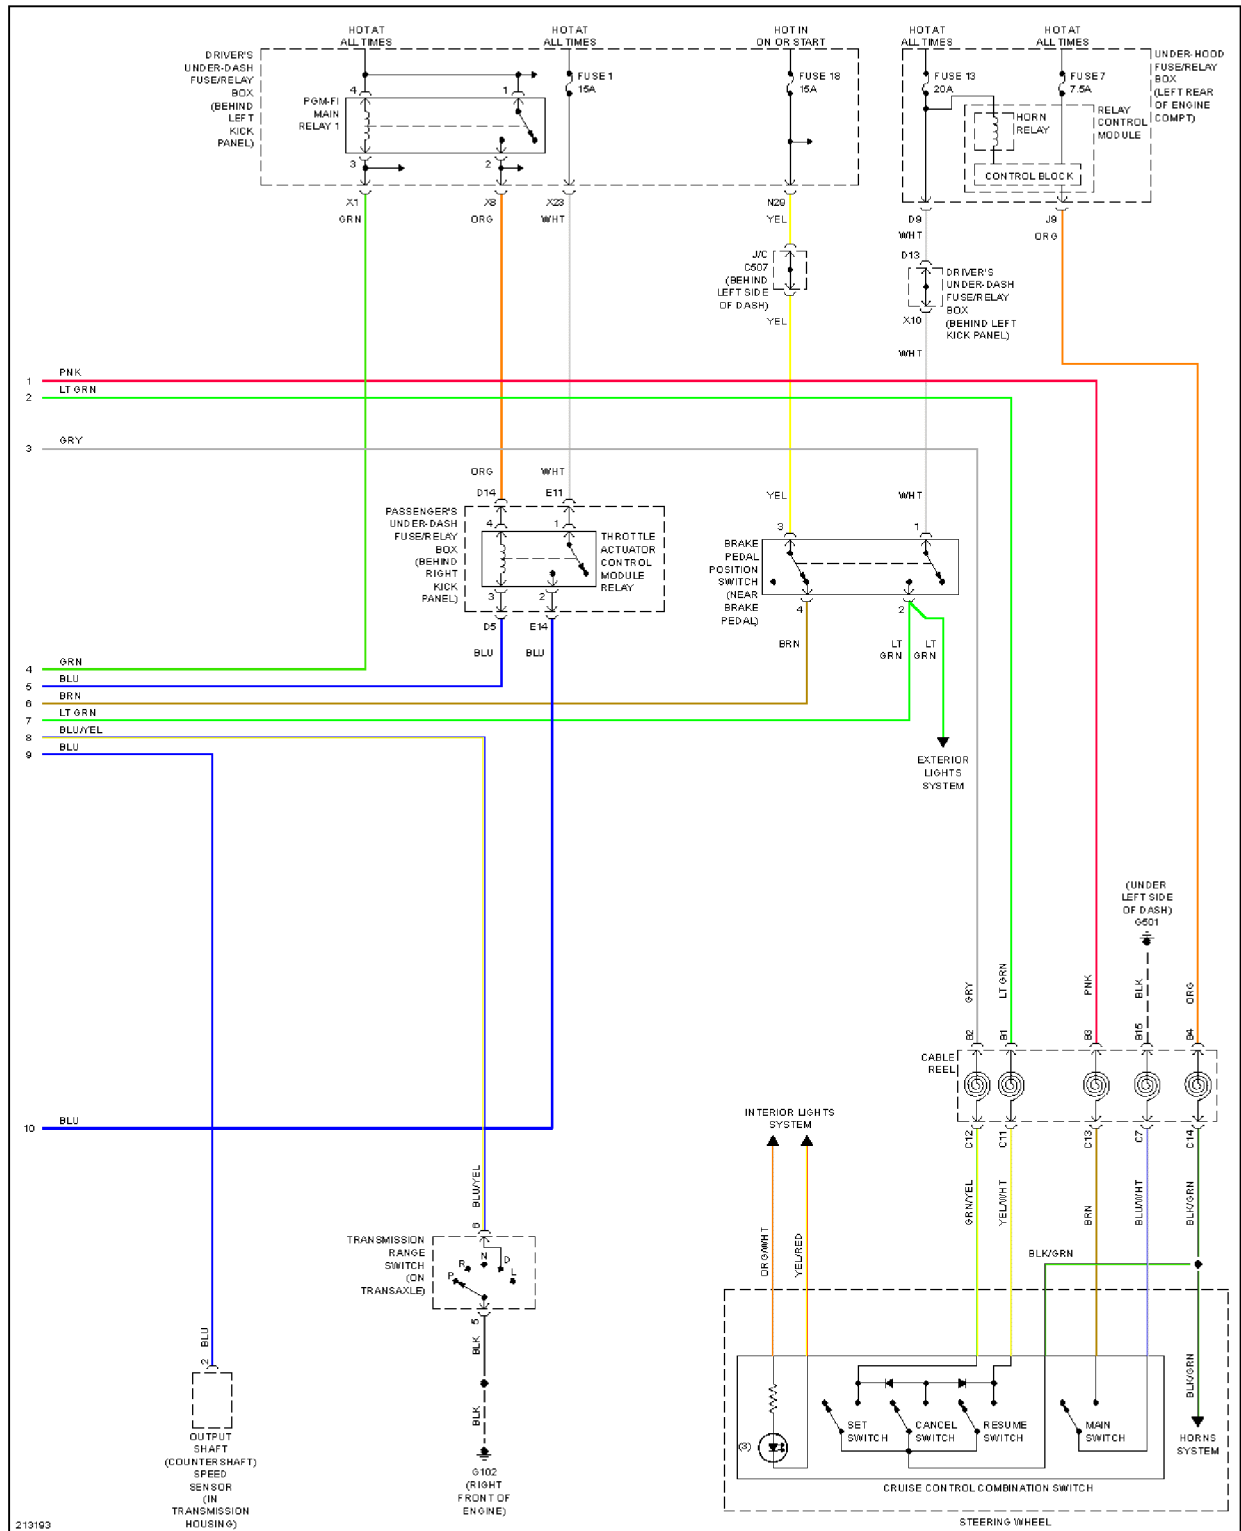


Fig. 20: Cruise Control Circuit, W/O Technology Package (2 of 2)

DEFOGGERS

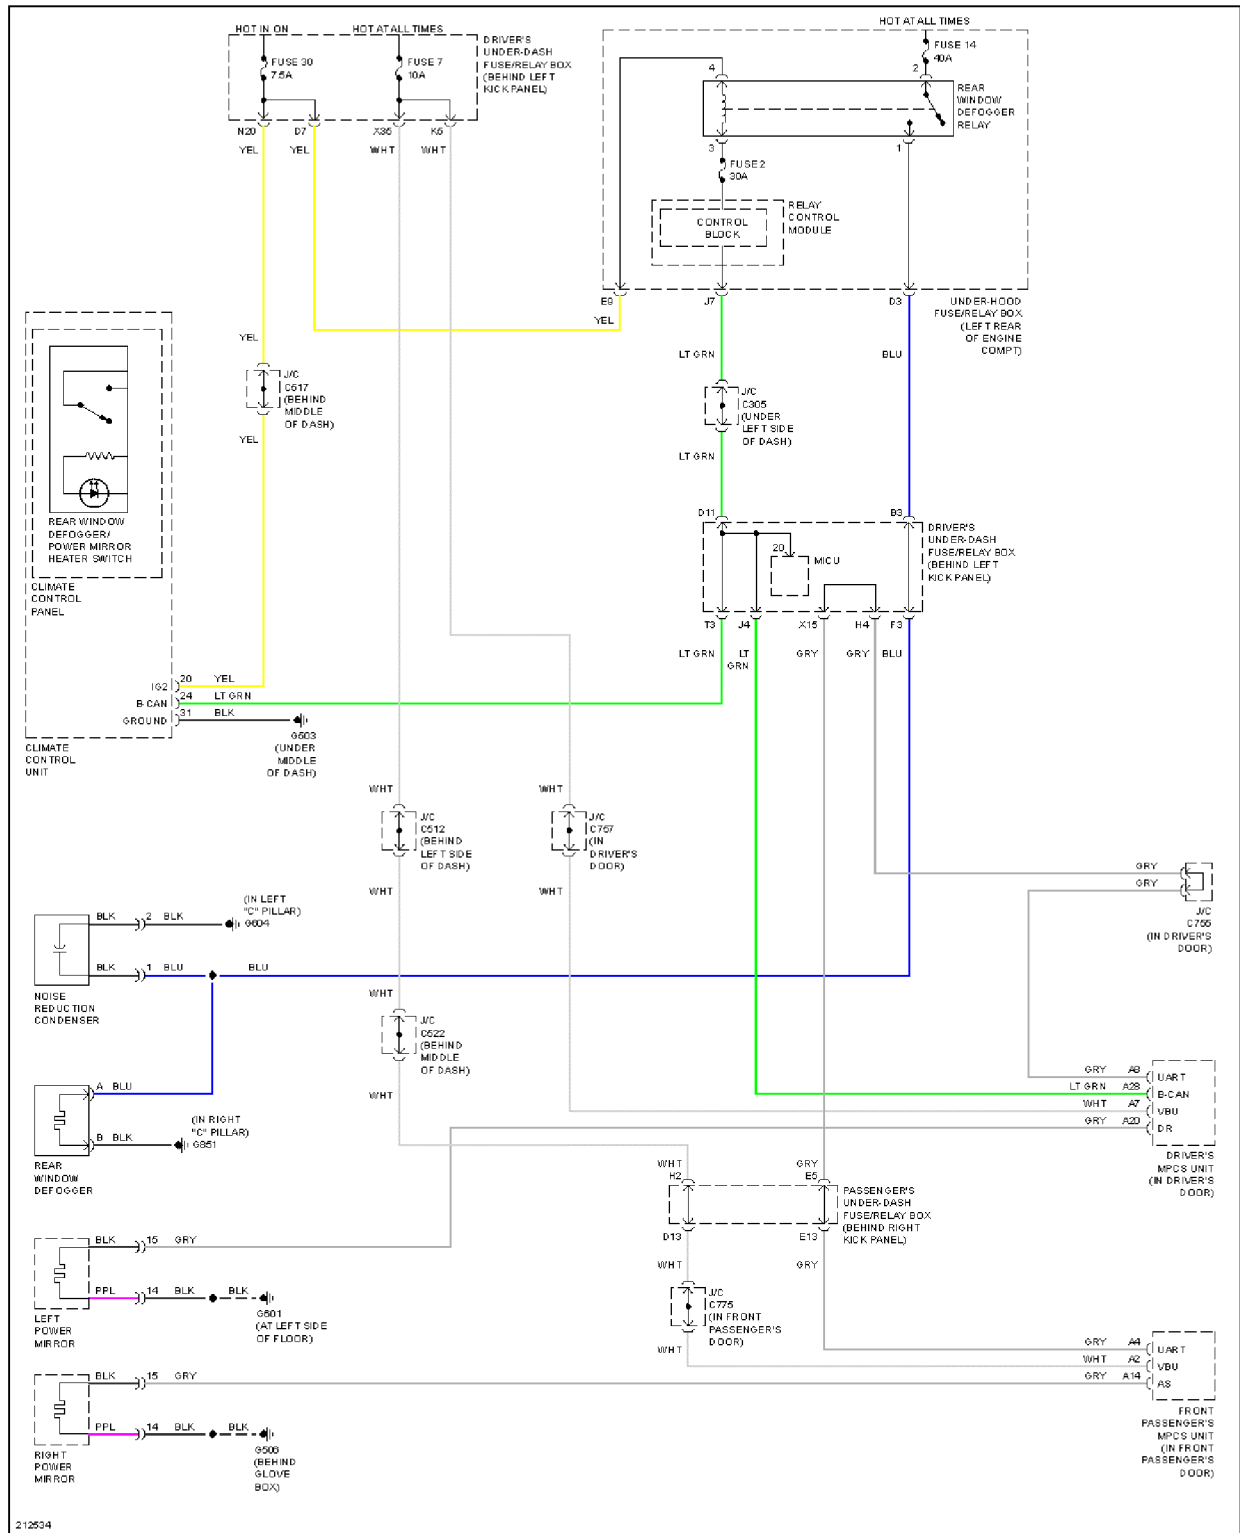


Fig. 21: Defoggers Circuit

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

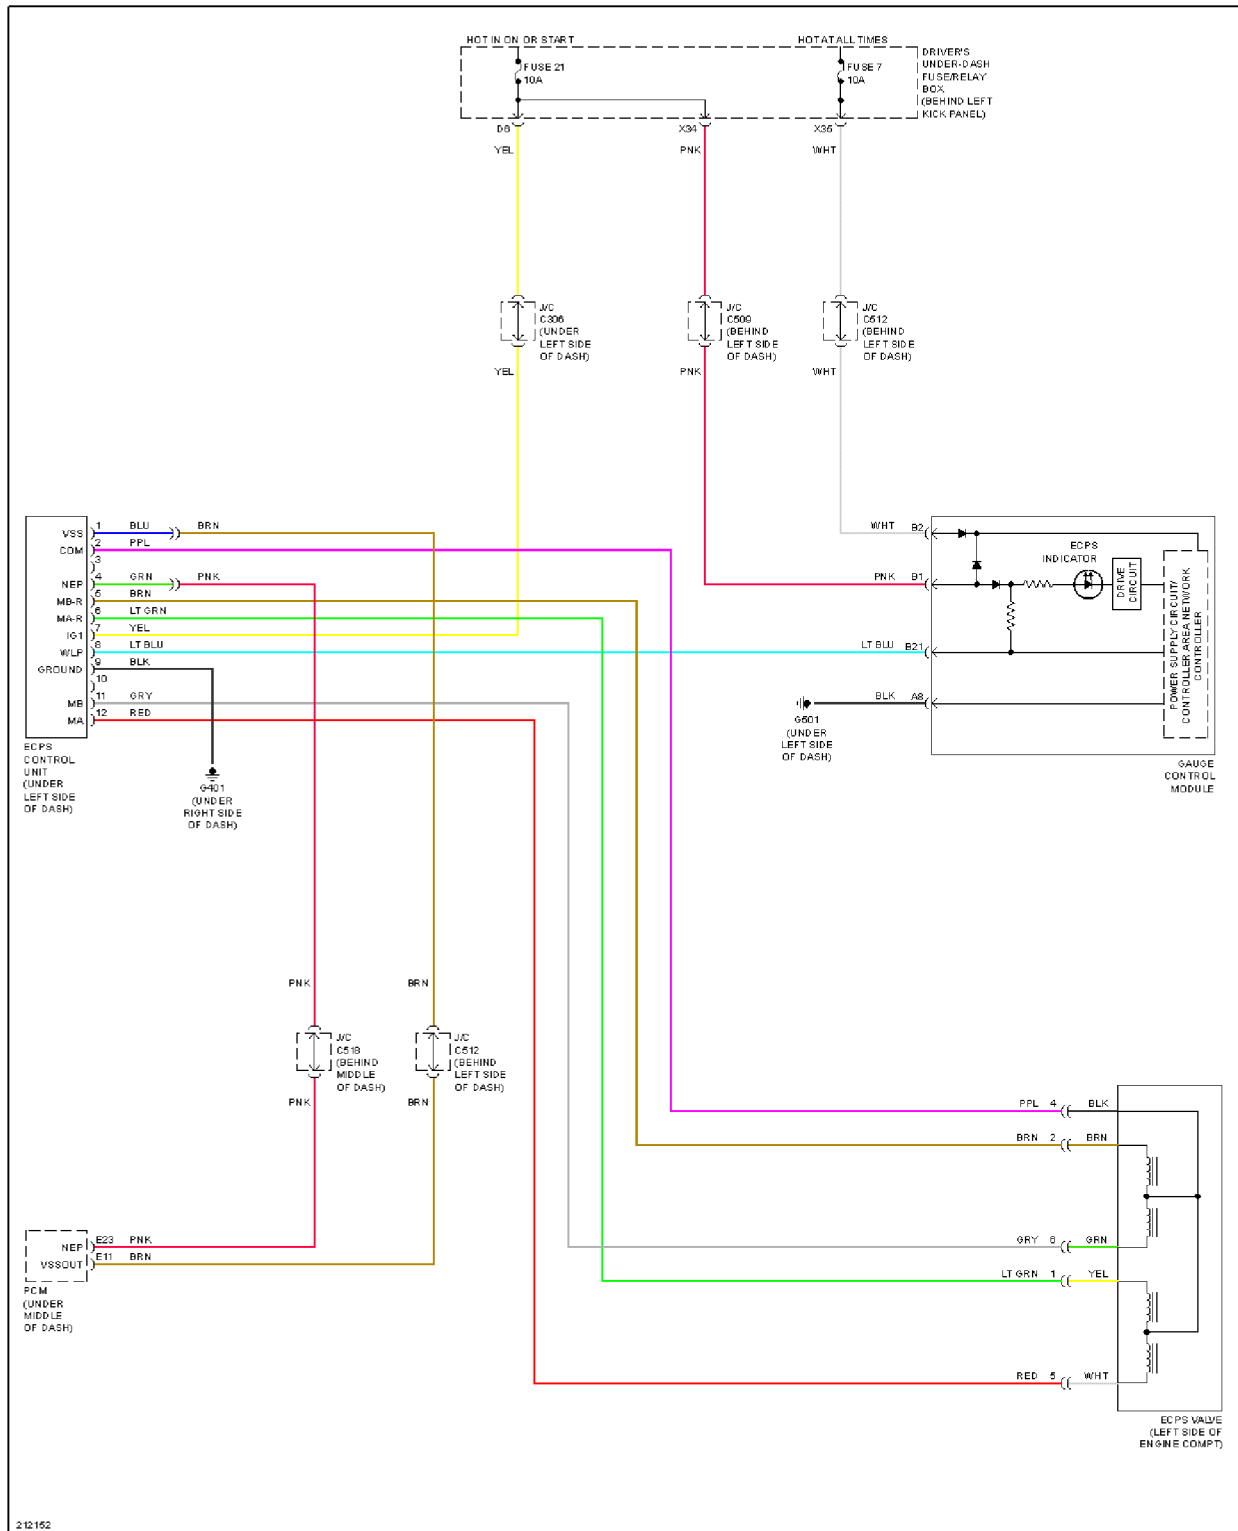


Fig. 22: Electronic Power Steering Circuit

ENGINE PERFORMANCE

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

3.5L

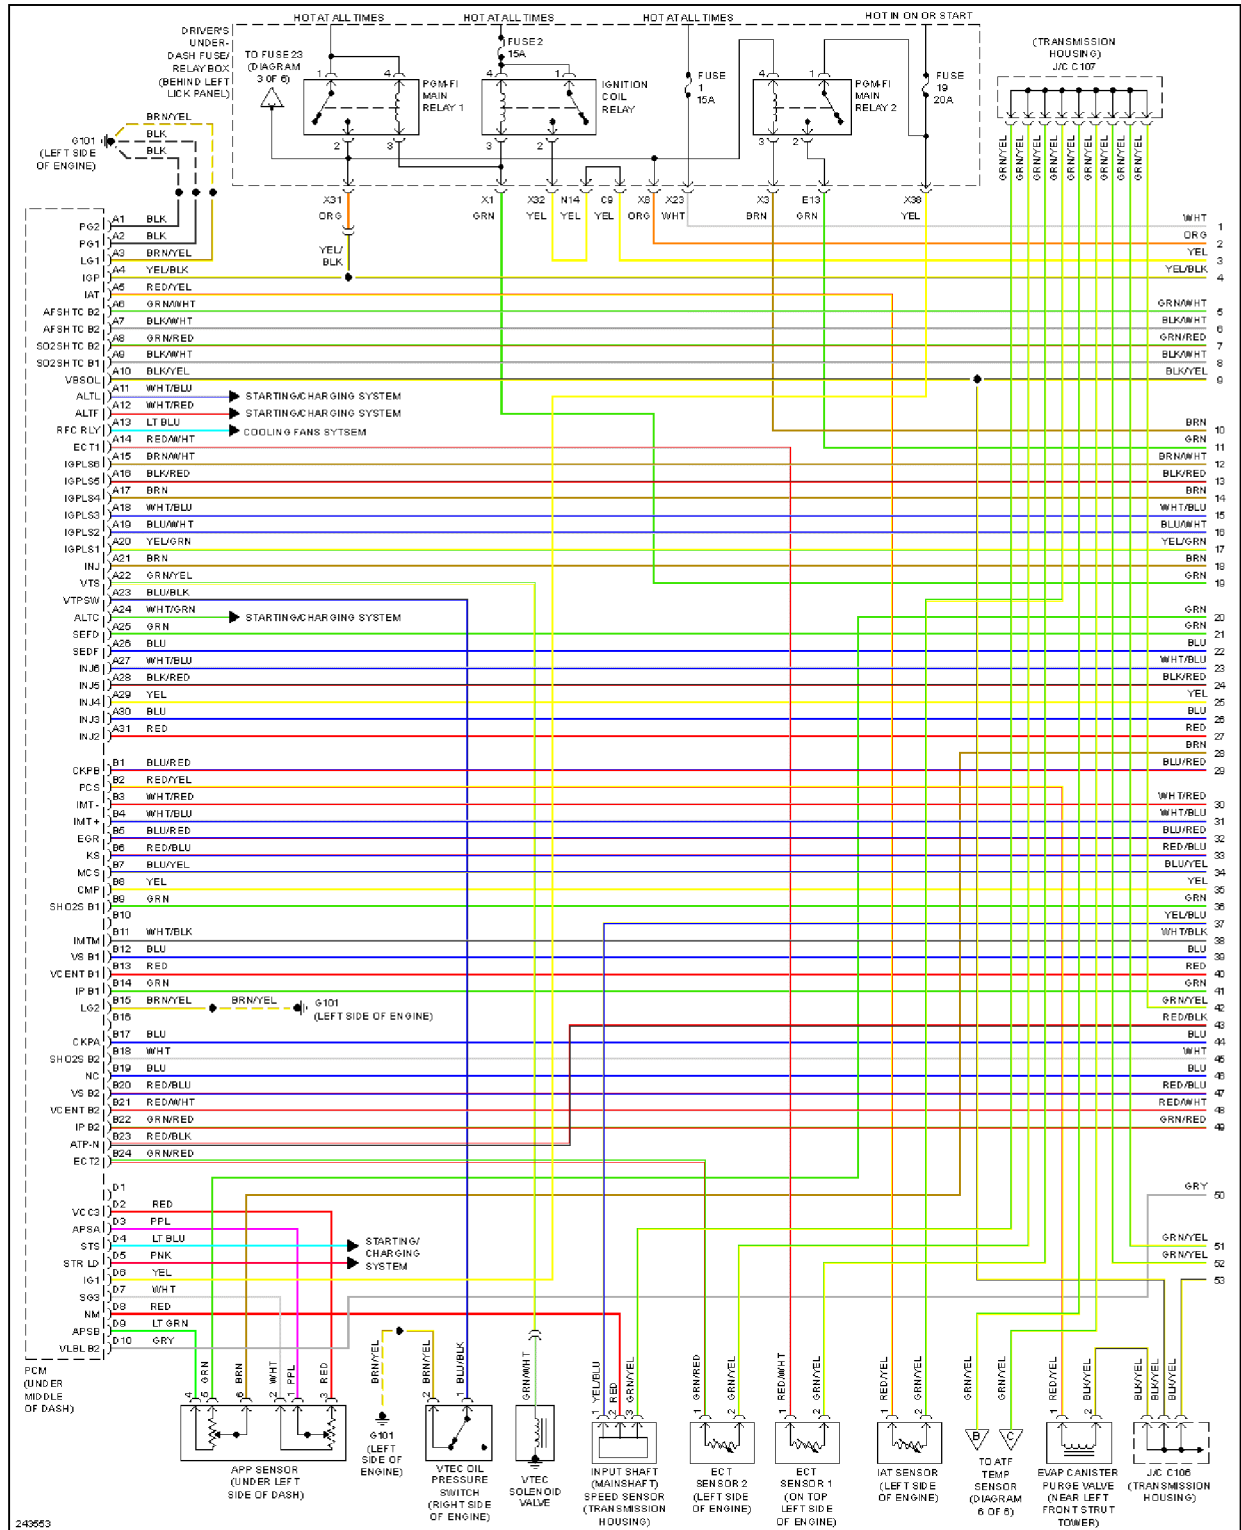


Fig. 23: 3.5L, Engine Performance Circuit (1 of 6)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

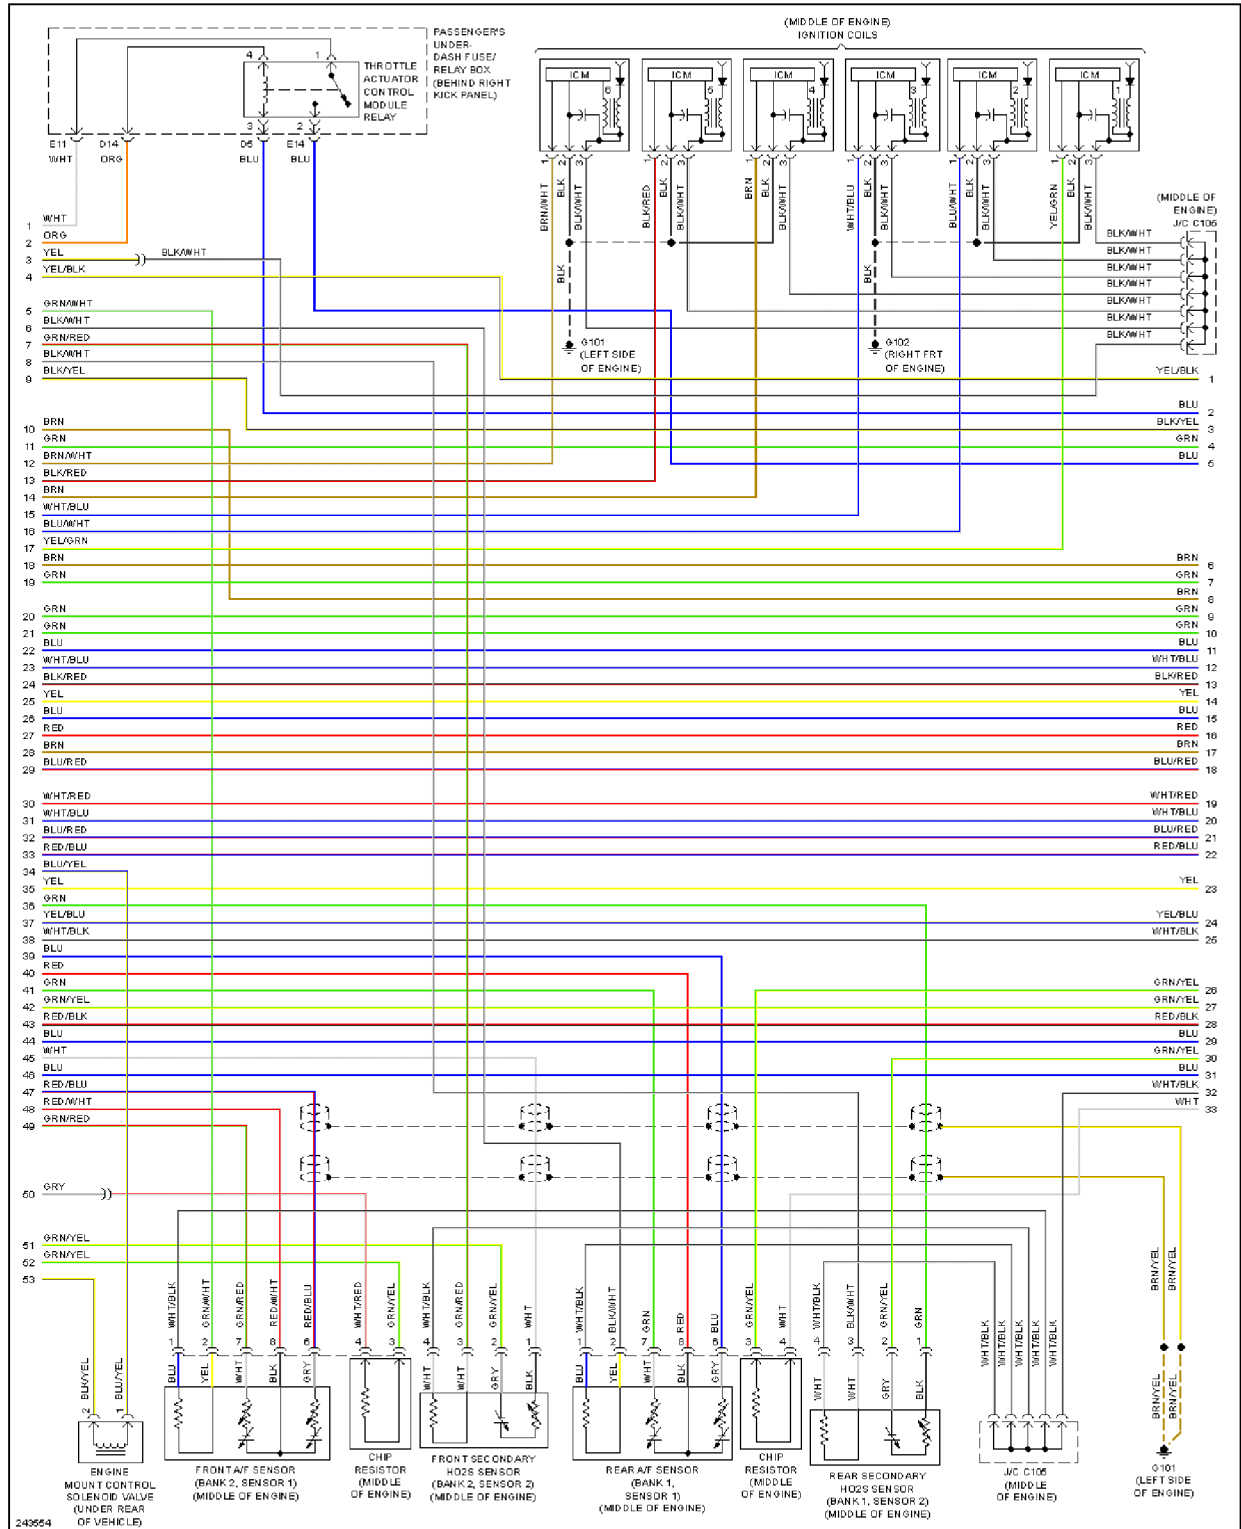


Fig. 24: 3.5L, Engine Performance Circuit (2 of 6)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

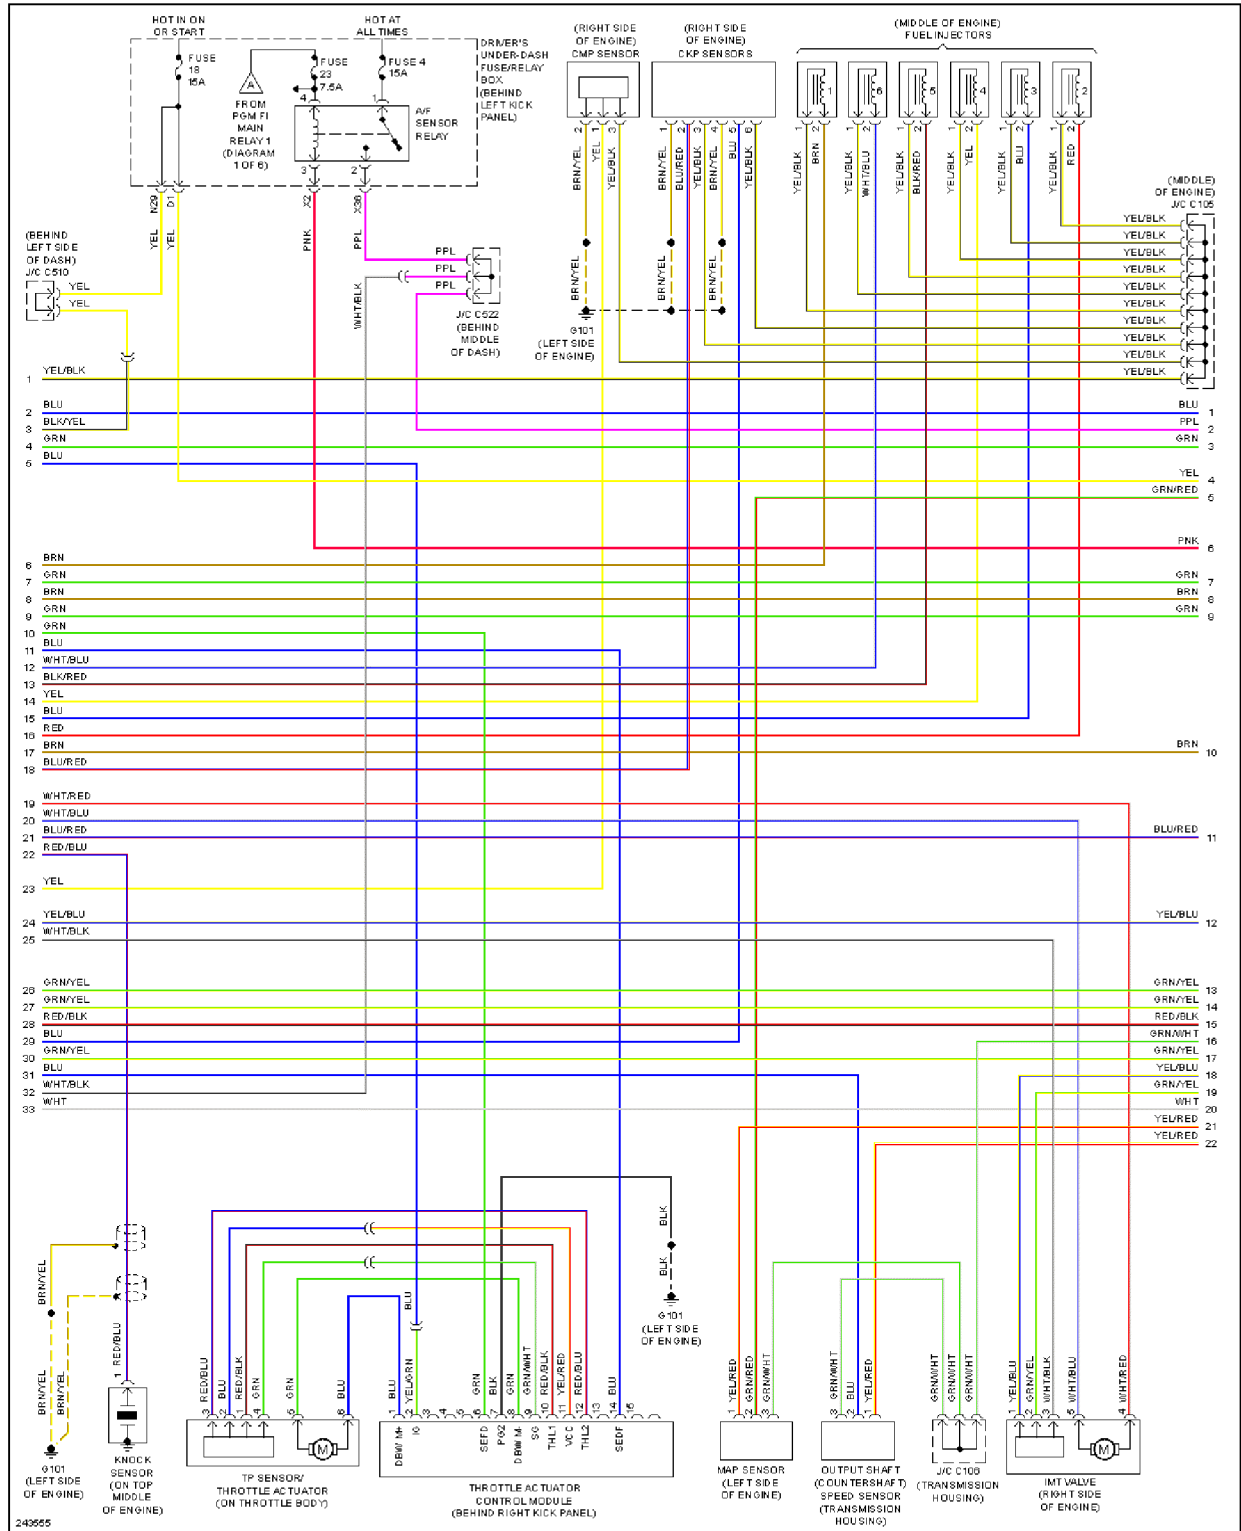


Fig. 25: 3.5L, Engine Performance Circuit (3 of 6)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

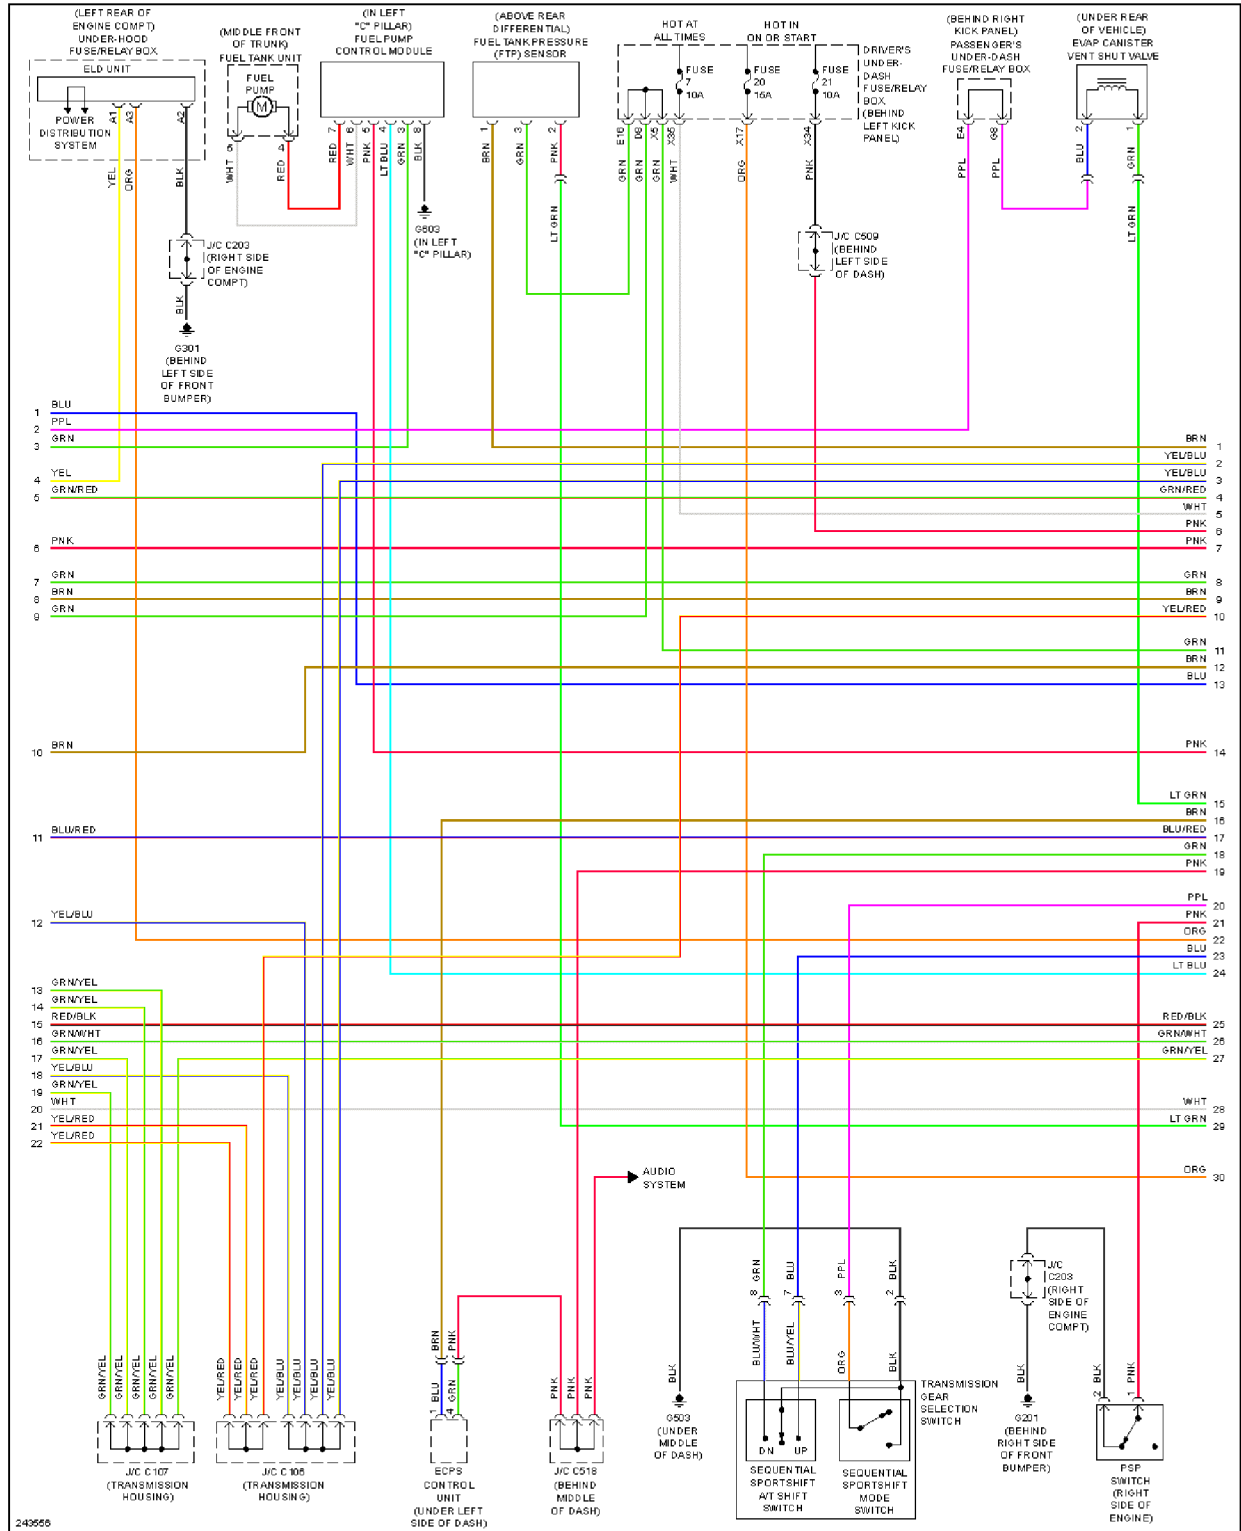


Fig. 26: 3.5L, Engine Performance Circuit (4 of 6)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

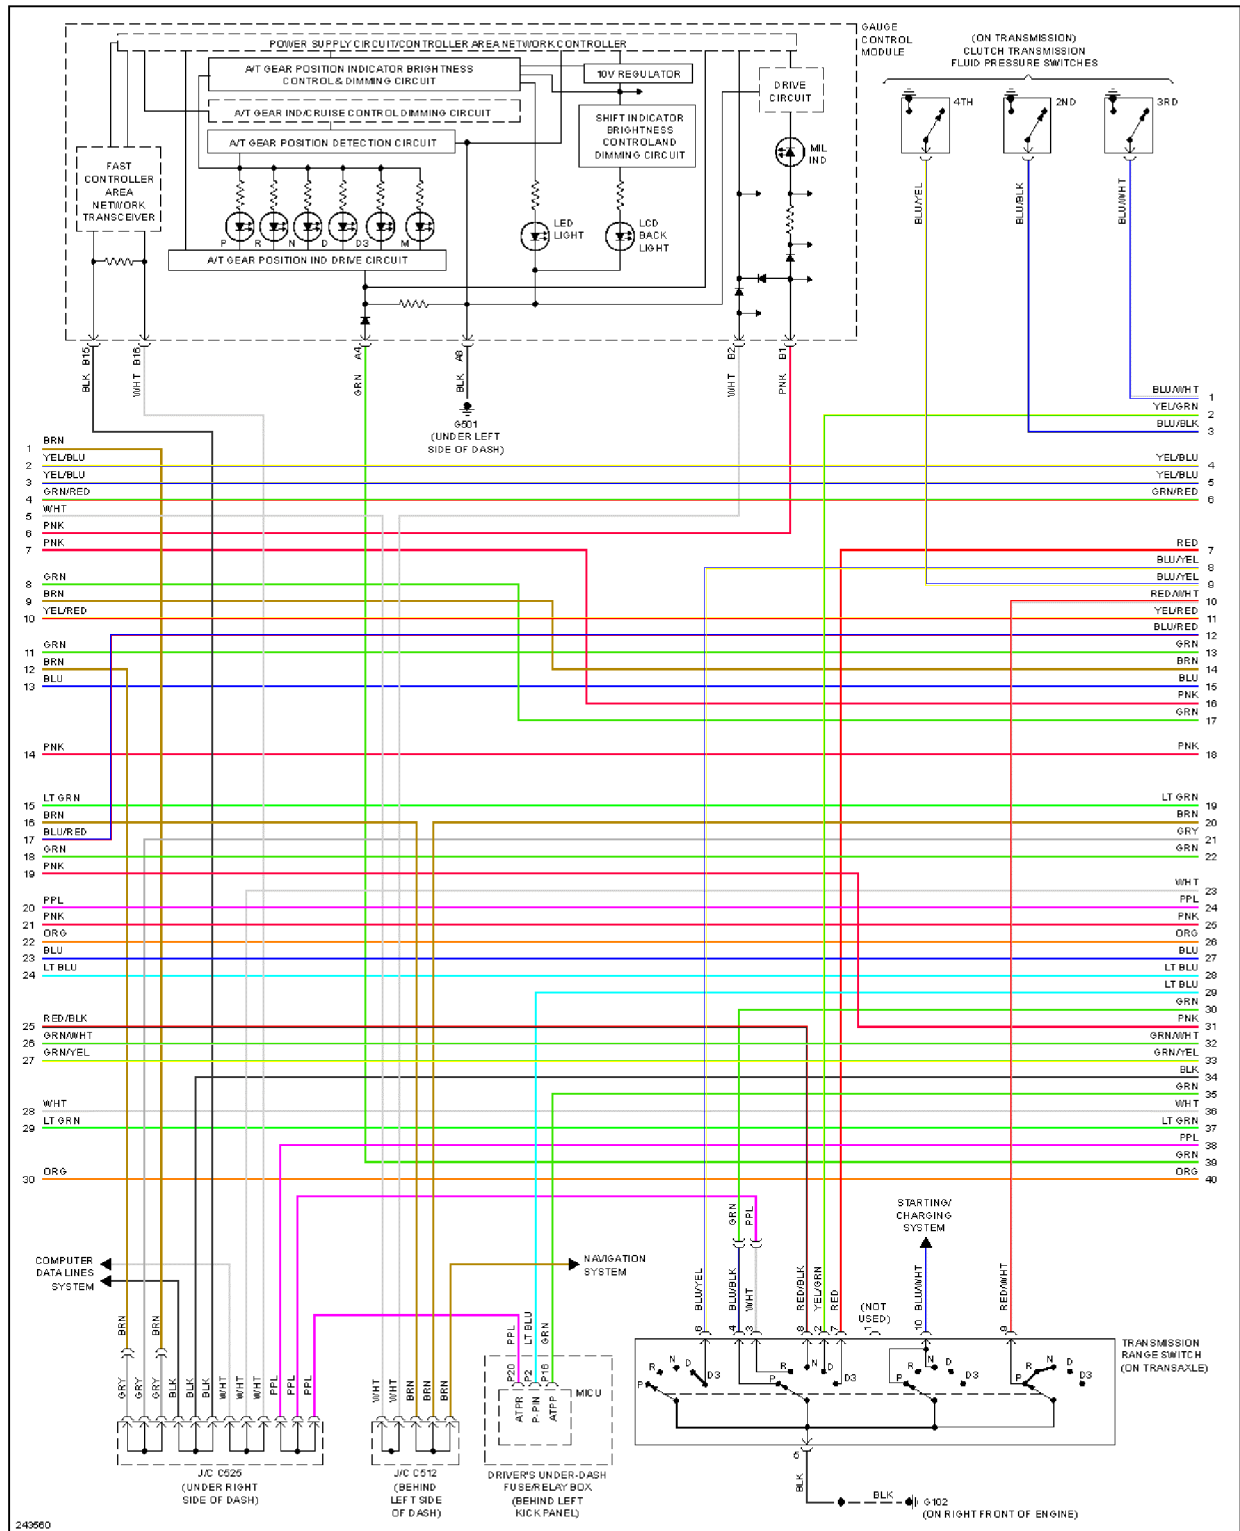


Fig. 27: 3.5L, Engine Performance Circuit (5 of 6)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

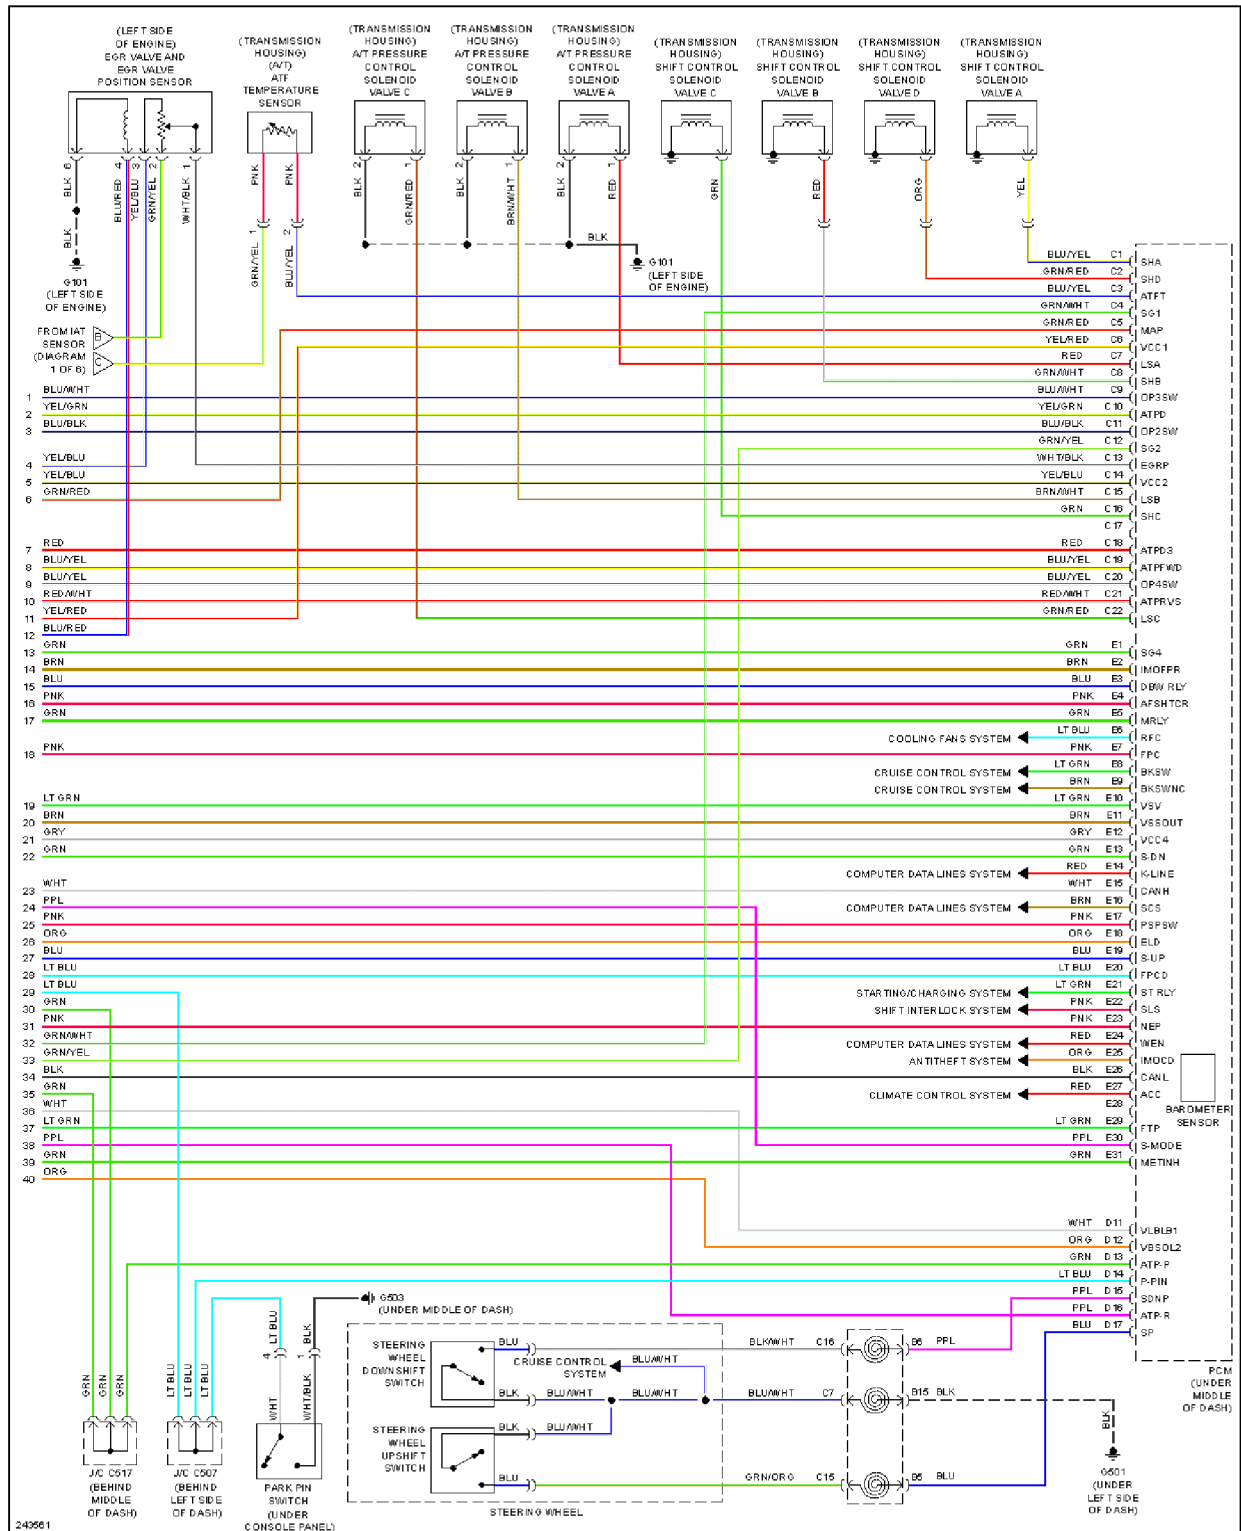
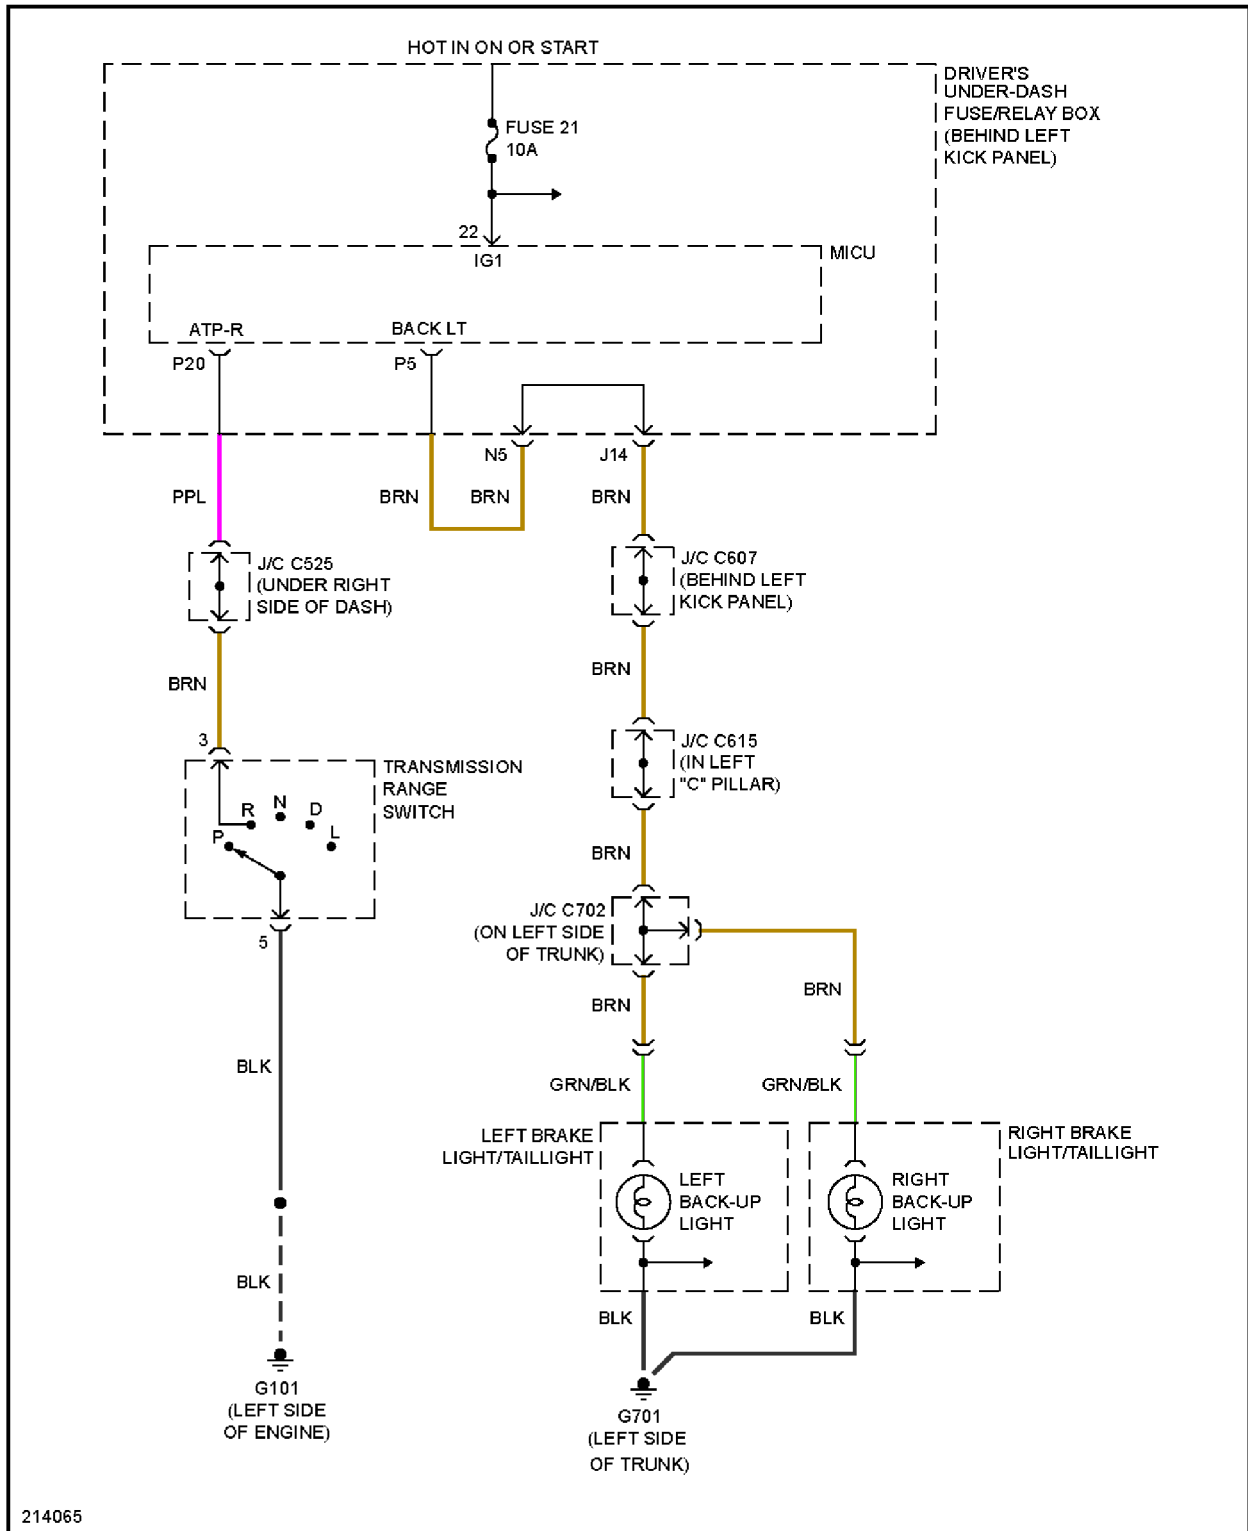


Fig. 28: 3.5L, Engine Performance Circuit (6 of 6)

EXTERIOR LIGHTS

**Fig. 29: Back-up Lamps Circuit**

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

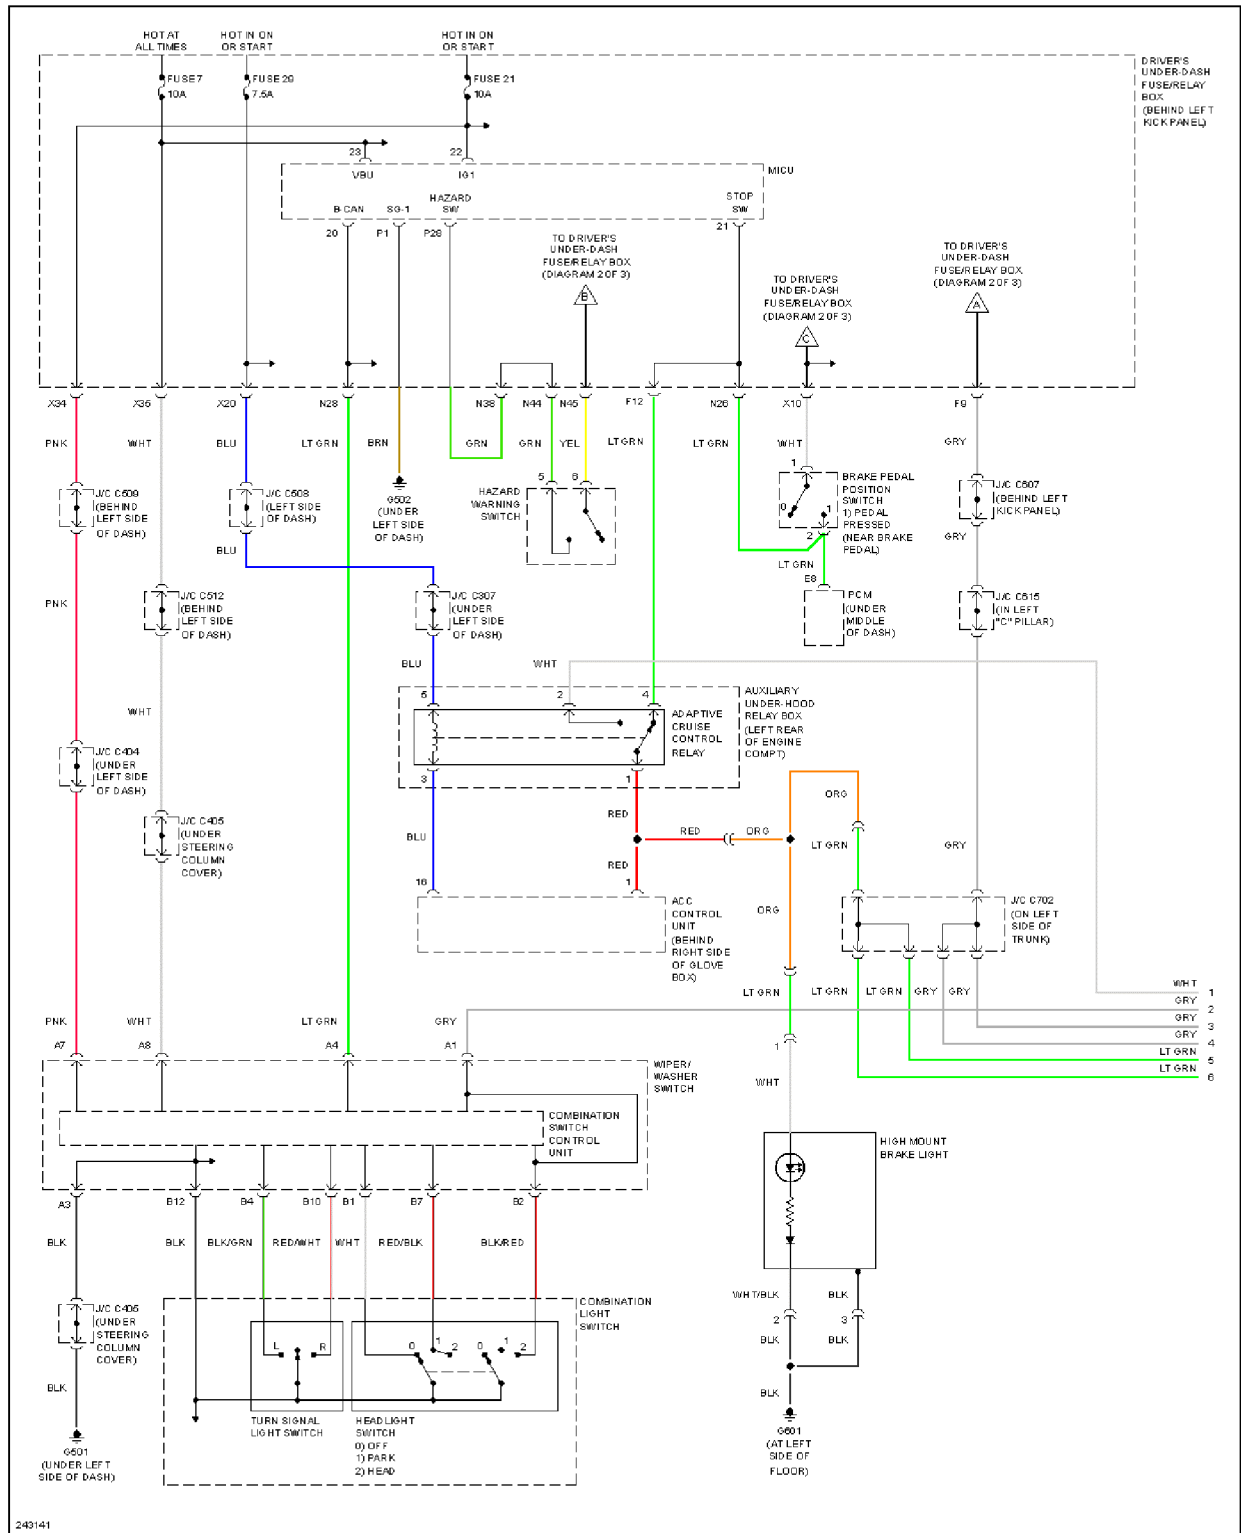


Fig. 30: Exterior Lamps Circuit, W/ Technology Package (1 of 3)

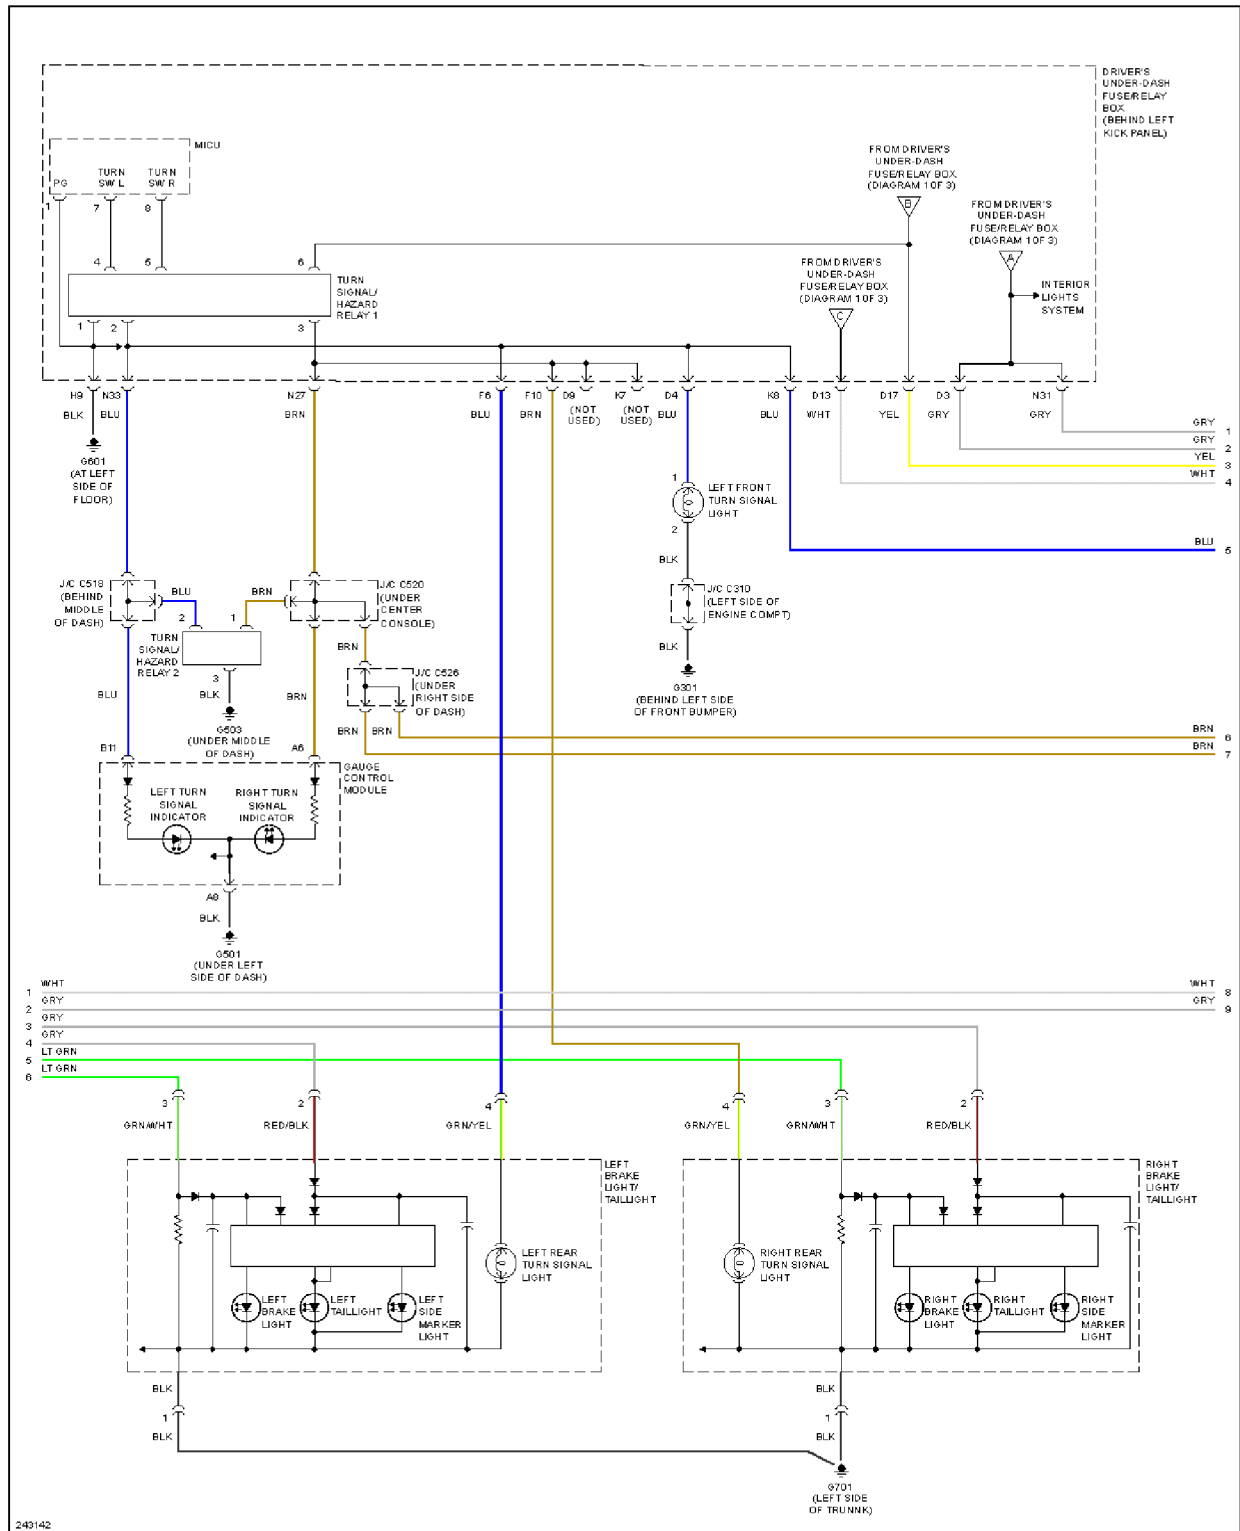


Fig. 31: Exterior Lamps Circuit, W/ Technology Package (2 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

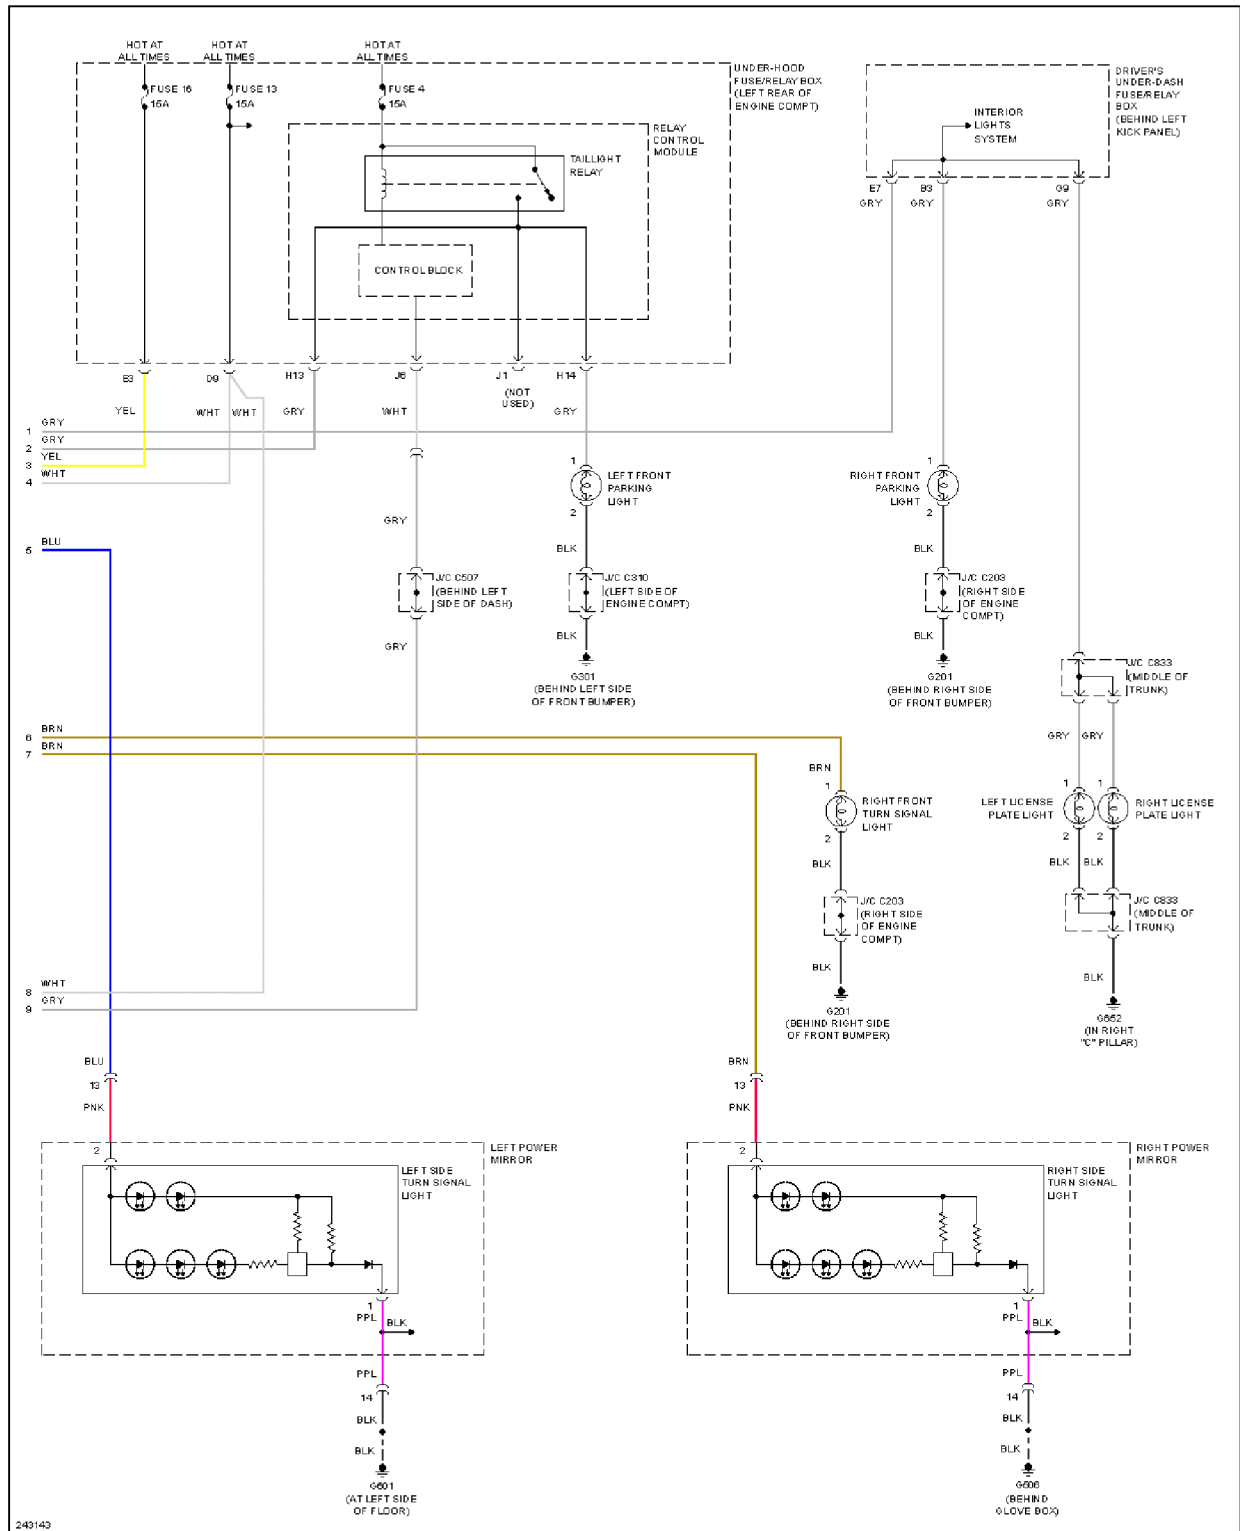


Fig. 32: Exterior Lamps Circuit, W/ Technology Package (3 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

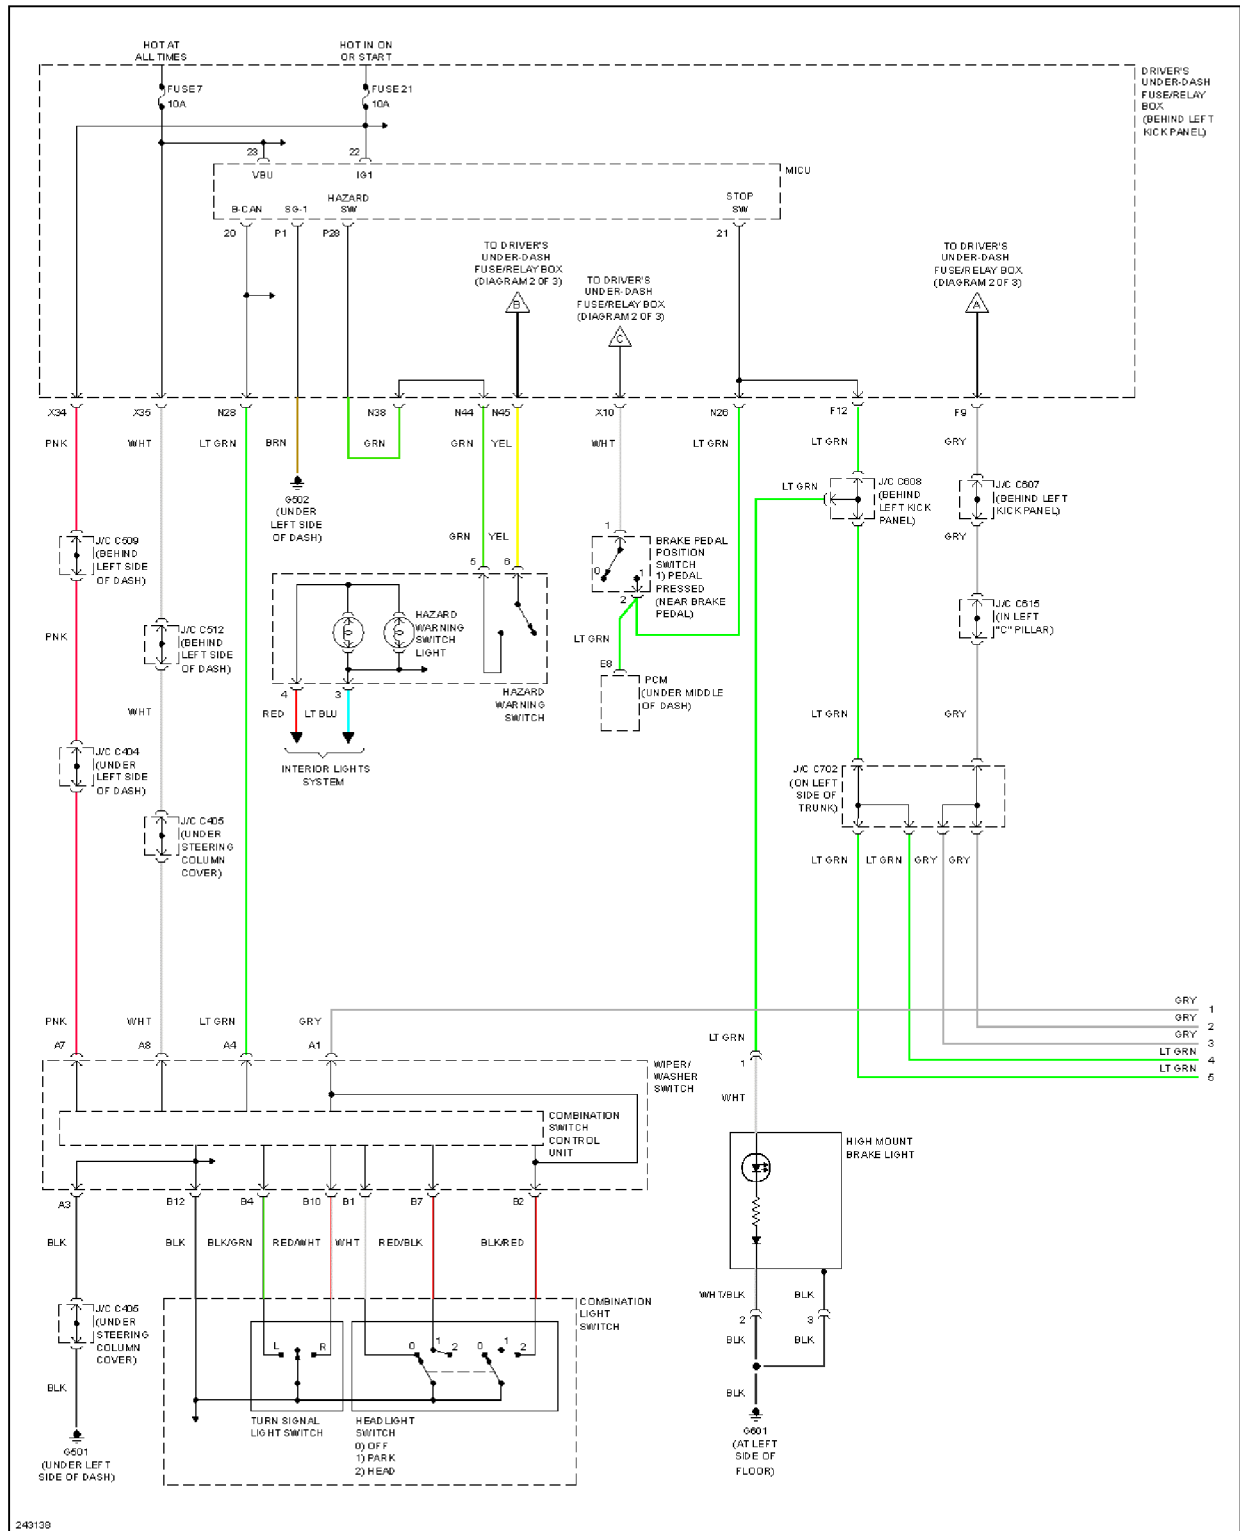


Fig. 33: Exterior Lamps Circuit, W/O Technology Package (1 of 3)

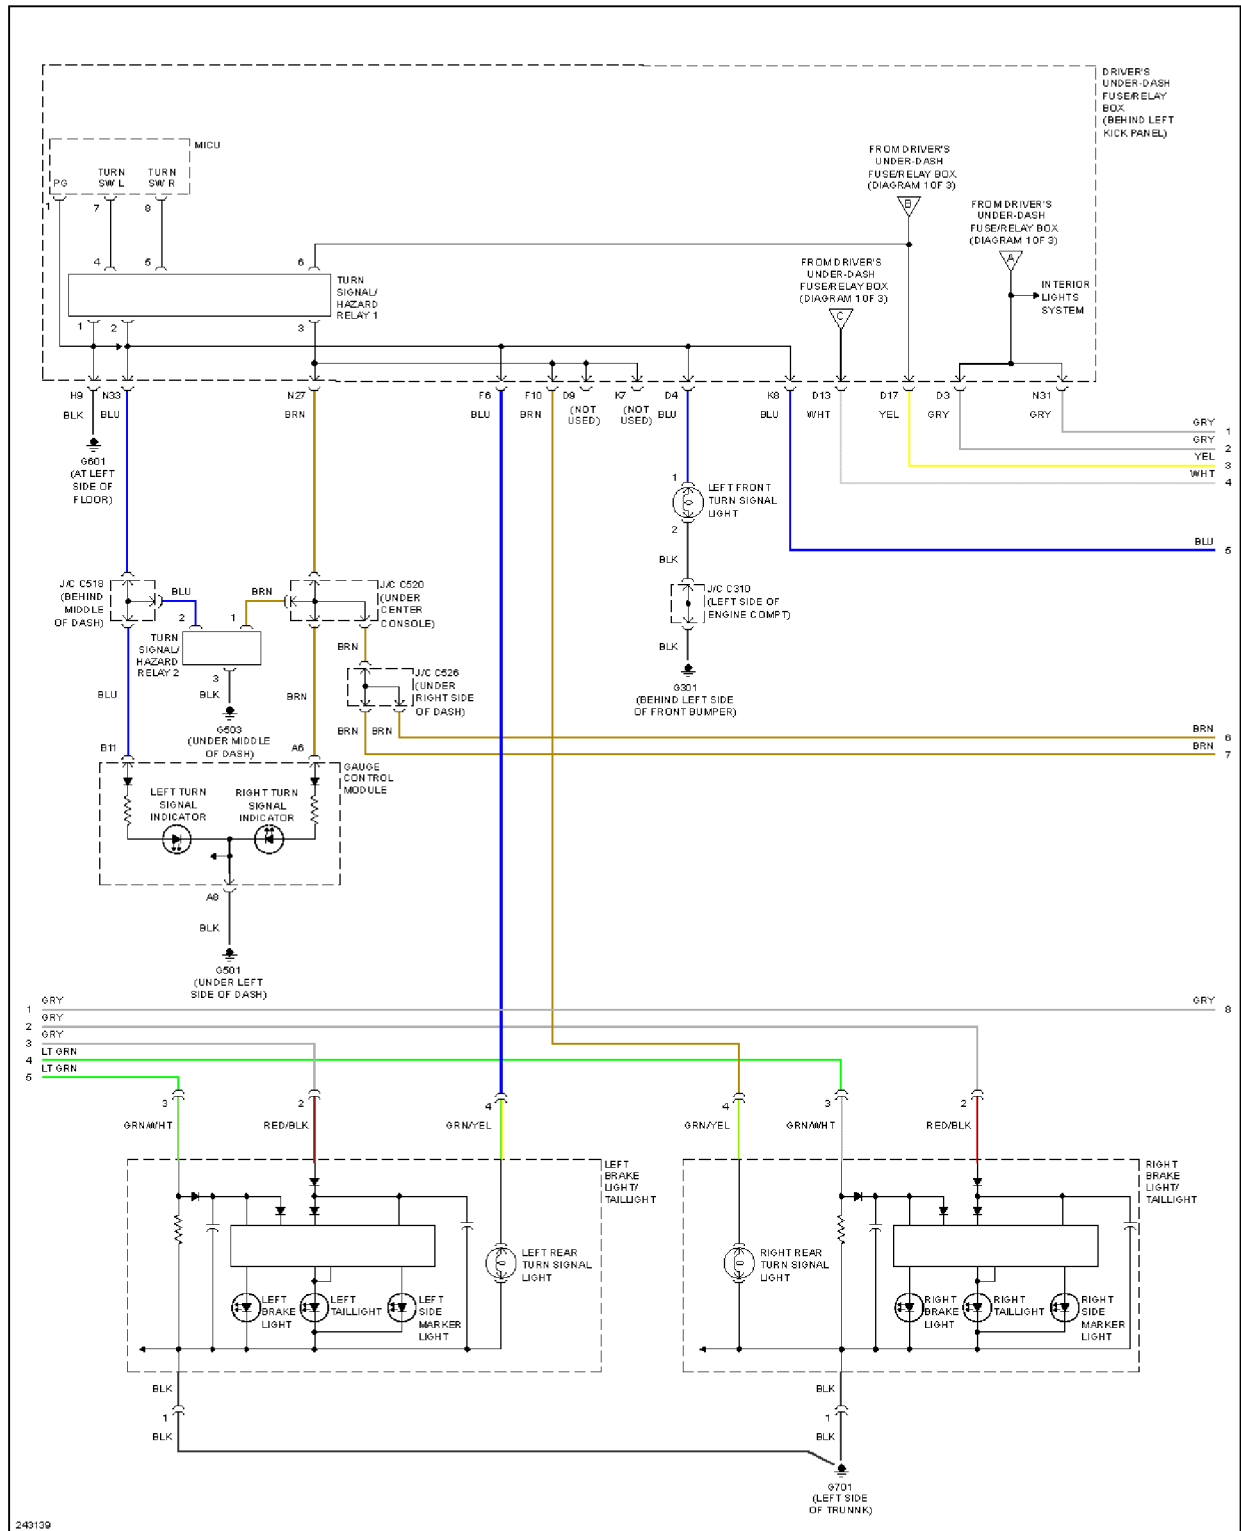


Fig. 34: Exterior Lamps Circuit, W/O Technology Package (2 of 3)

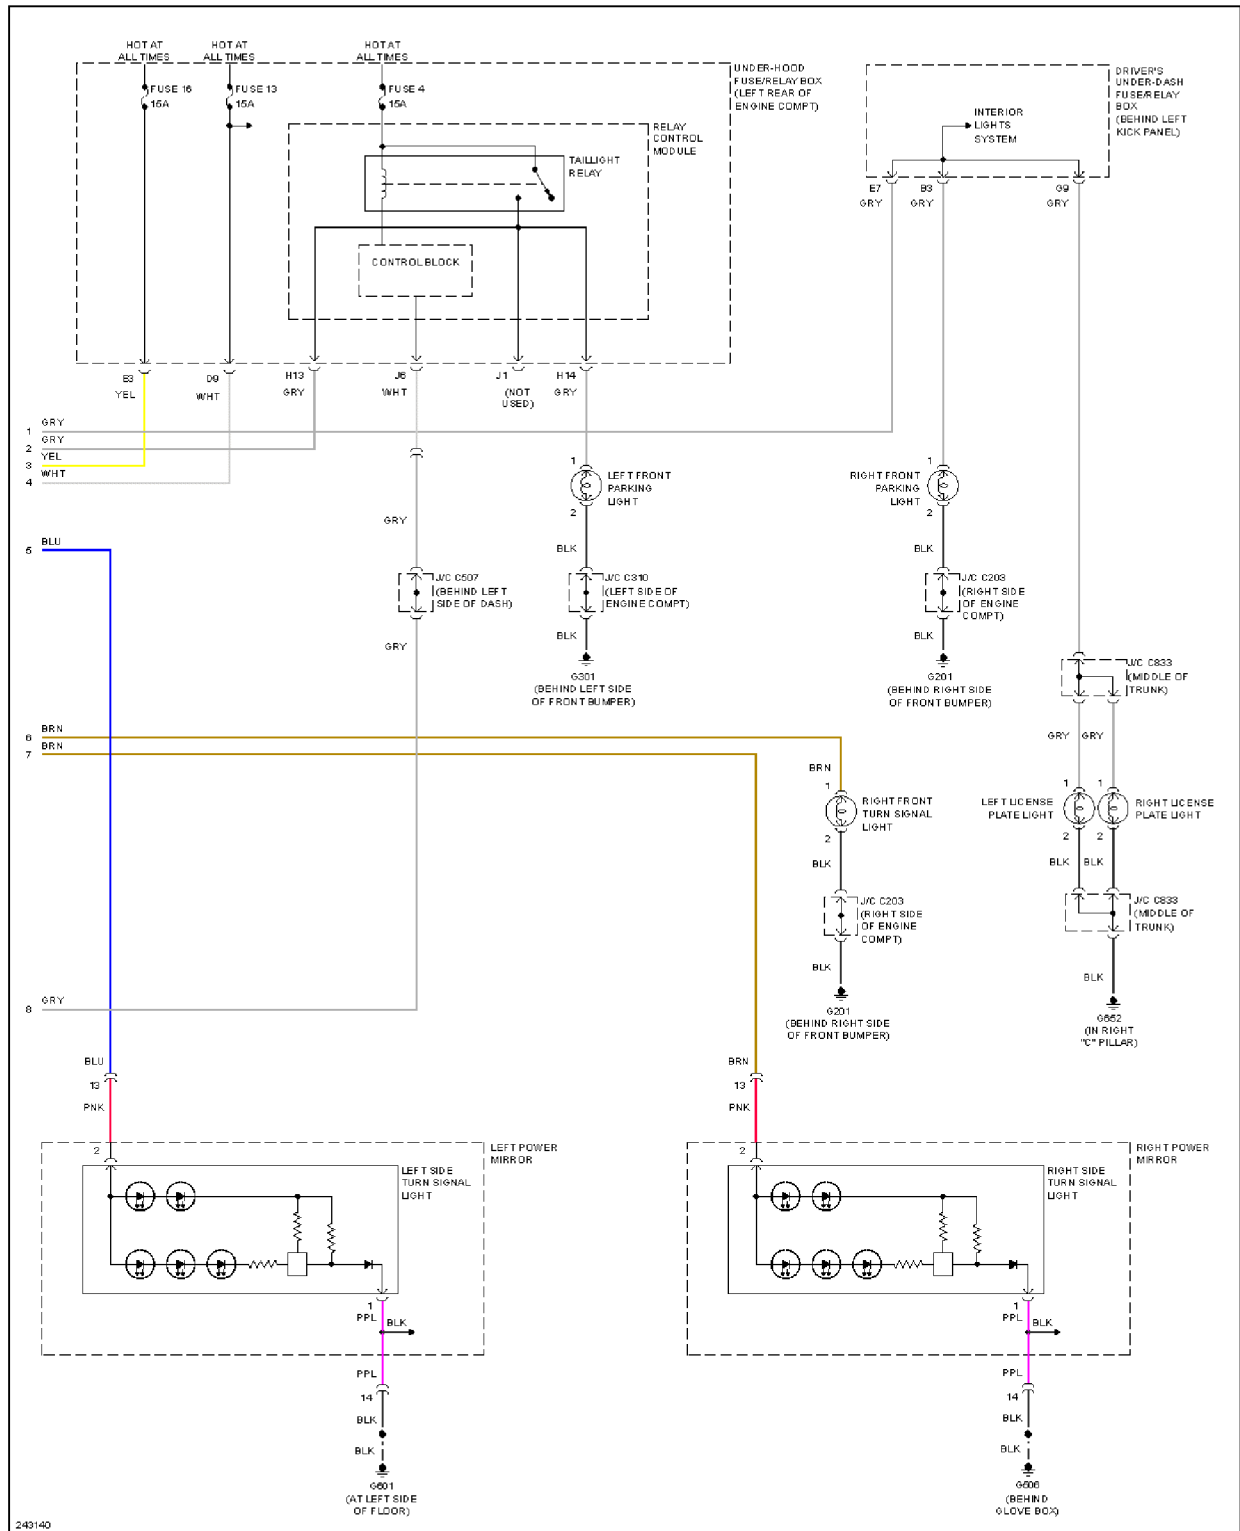


Fig. 35: Exterior Lamps Circuit, W/O Technology Package (3 of 3)

GROUND DISTRIBUTION

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

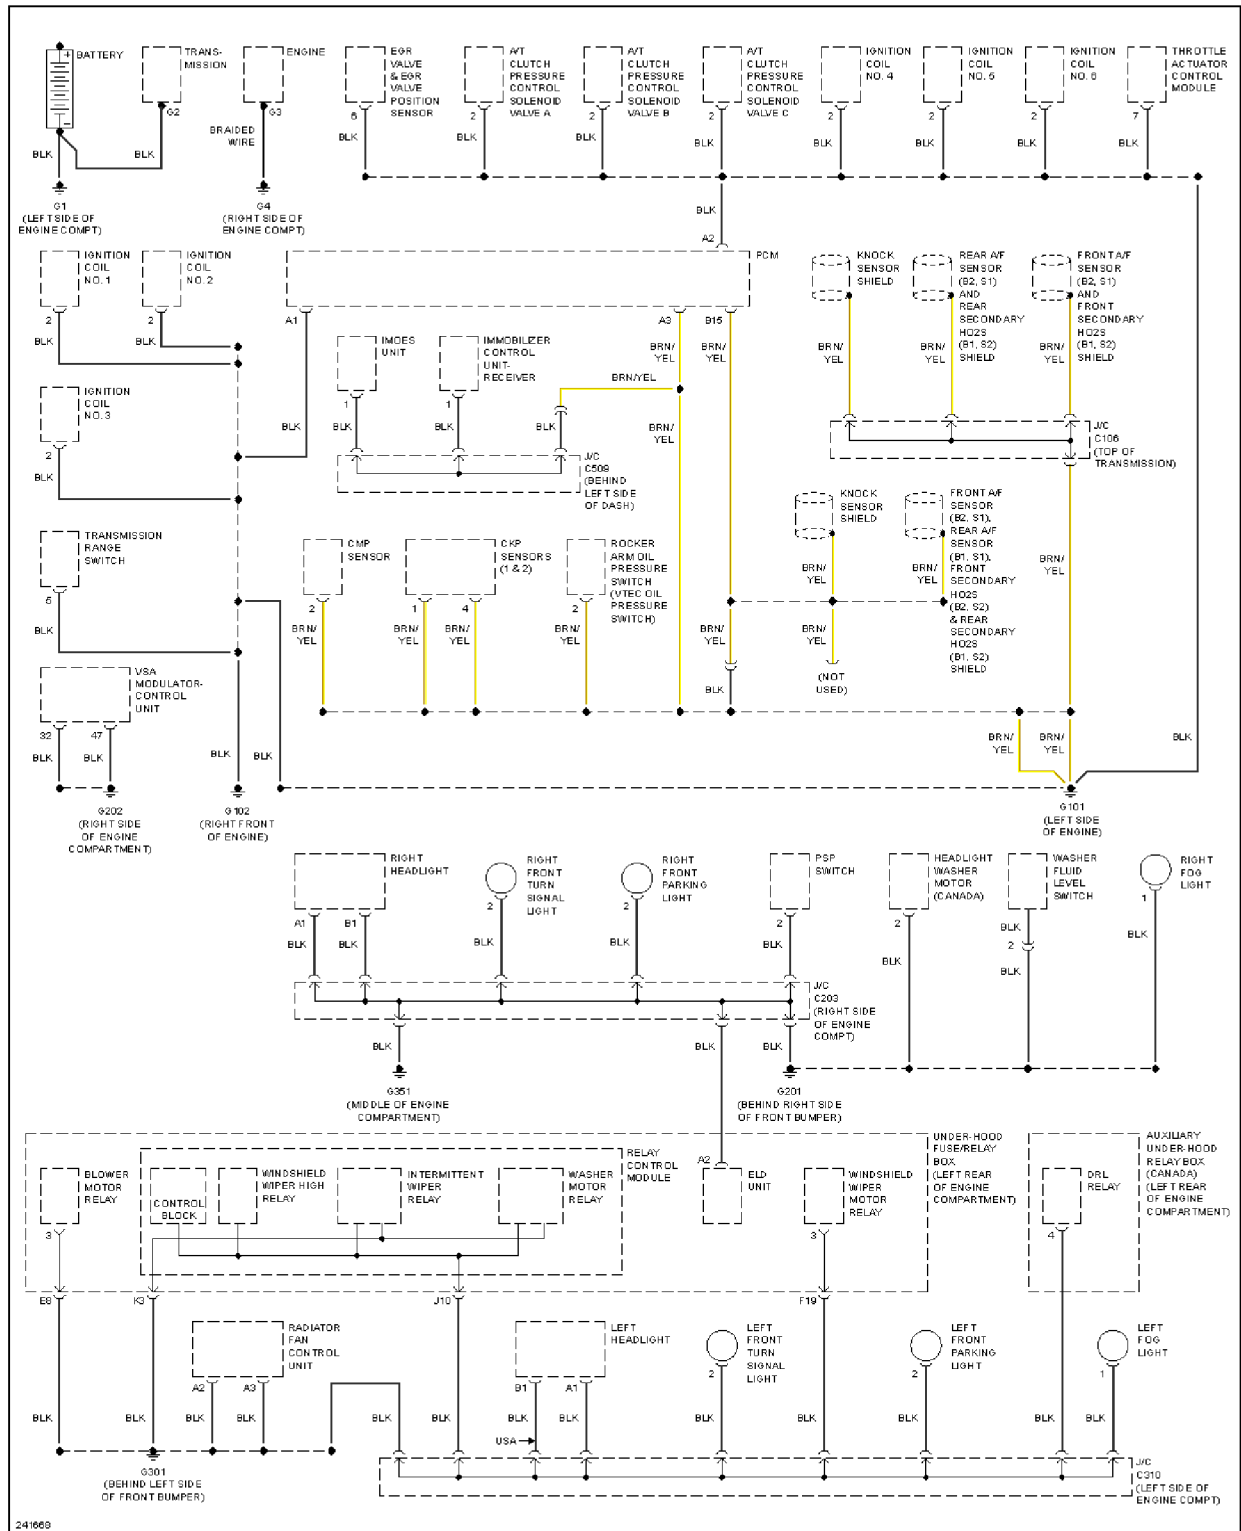


Fig. 36: Ground Distribution Circuit (1 of 4)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

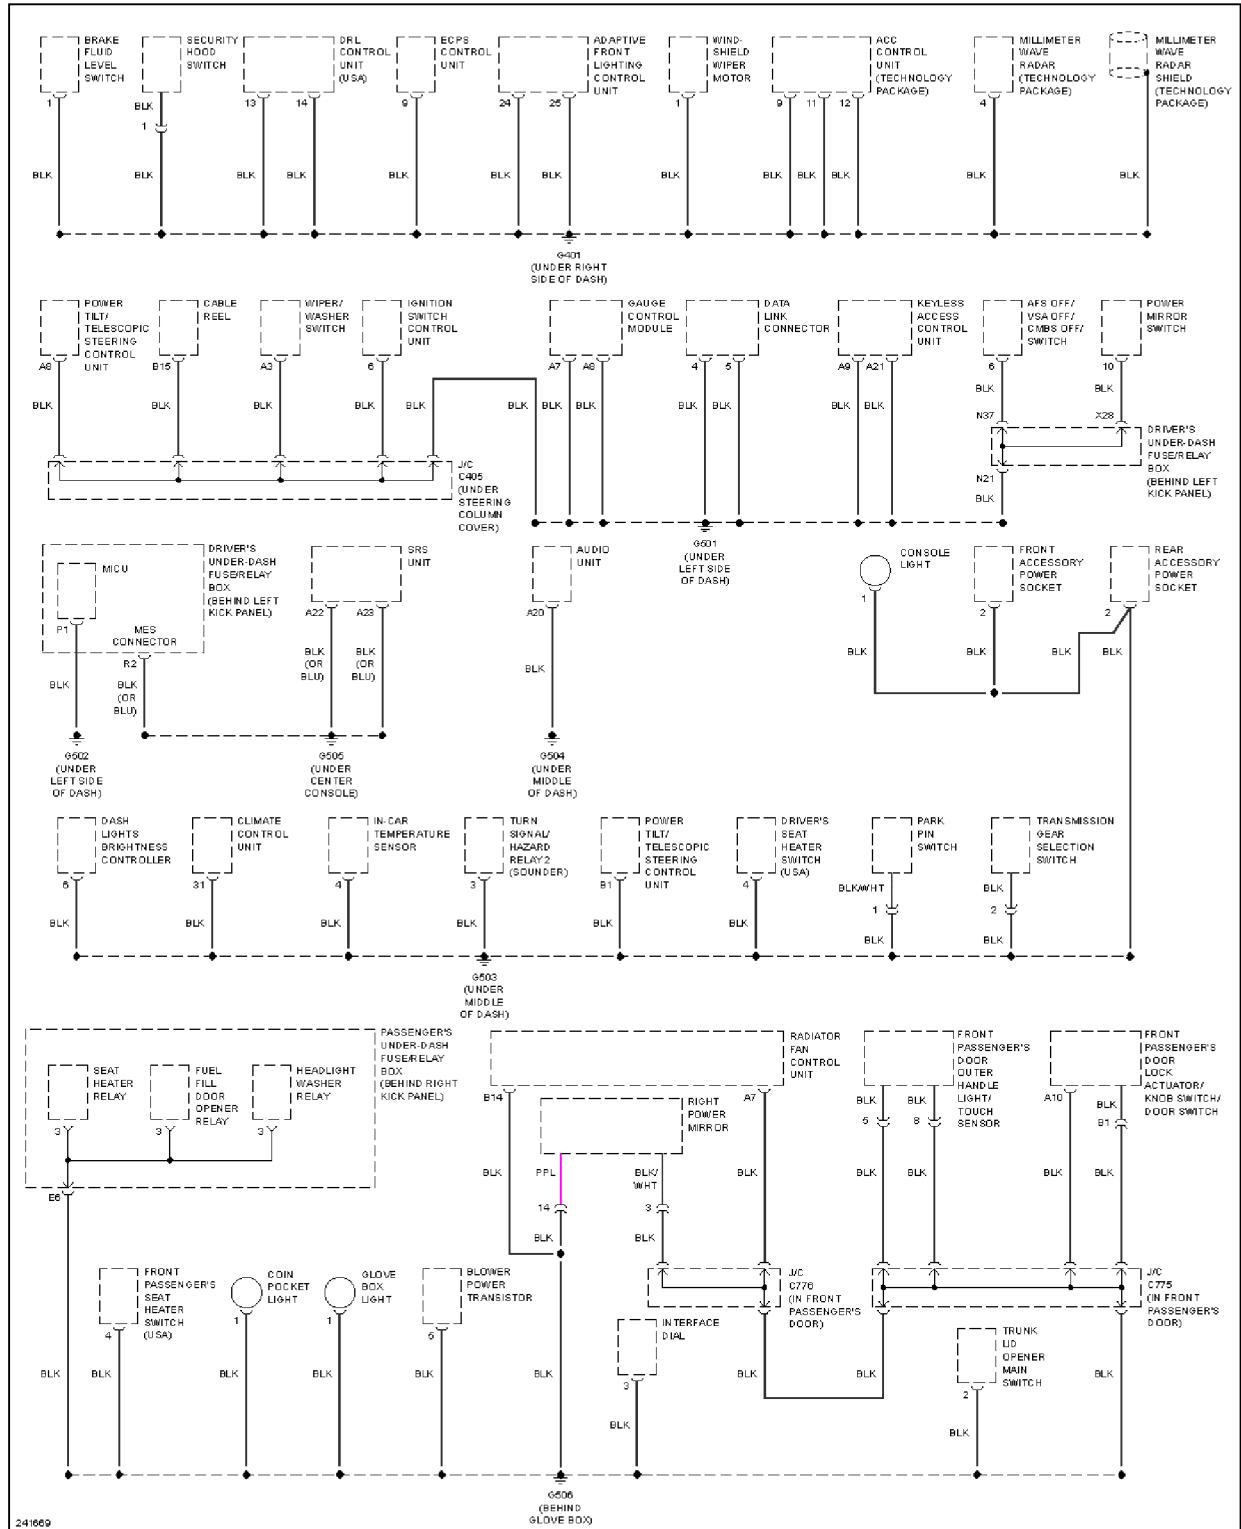


Fig. 37: Ground Distribution Circuit (2 of 4)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

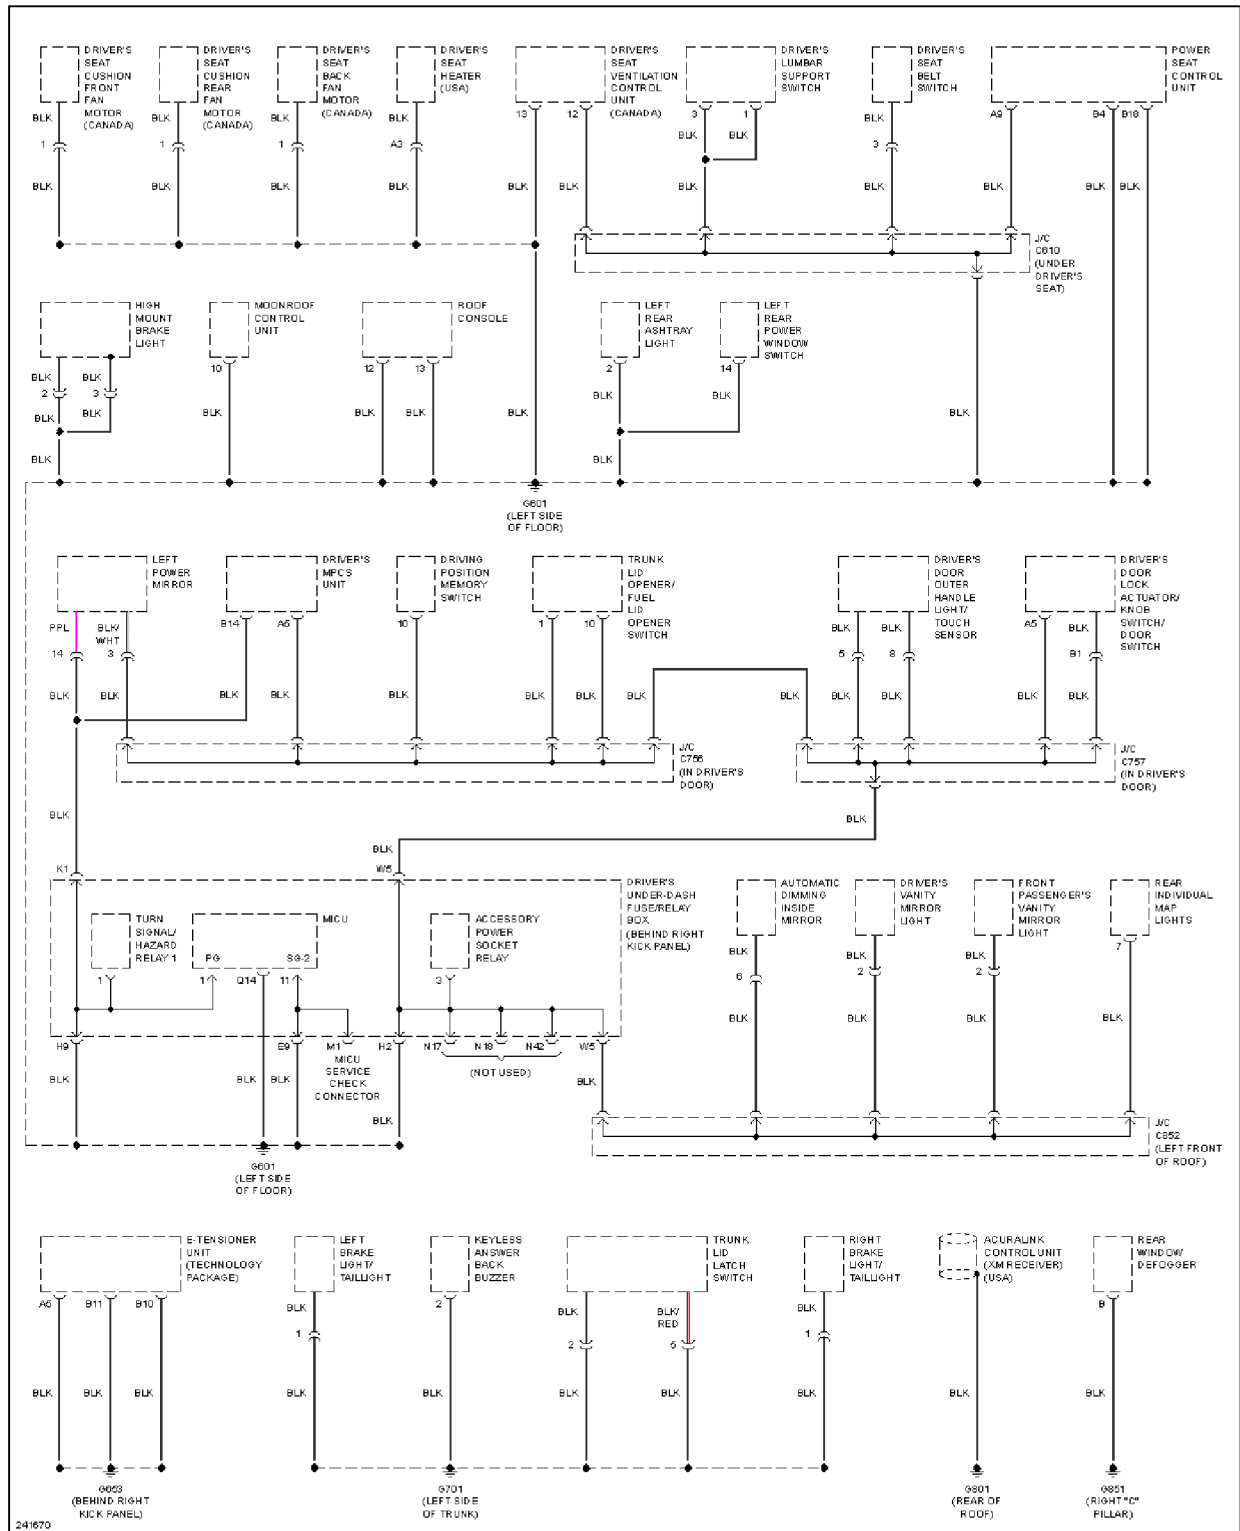


Fig. 38: Ground Distribution Circuit (3 of 4)

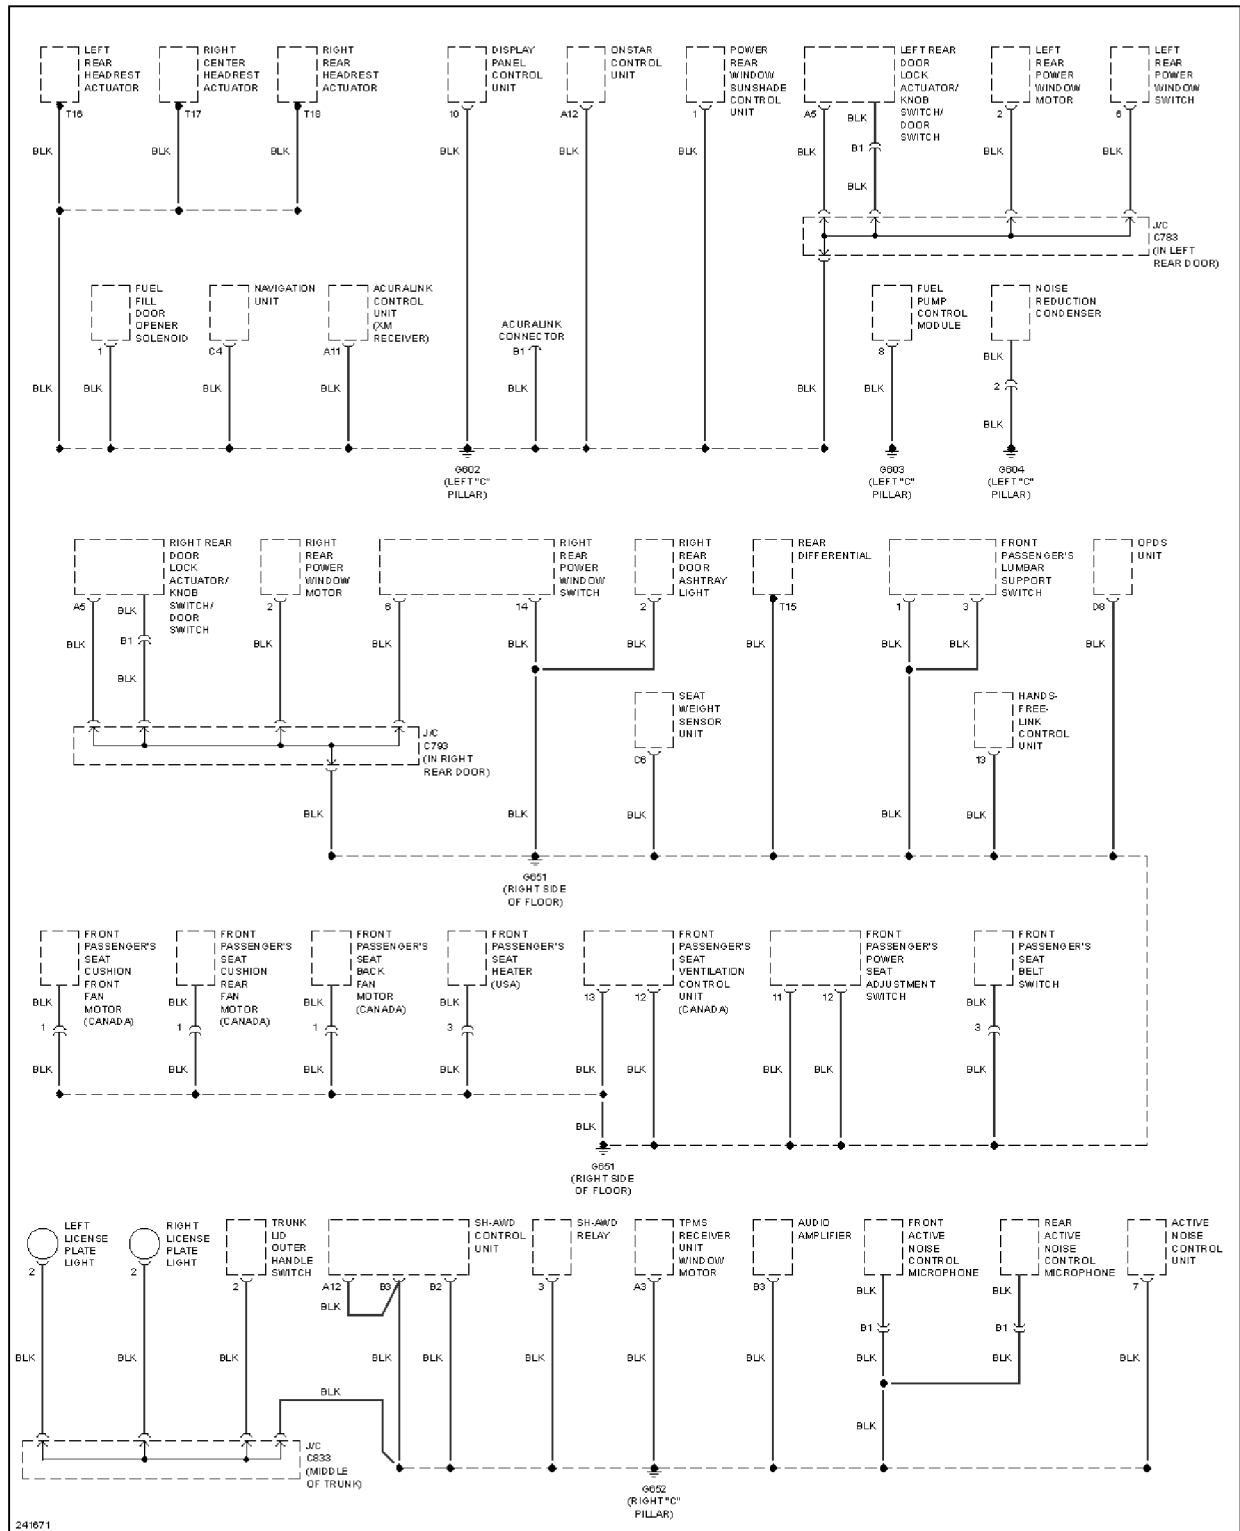


Fig. 39: Ground Distribution Circuit (4 of 4)

HEADLIGHTS

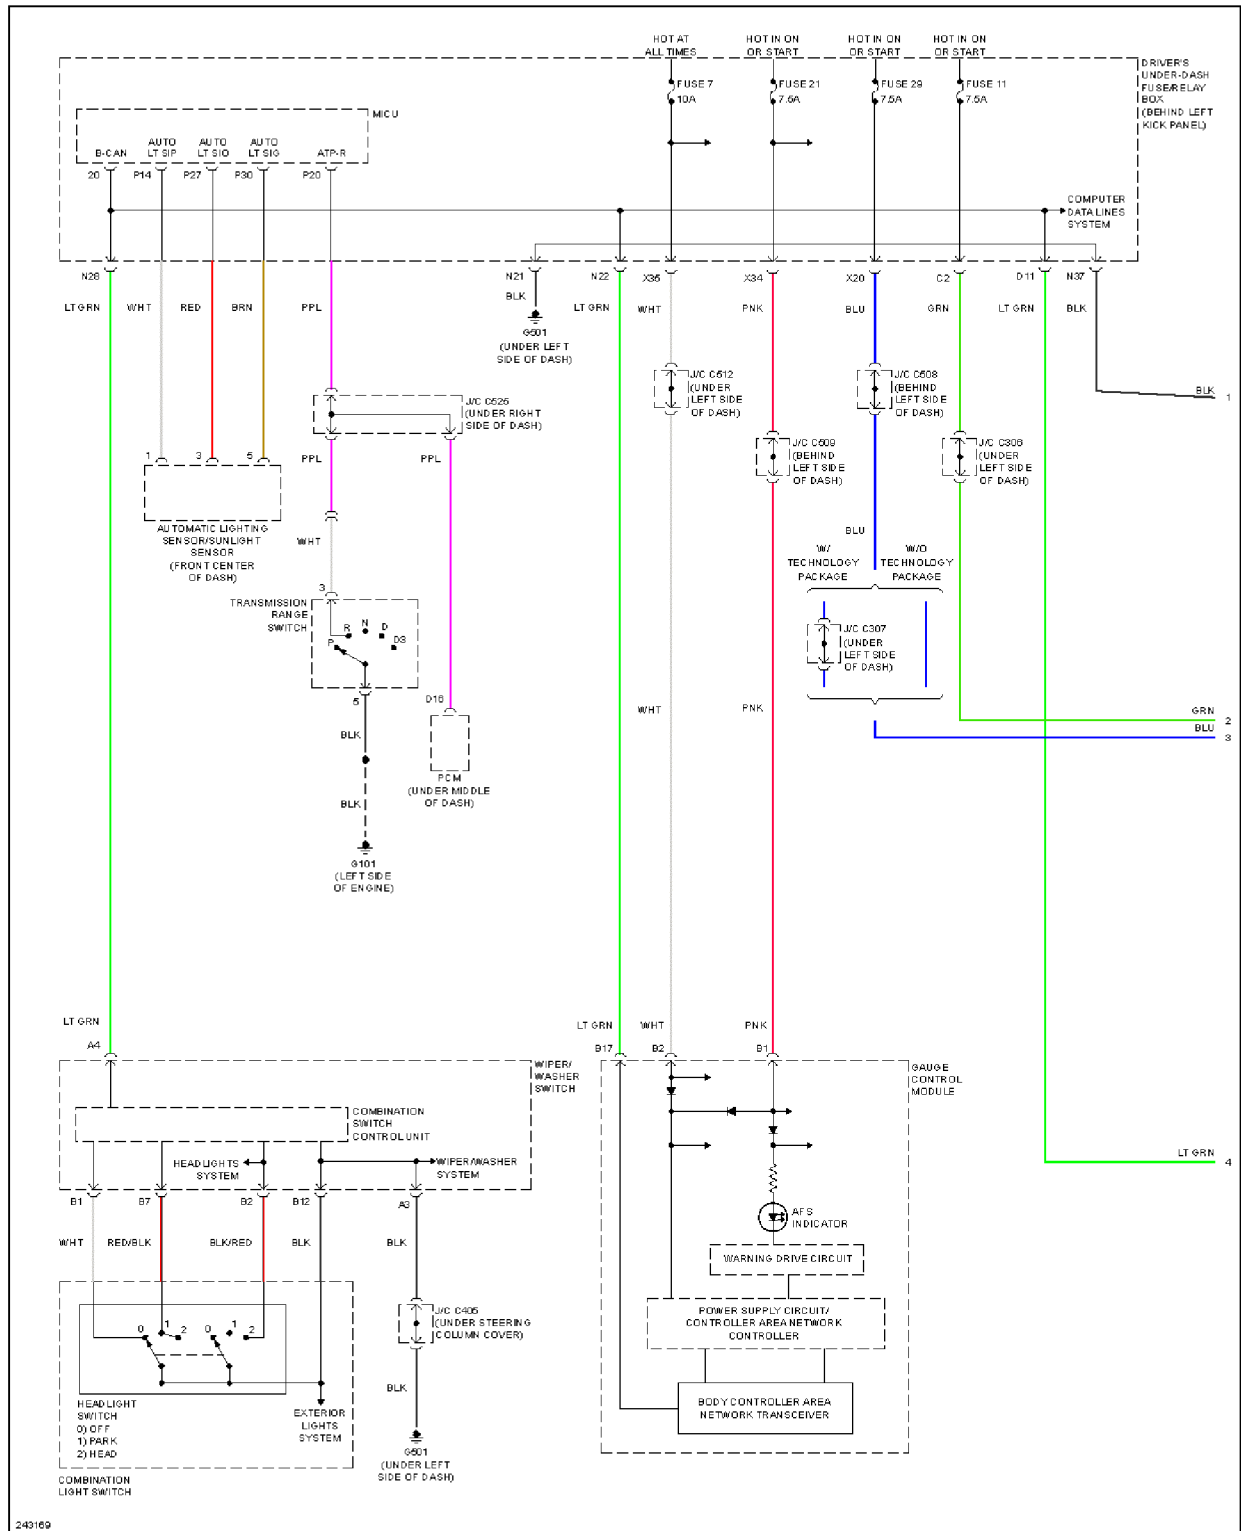


Fig. 40: Adaptive Front Lighting Circuit (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

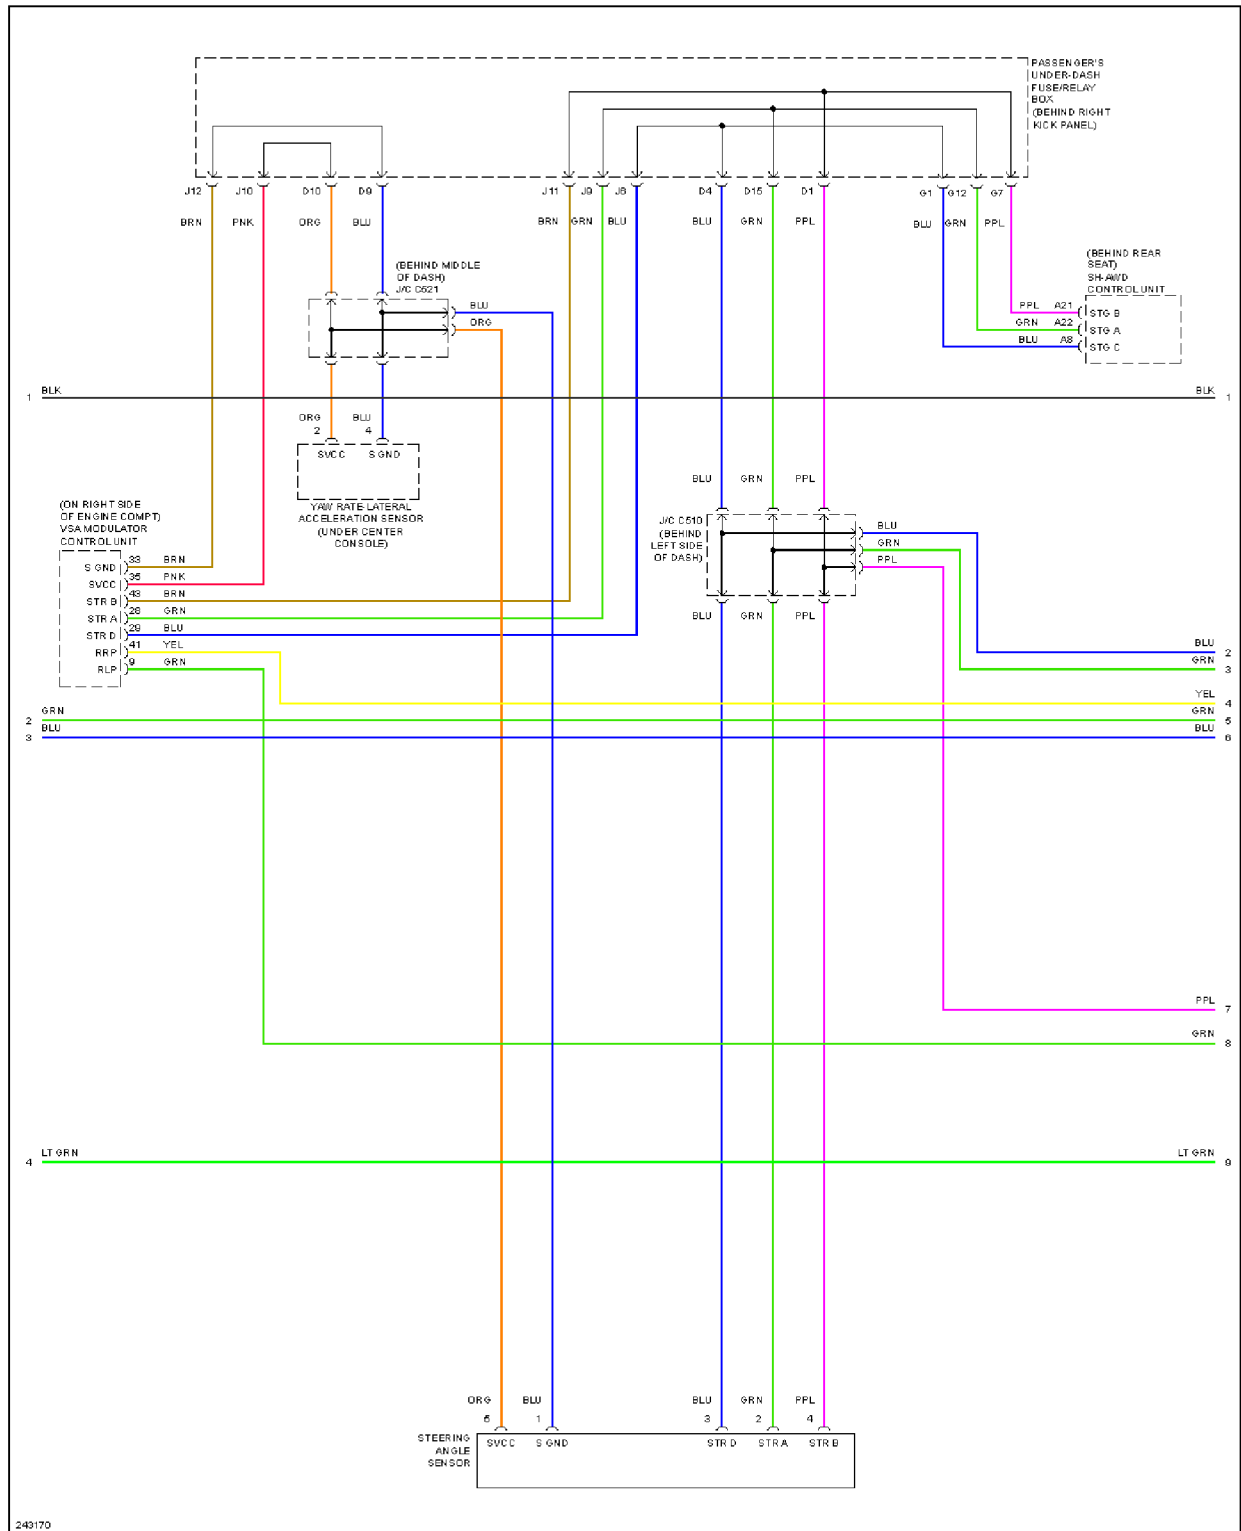


Fig. 41: Adaptive Front Lighting Circuit (2 of 3)

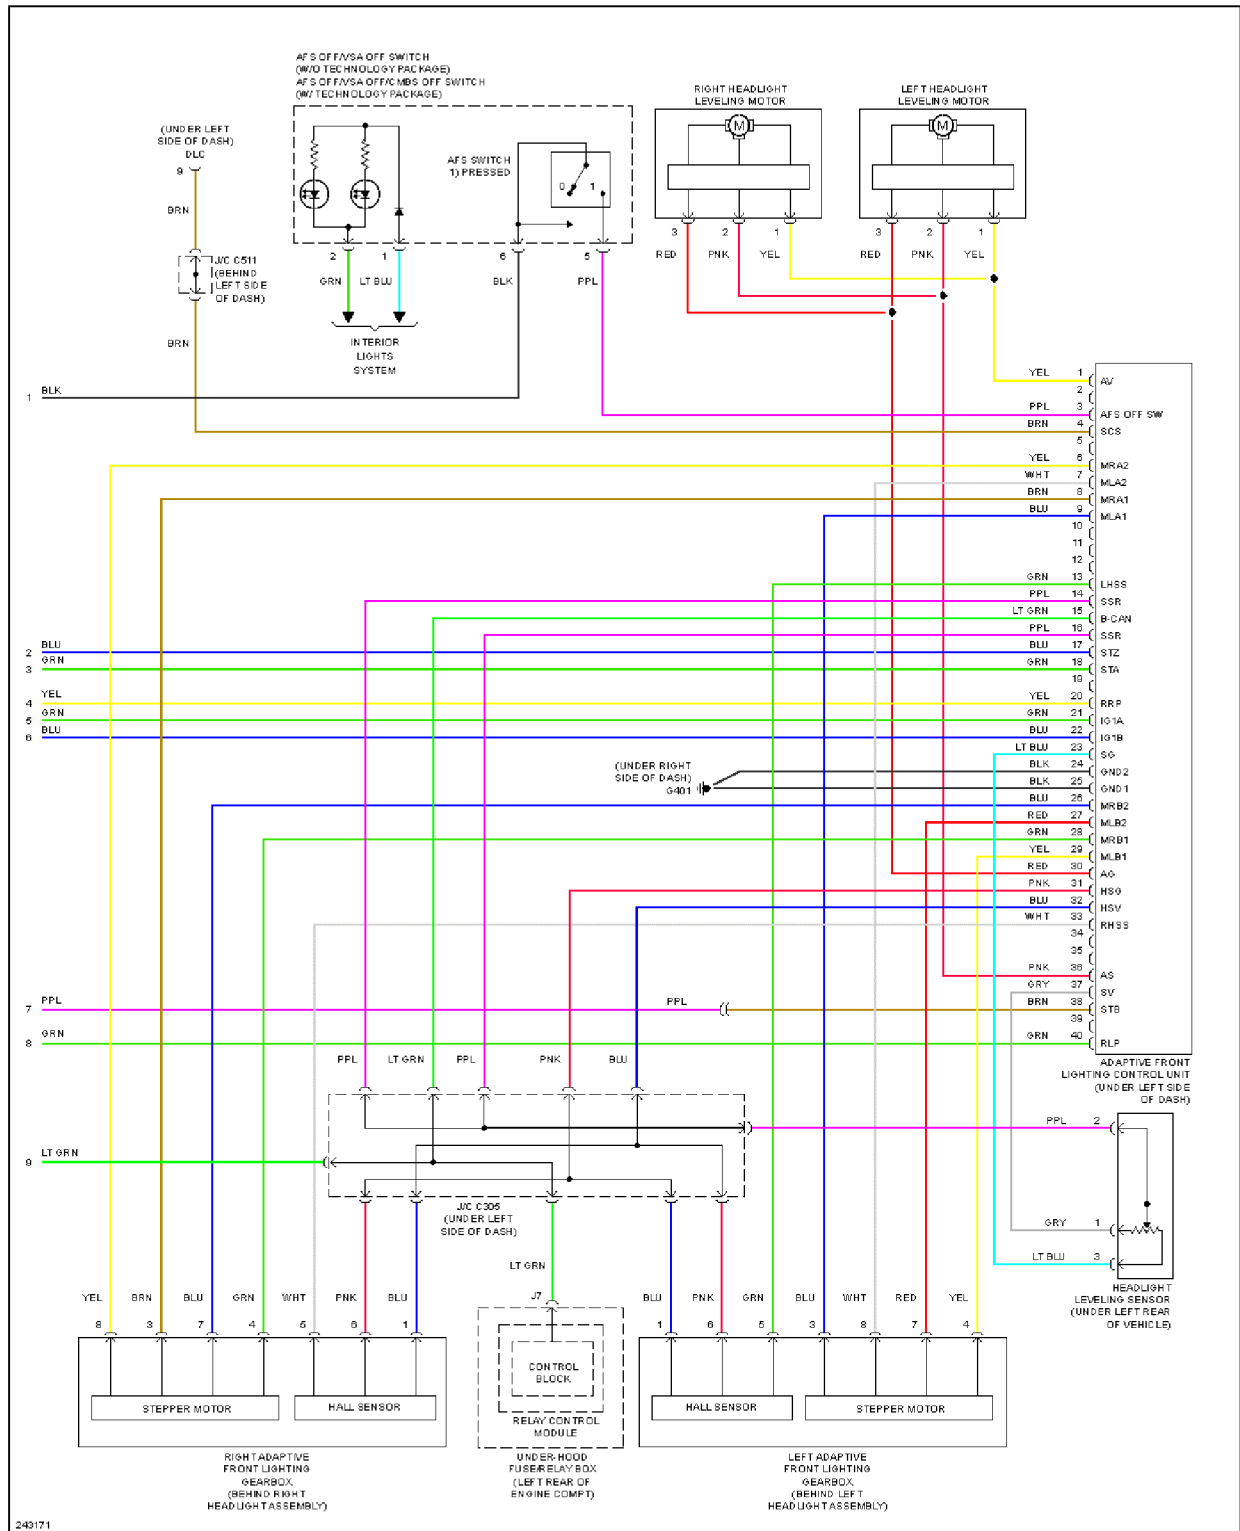


Fig. 42: Adaptive Front Lighting Circuit (3 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

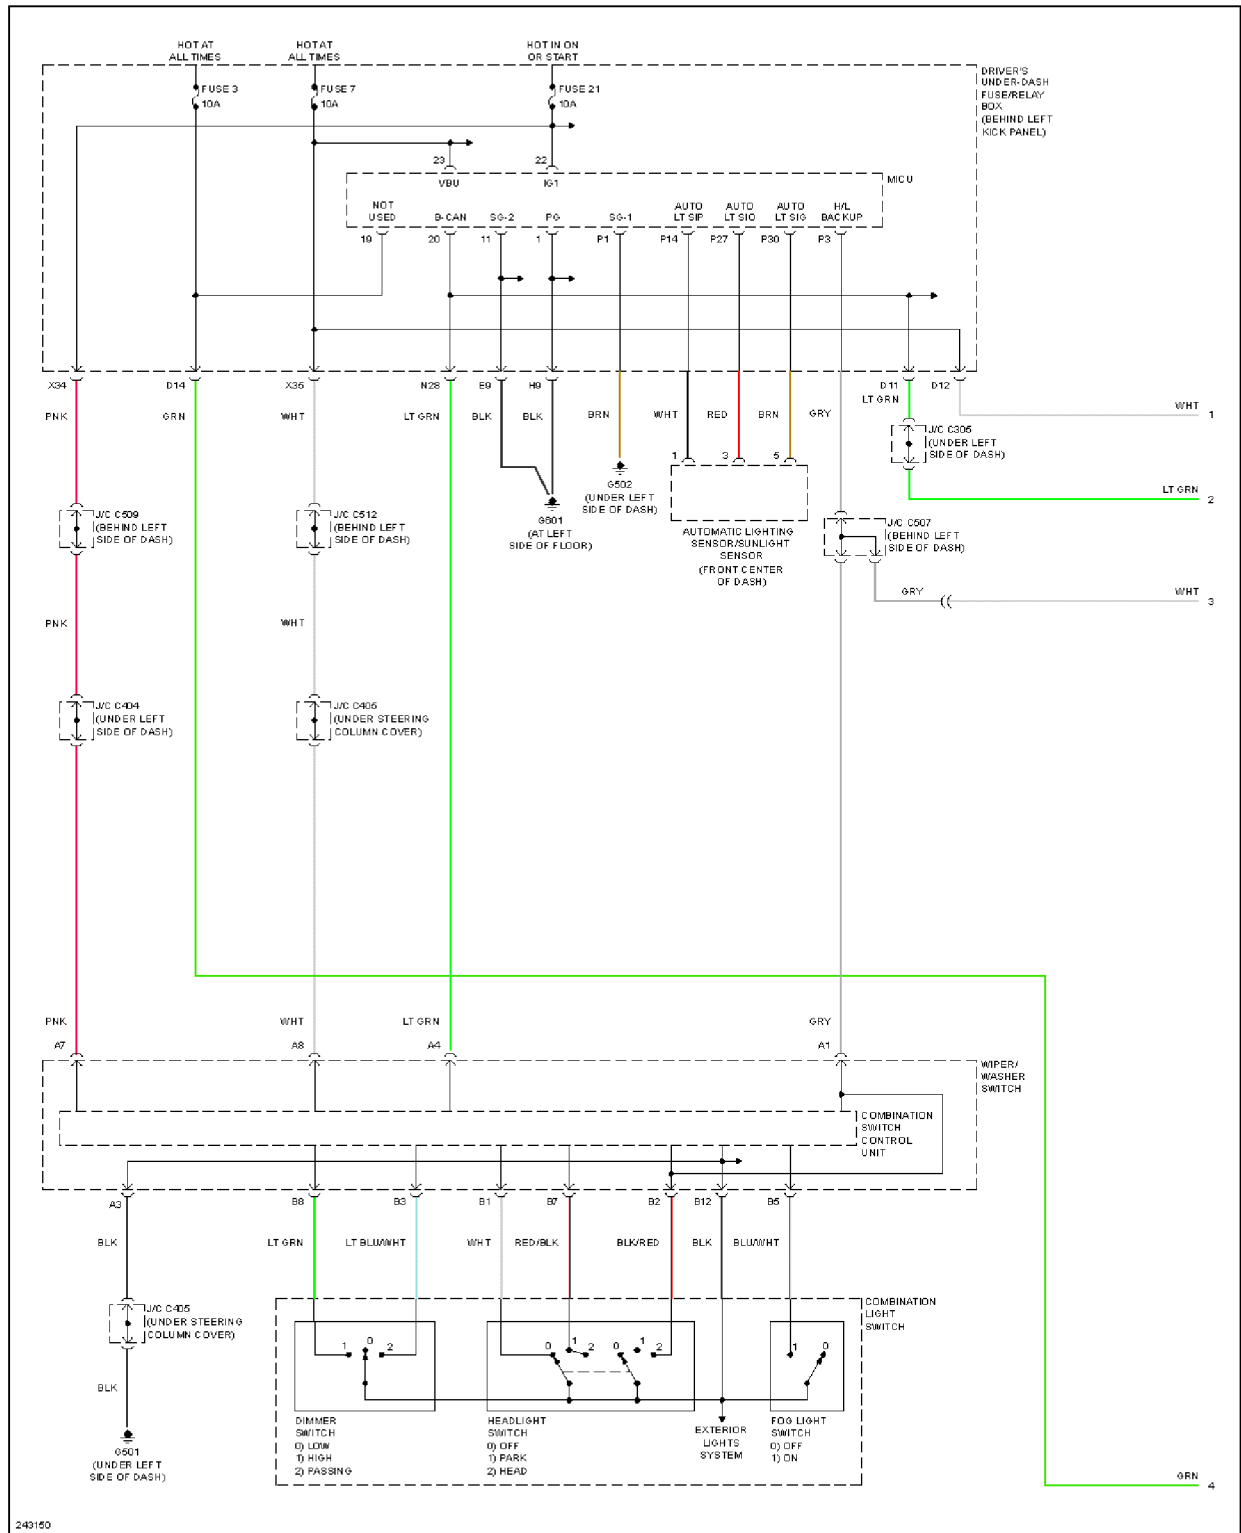


Fig. 43: Headlamps & Fog Lamps Circuit, Canada (1 of 2)

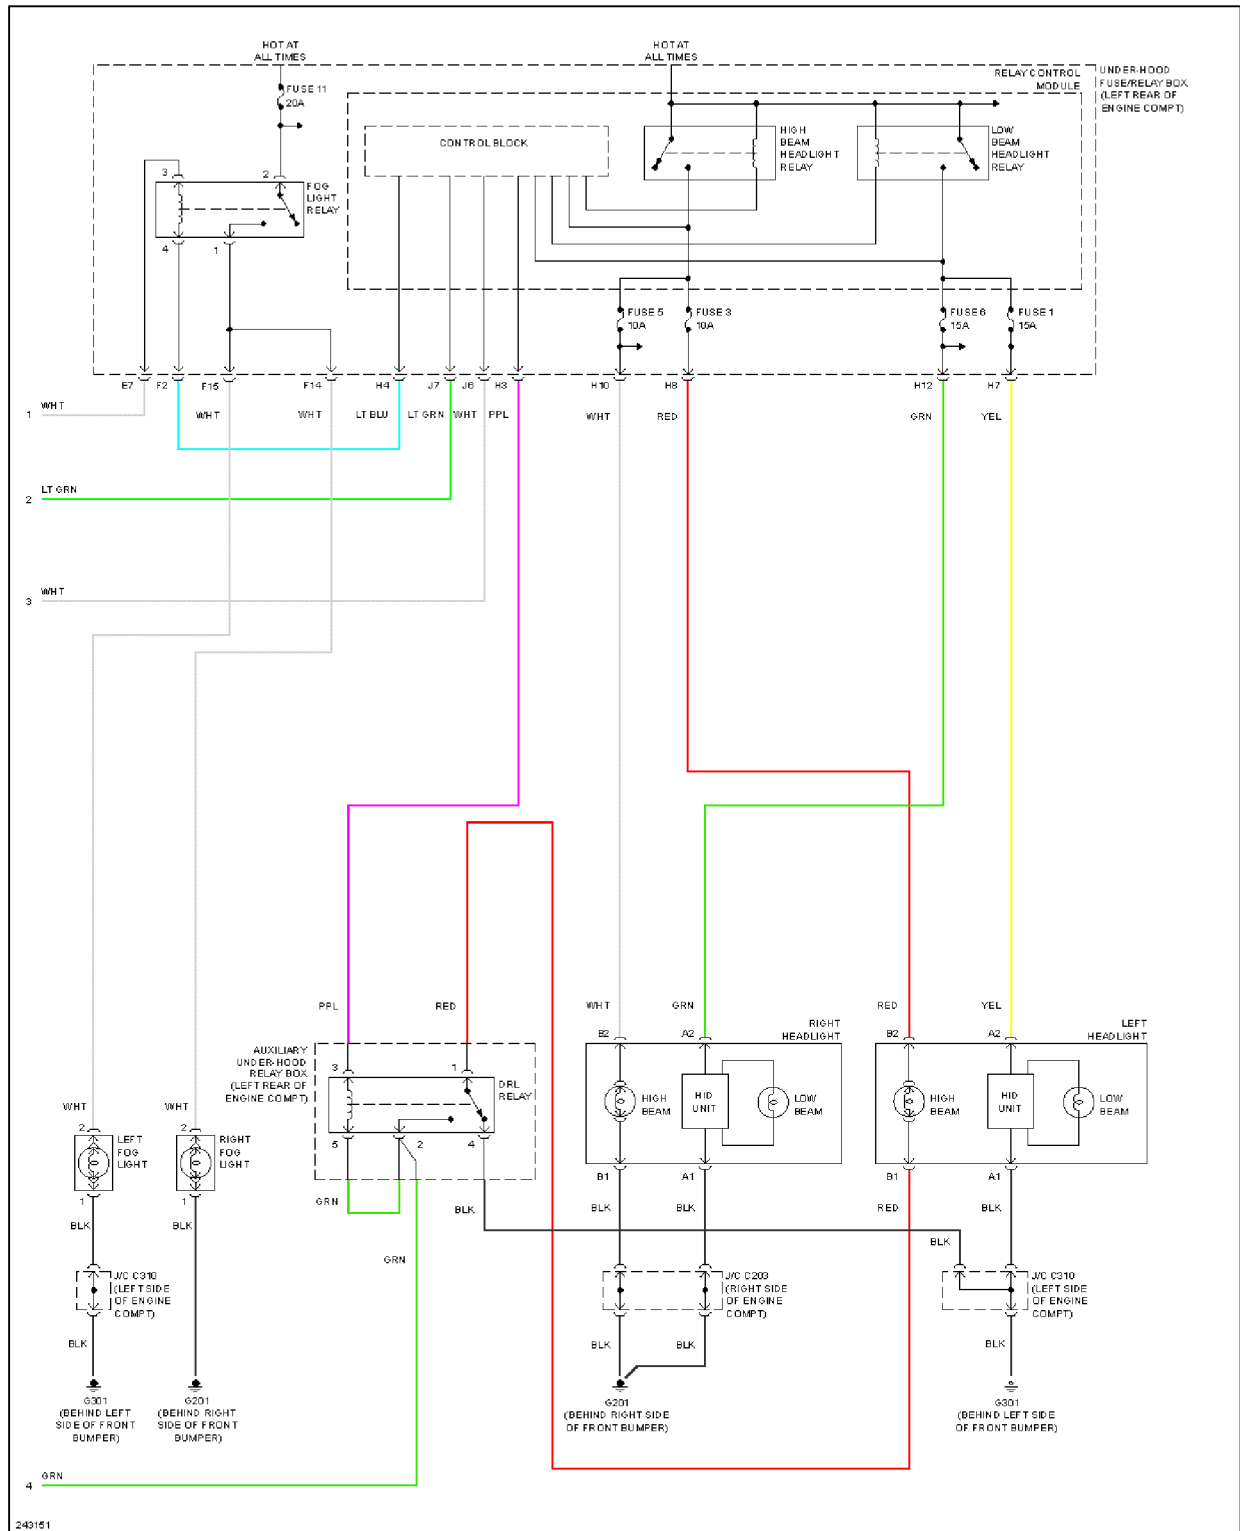


Fig. 44: Headlamps & Fog Lamps Circuit, Canada (2 of 2)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



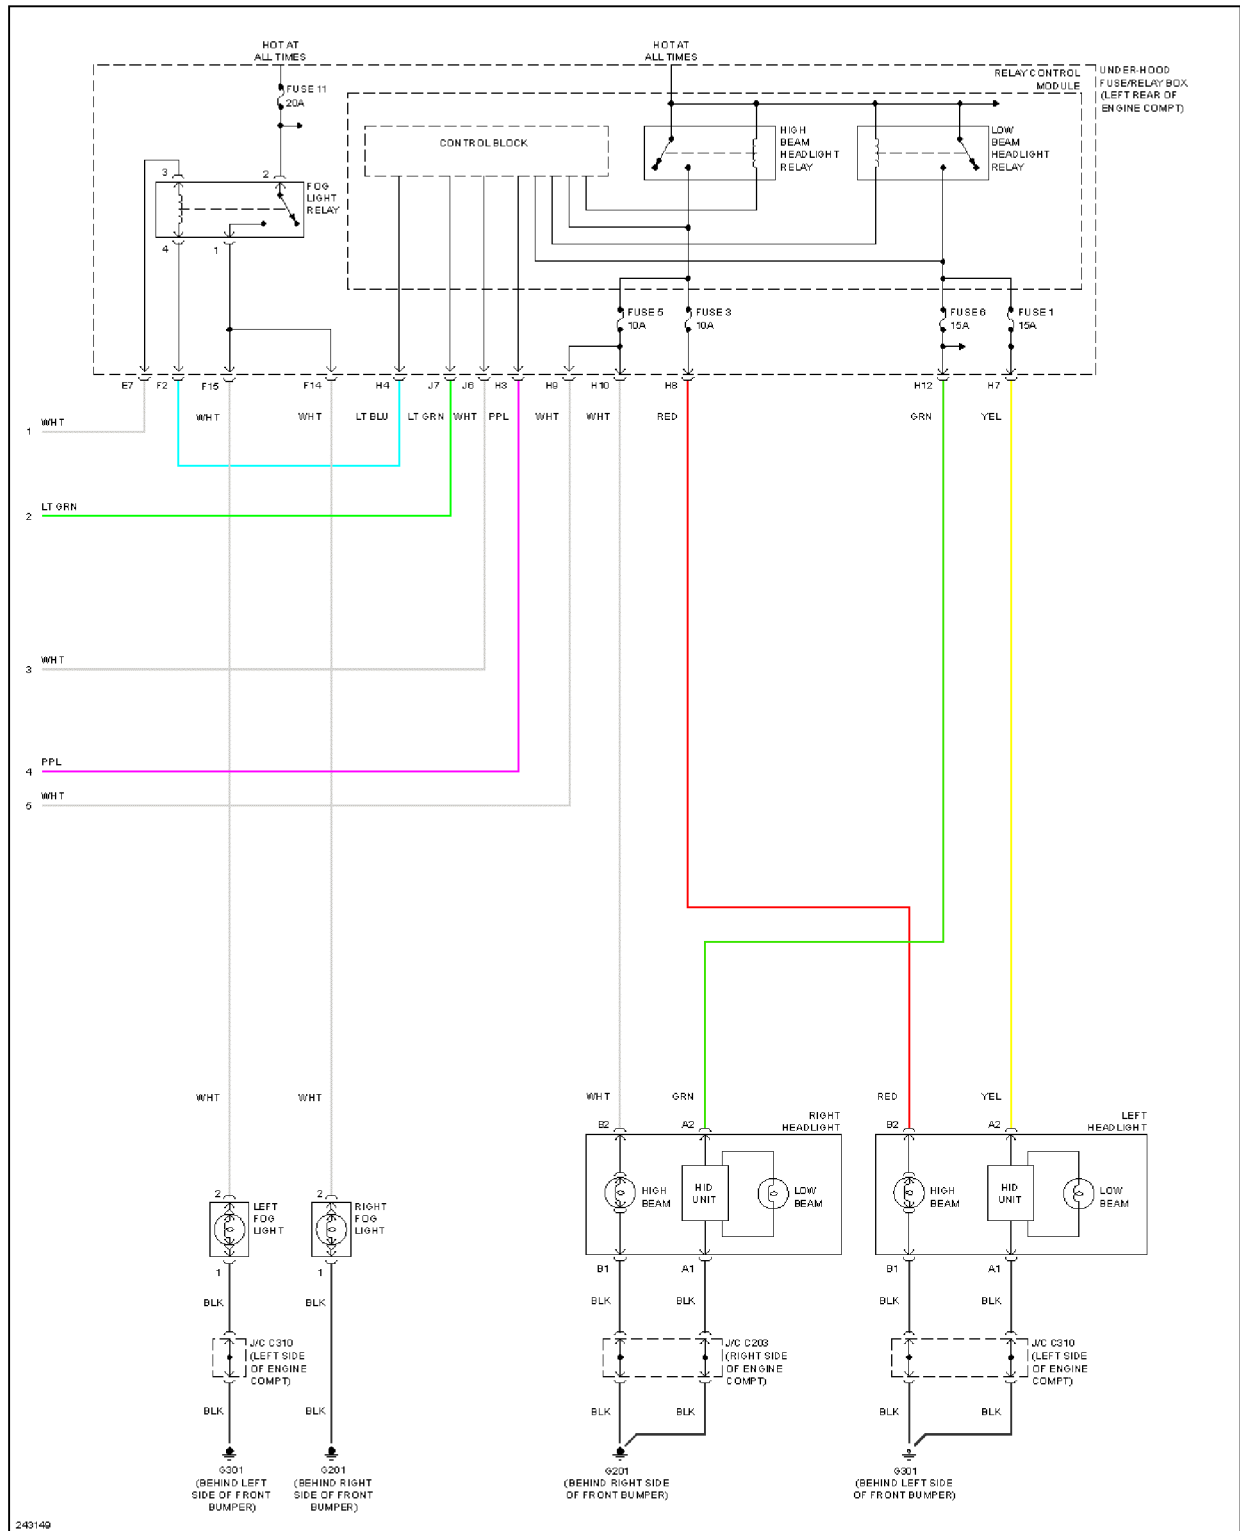


Fig. 46: Headlamps & Fog Lamps Circuit, USA (2 of 2)

HORN

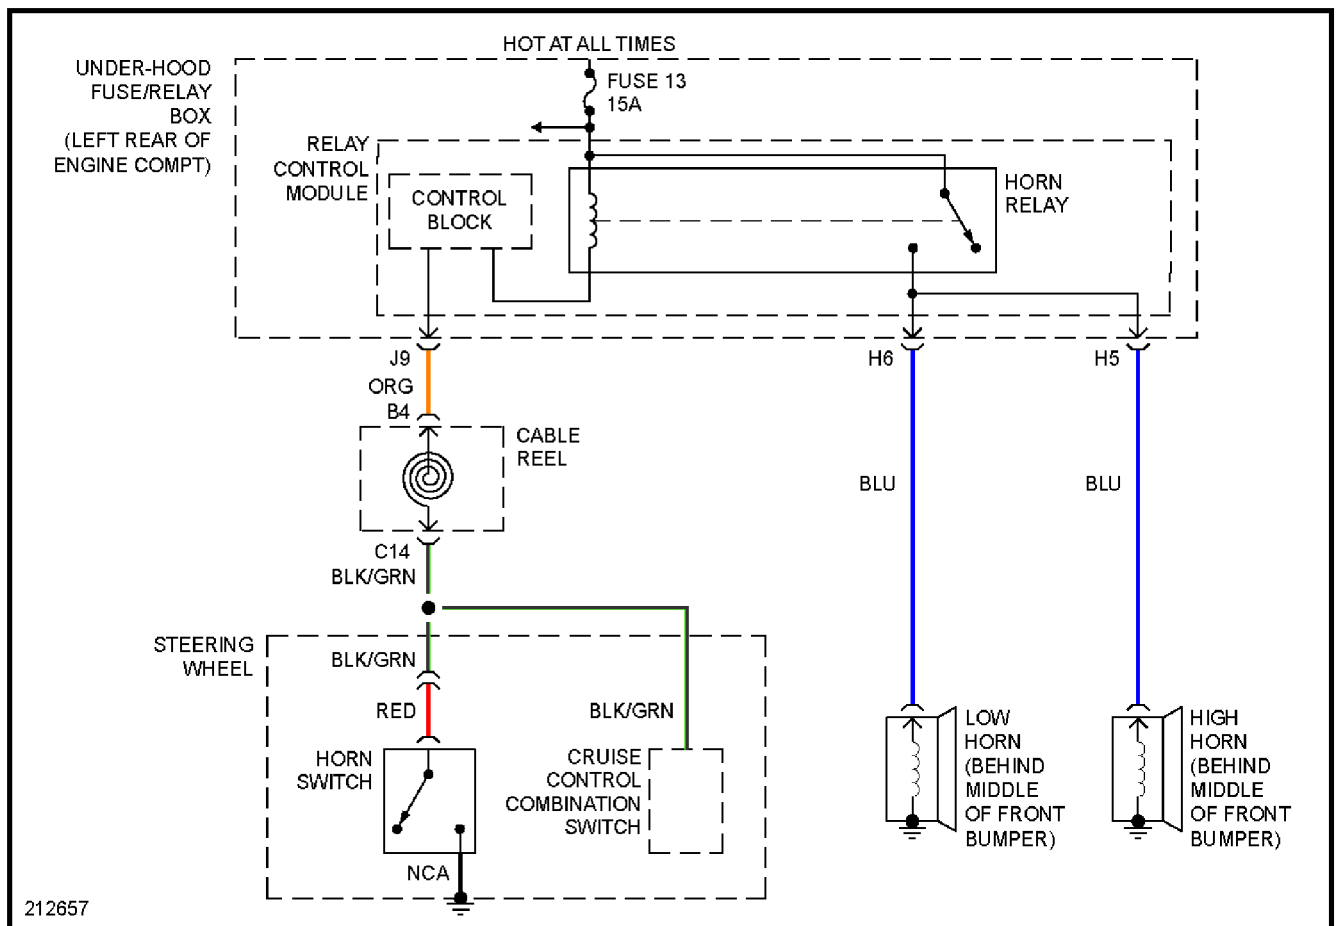


Fig. 47: Horn Circuit

INSTRUMENT CLUSTER

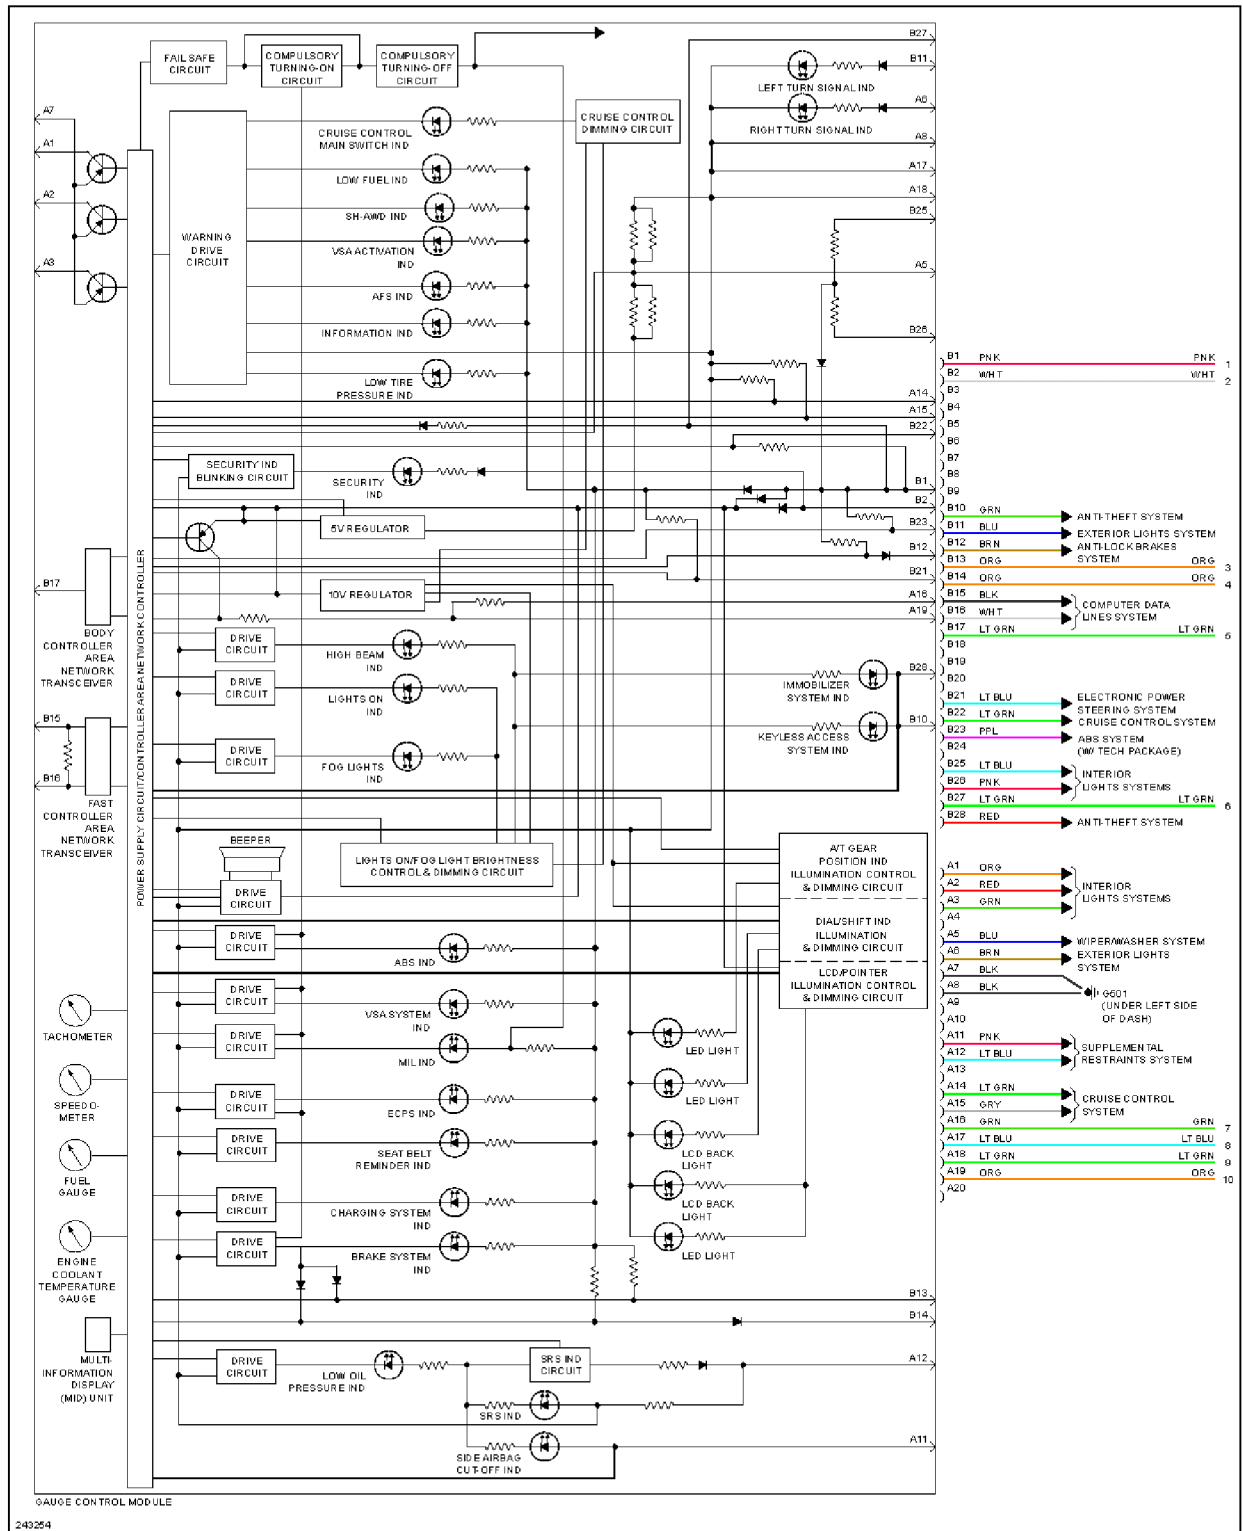


Fig. 48: Instrument Cluster Circuit (1 of 2)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

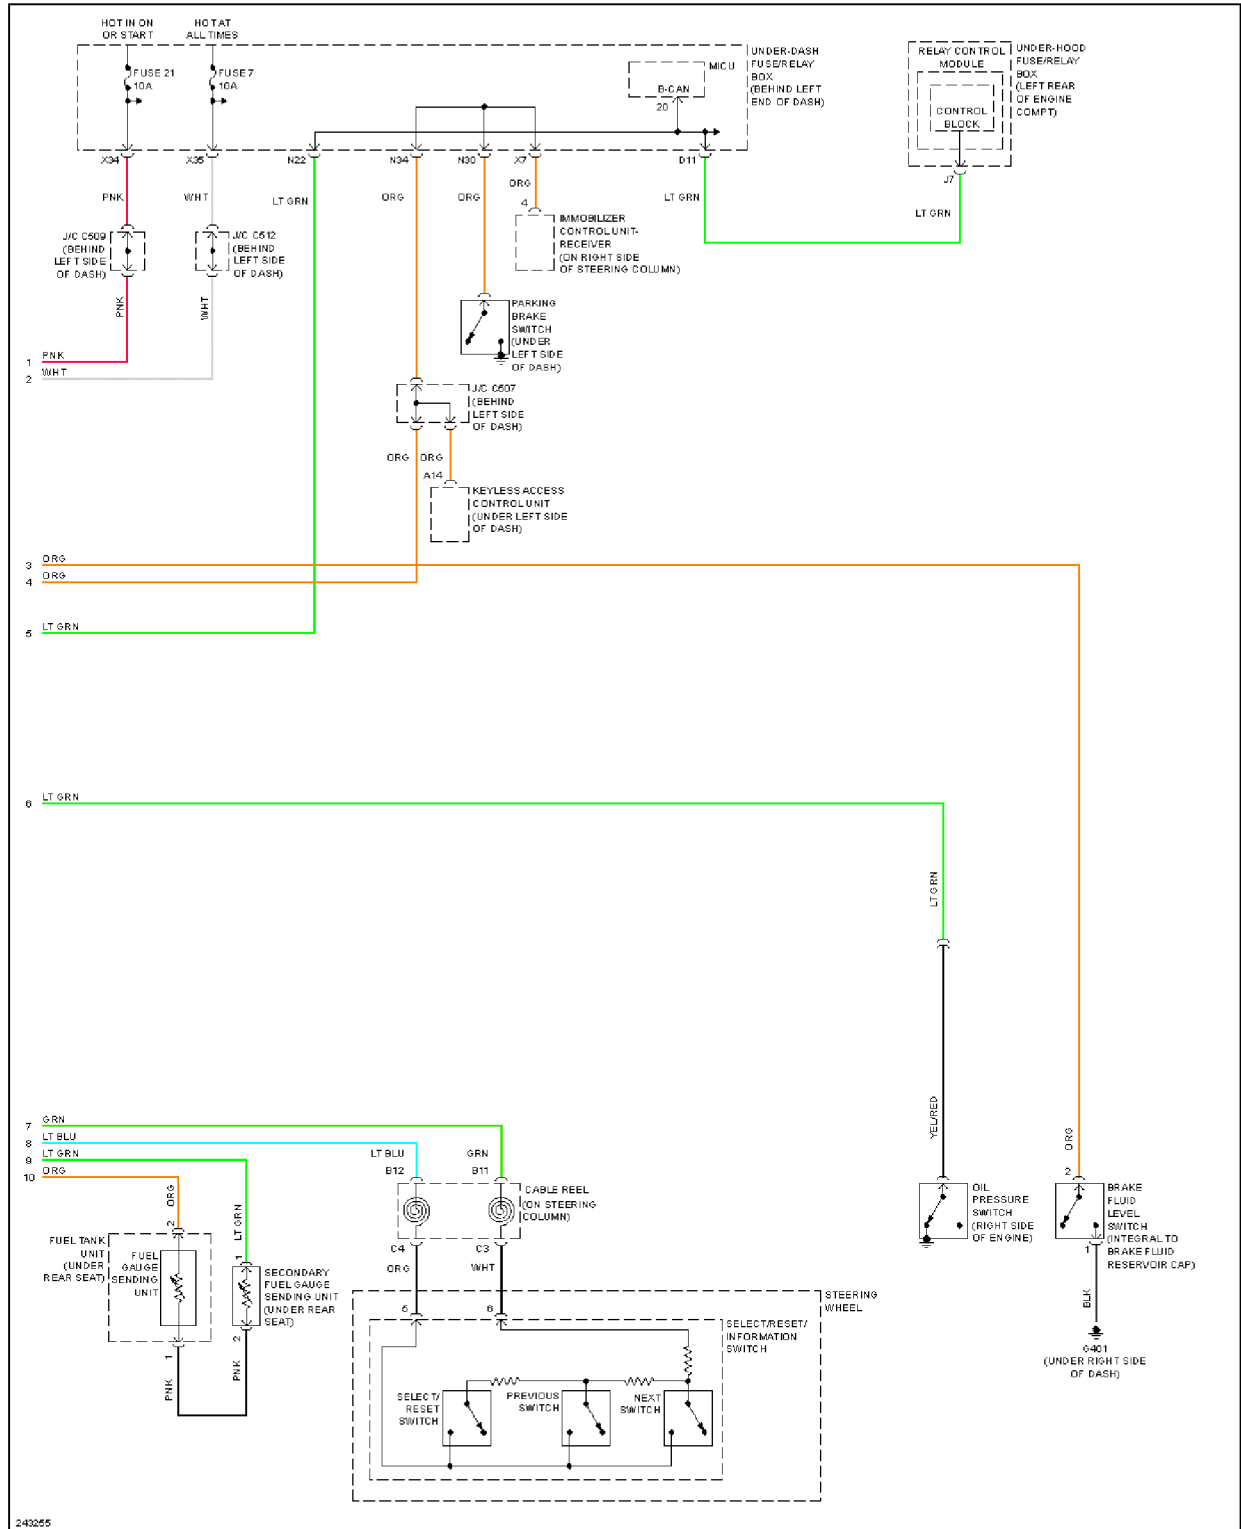


Fig. 49: Instrument Cluster Circuit (2 of 2)

INTERIOR LIGHTS

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

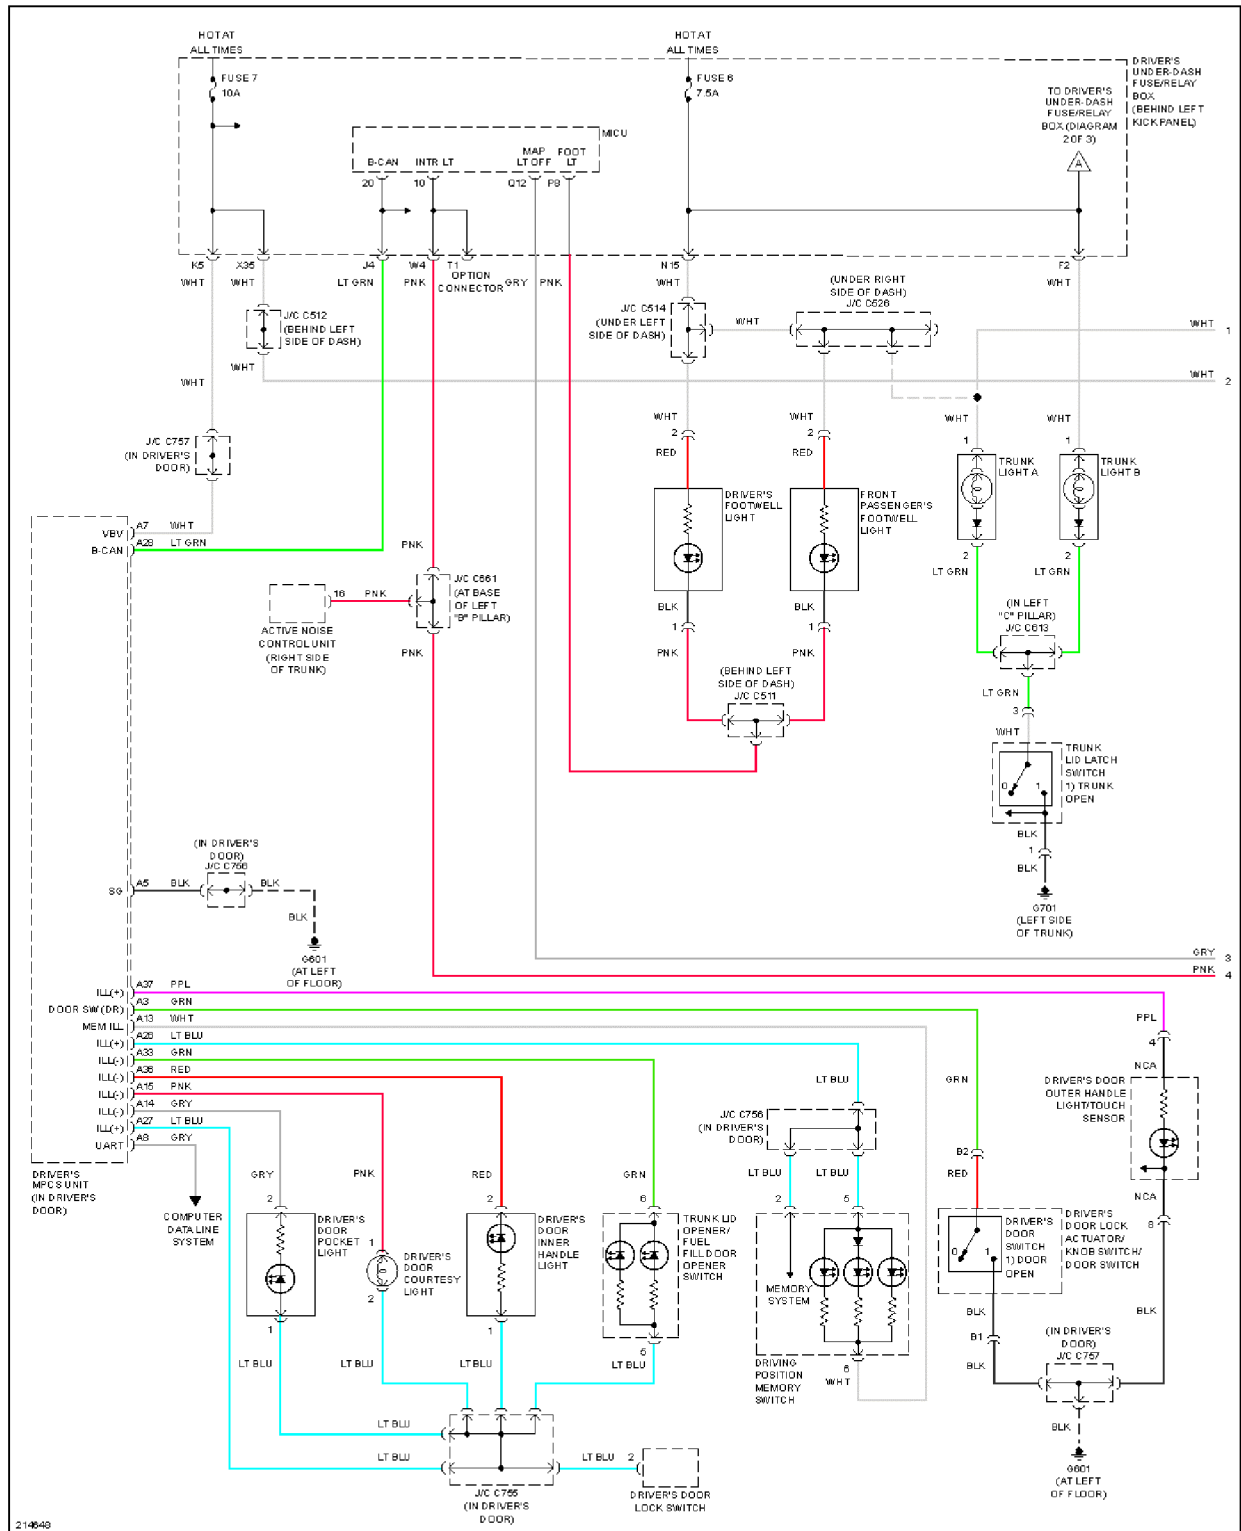


Fig. 50: Courtesy Lamp Circuit (1 of 3)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



2006 SYSTEM WIRING DIAGRAMS Acura - RL



2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

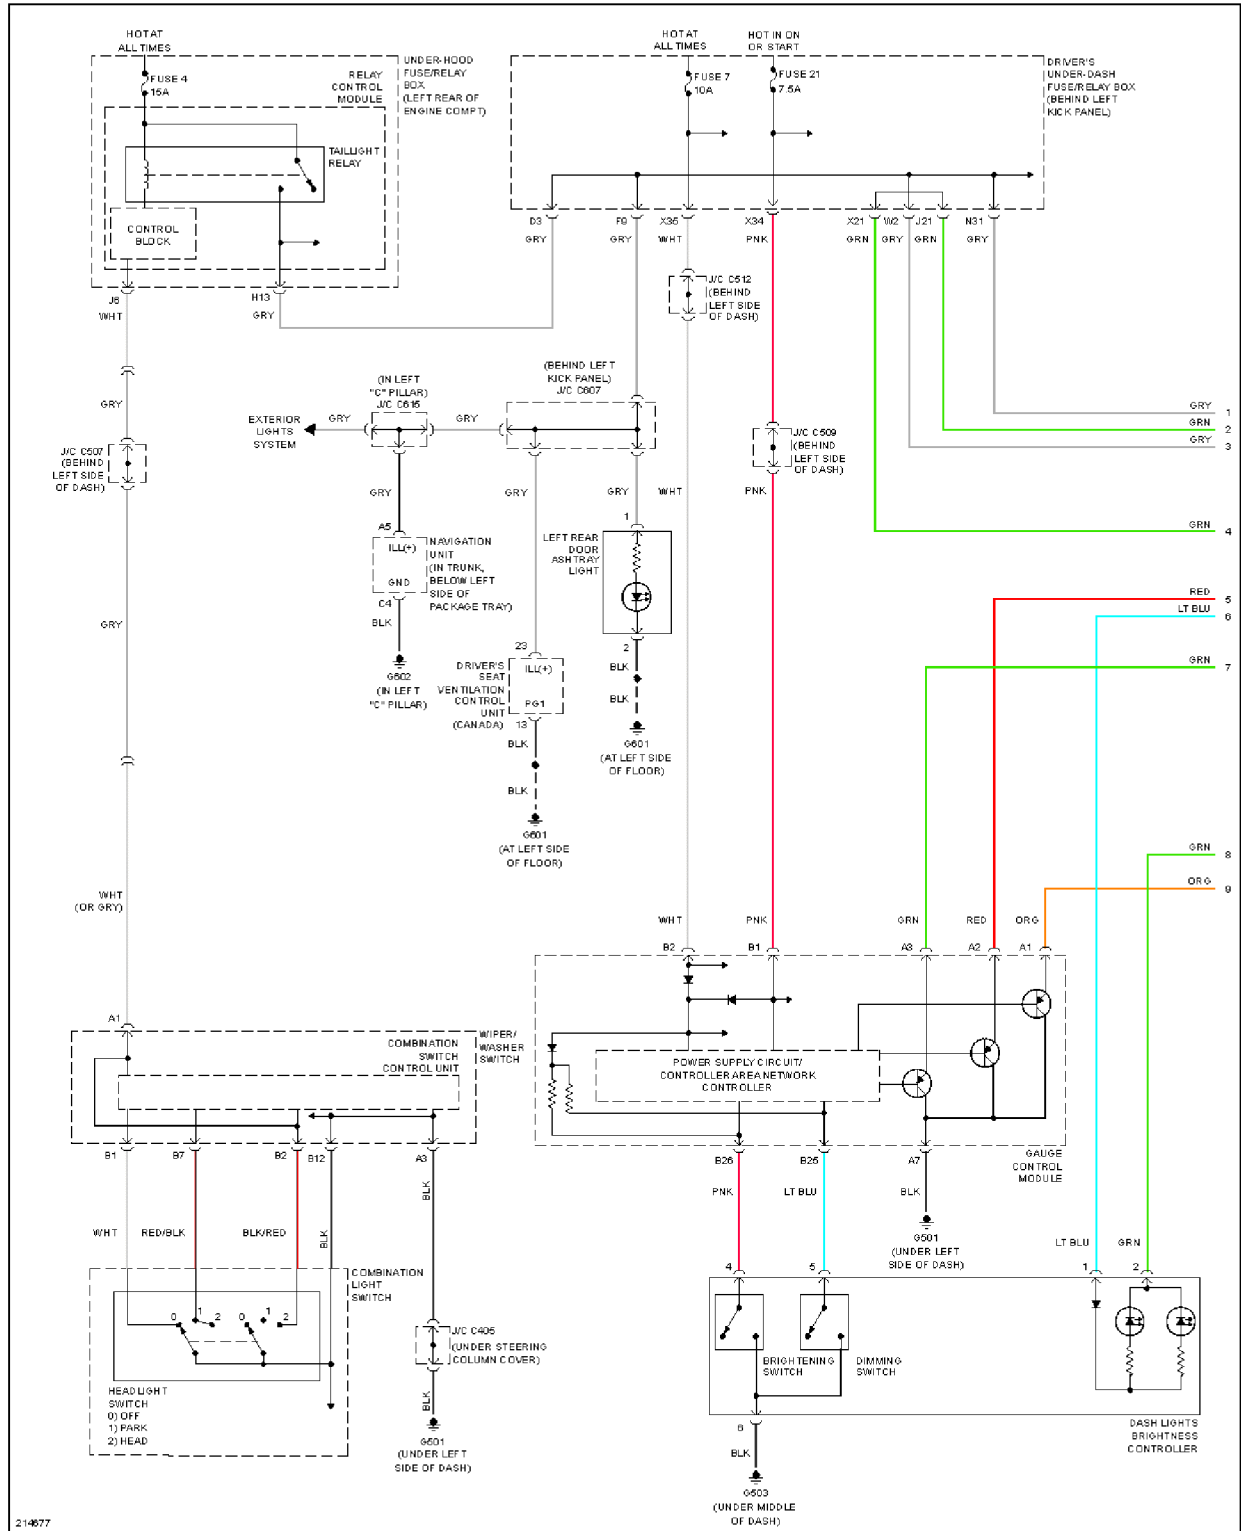


Fig. 53: Instrument Illumination Circuit (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

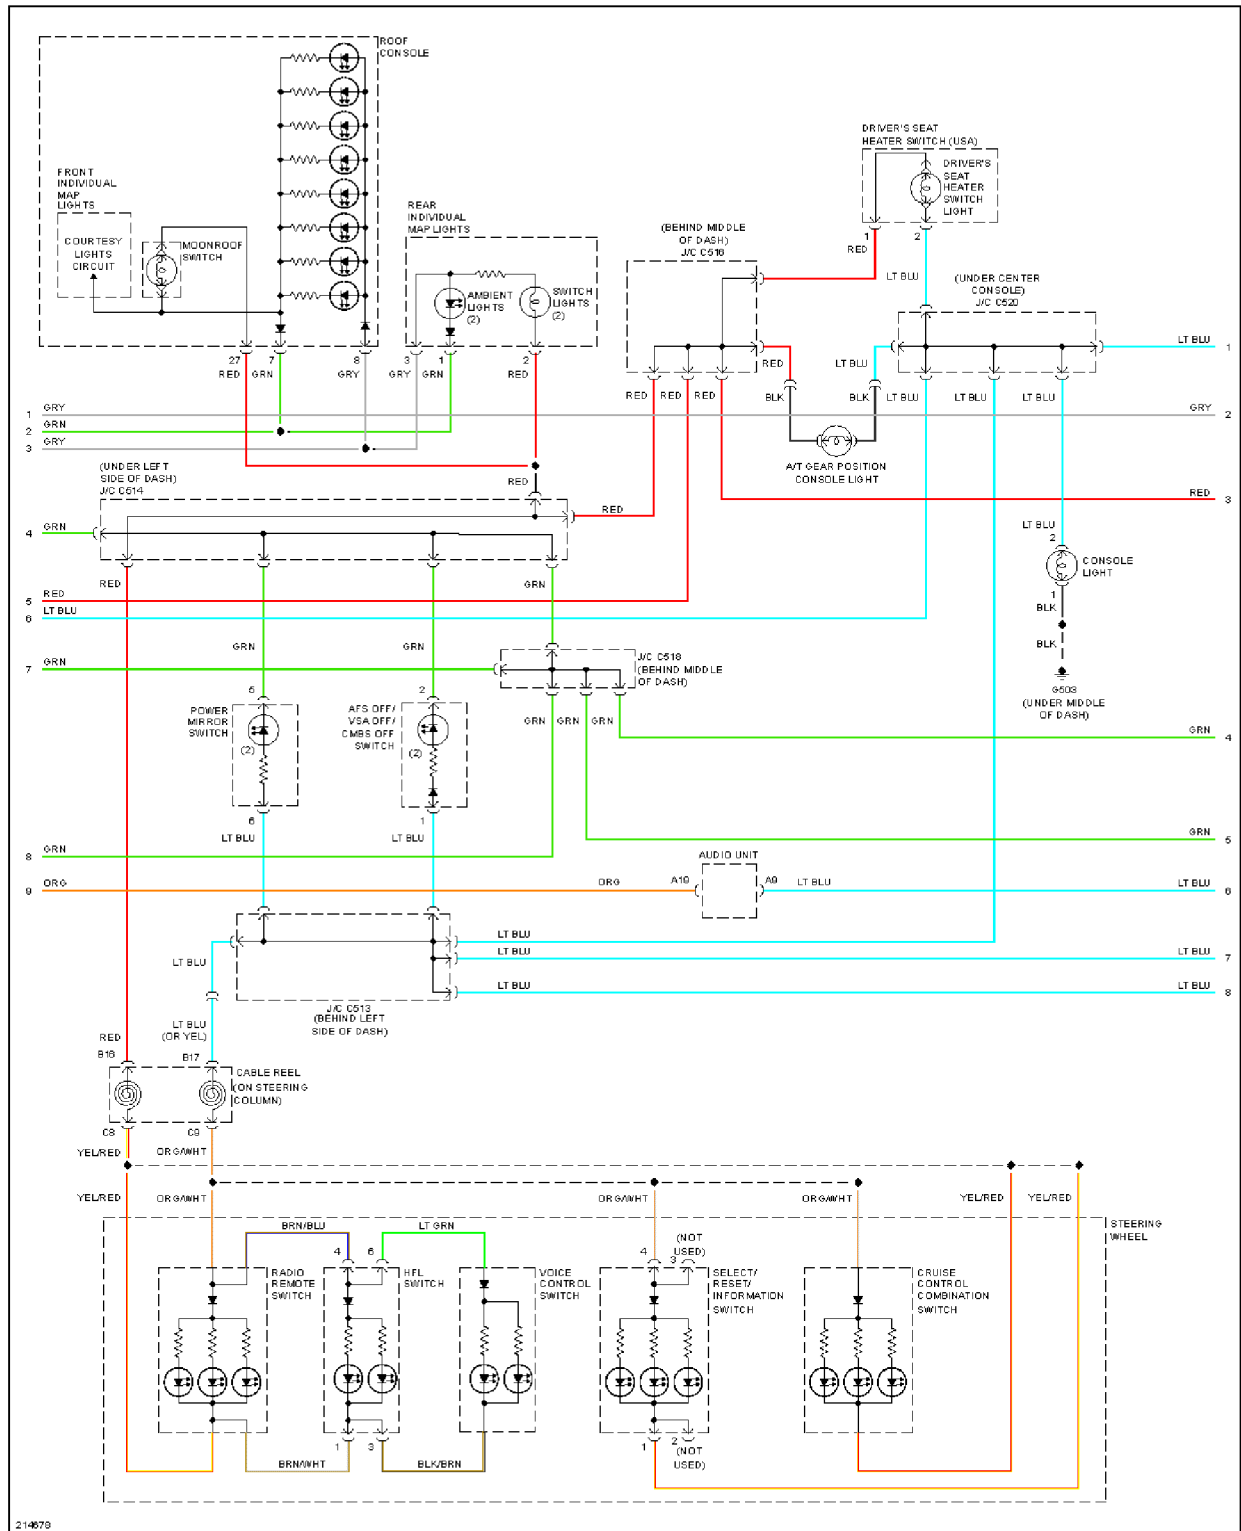


Fig. 54: Instrument Illumination Circuit (2 of 3)

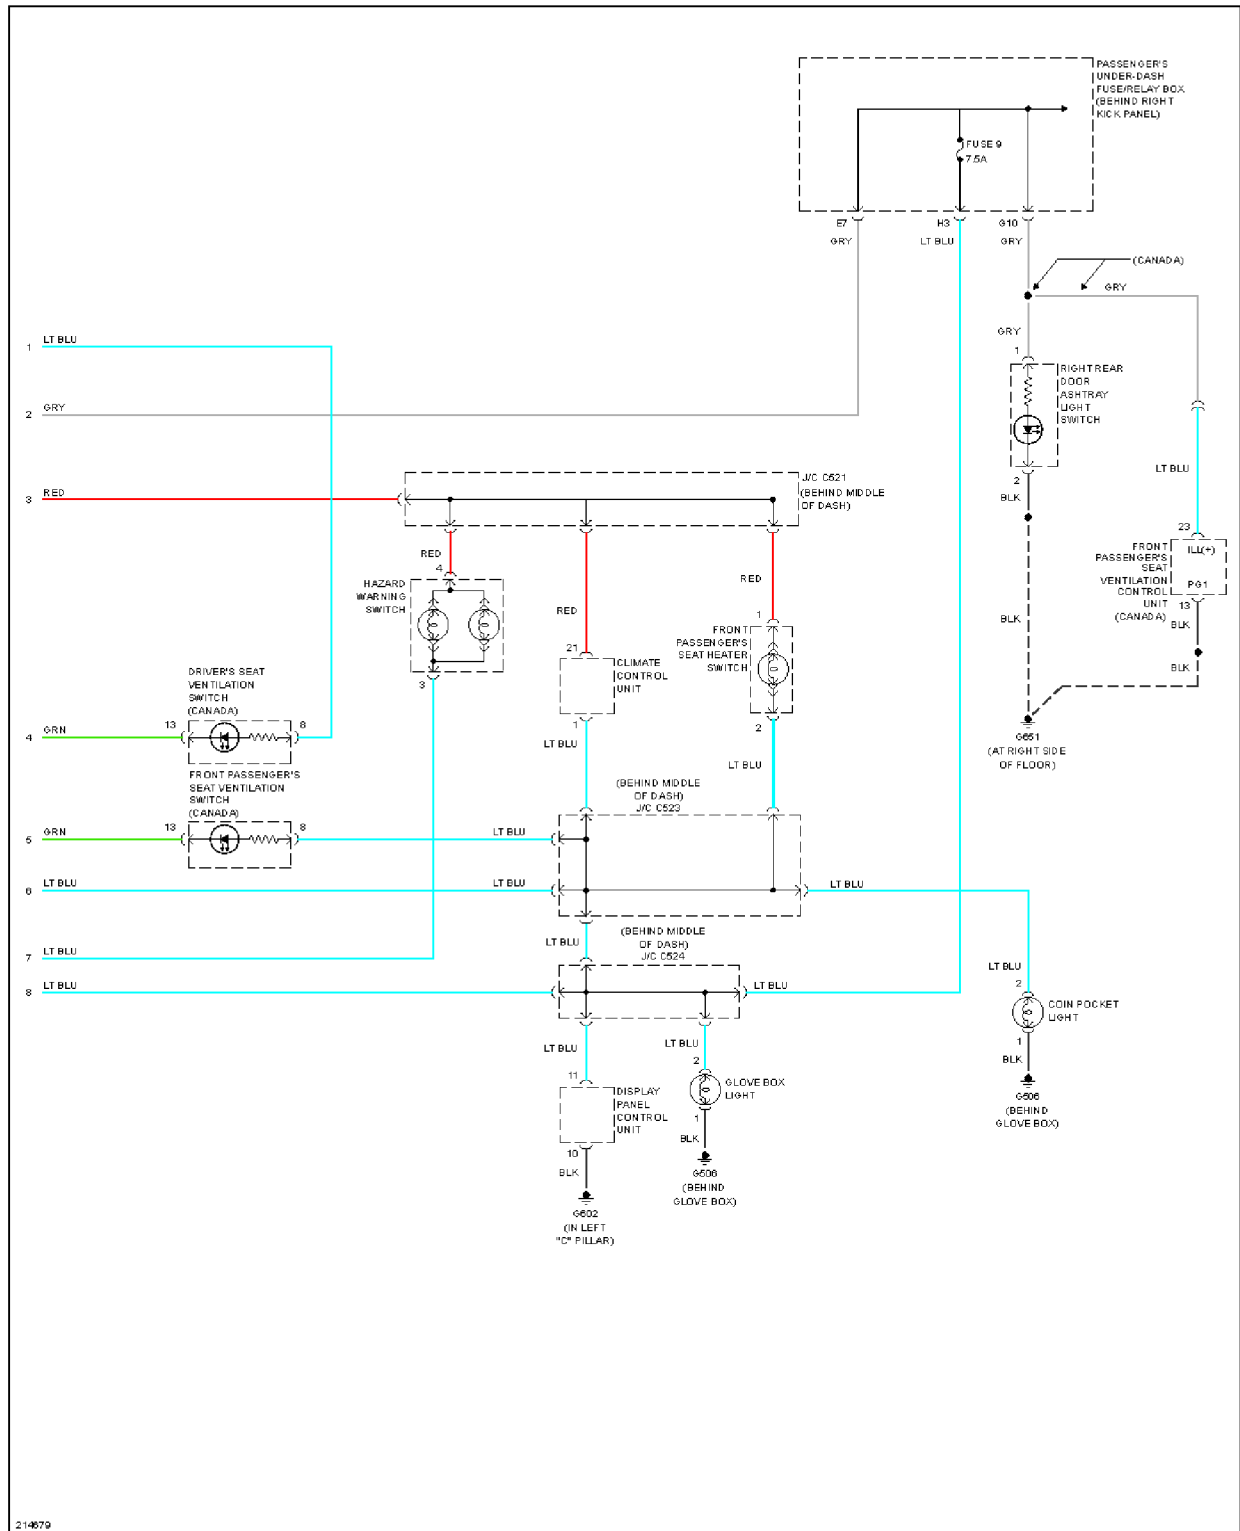


Fig. 55: Instrument Illumination Circuit (3 of 3)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 56: Memory Systems Circuit (1 of 4)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

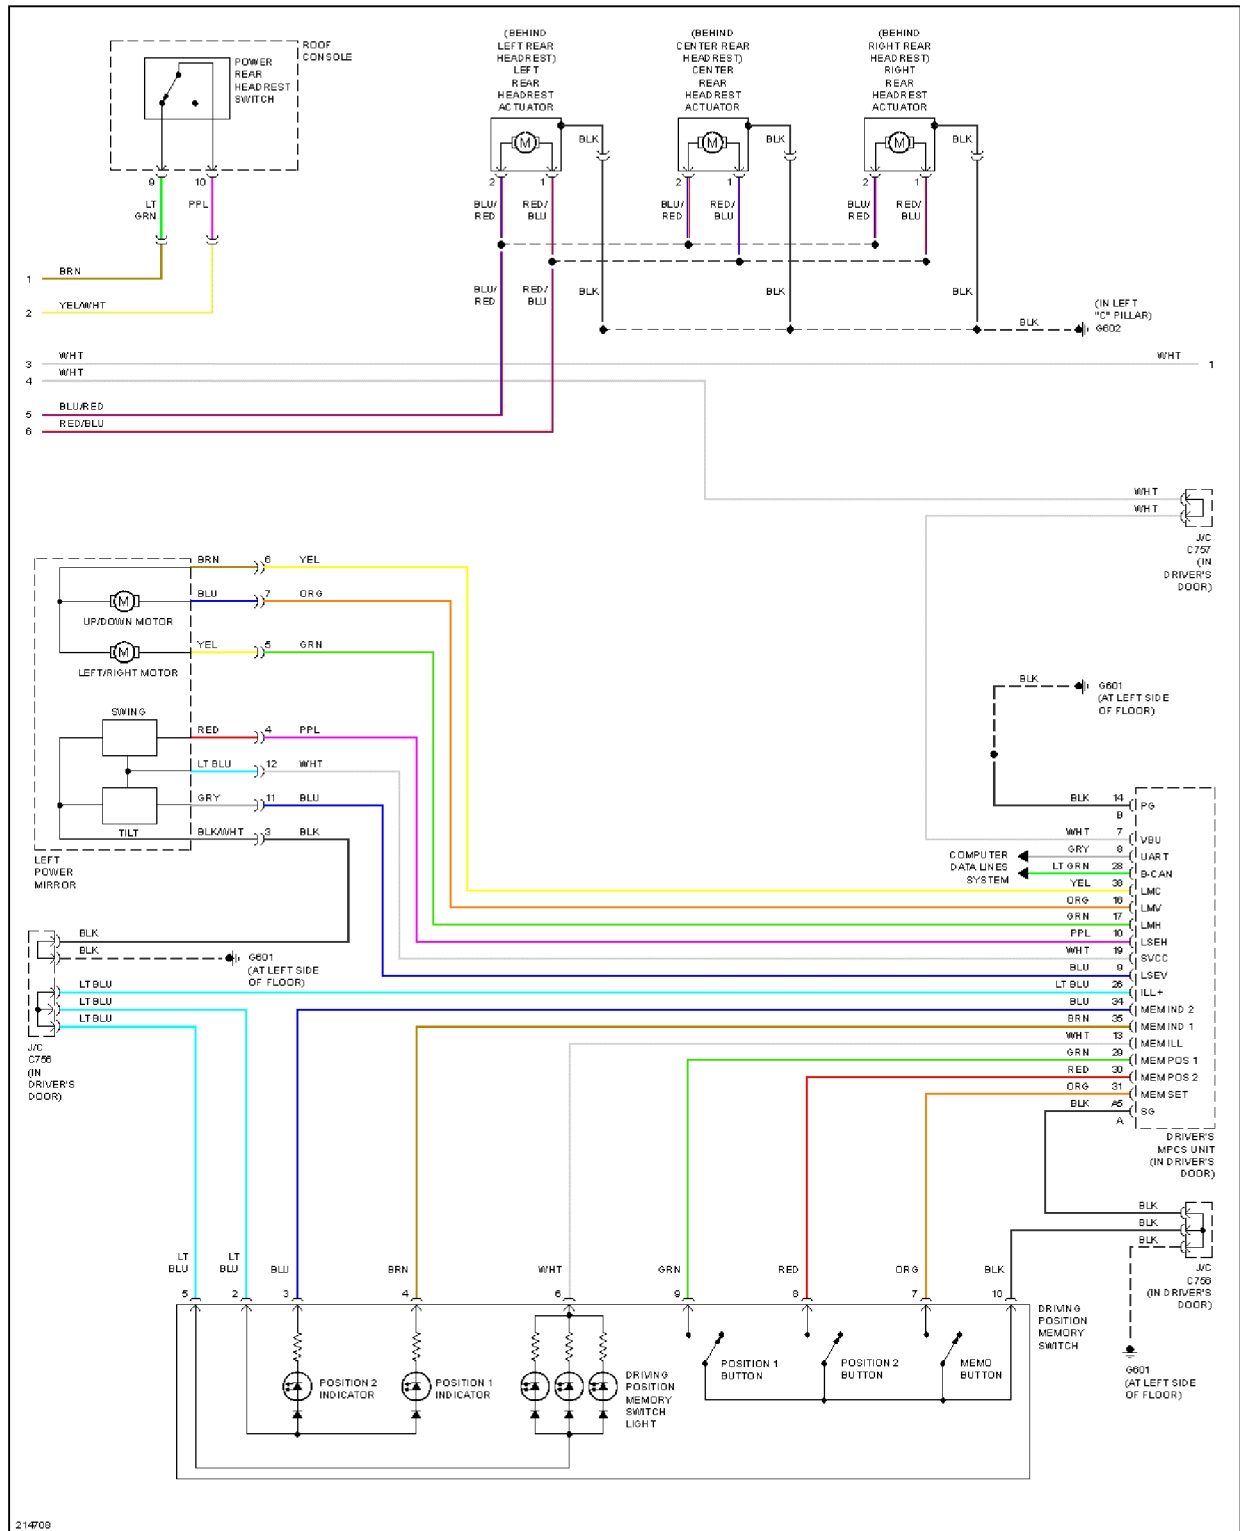


Fig. 57: Memory Systems Circuit (2 of 4)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

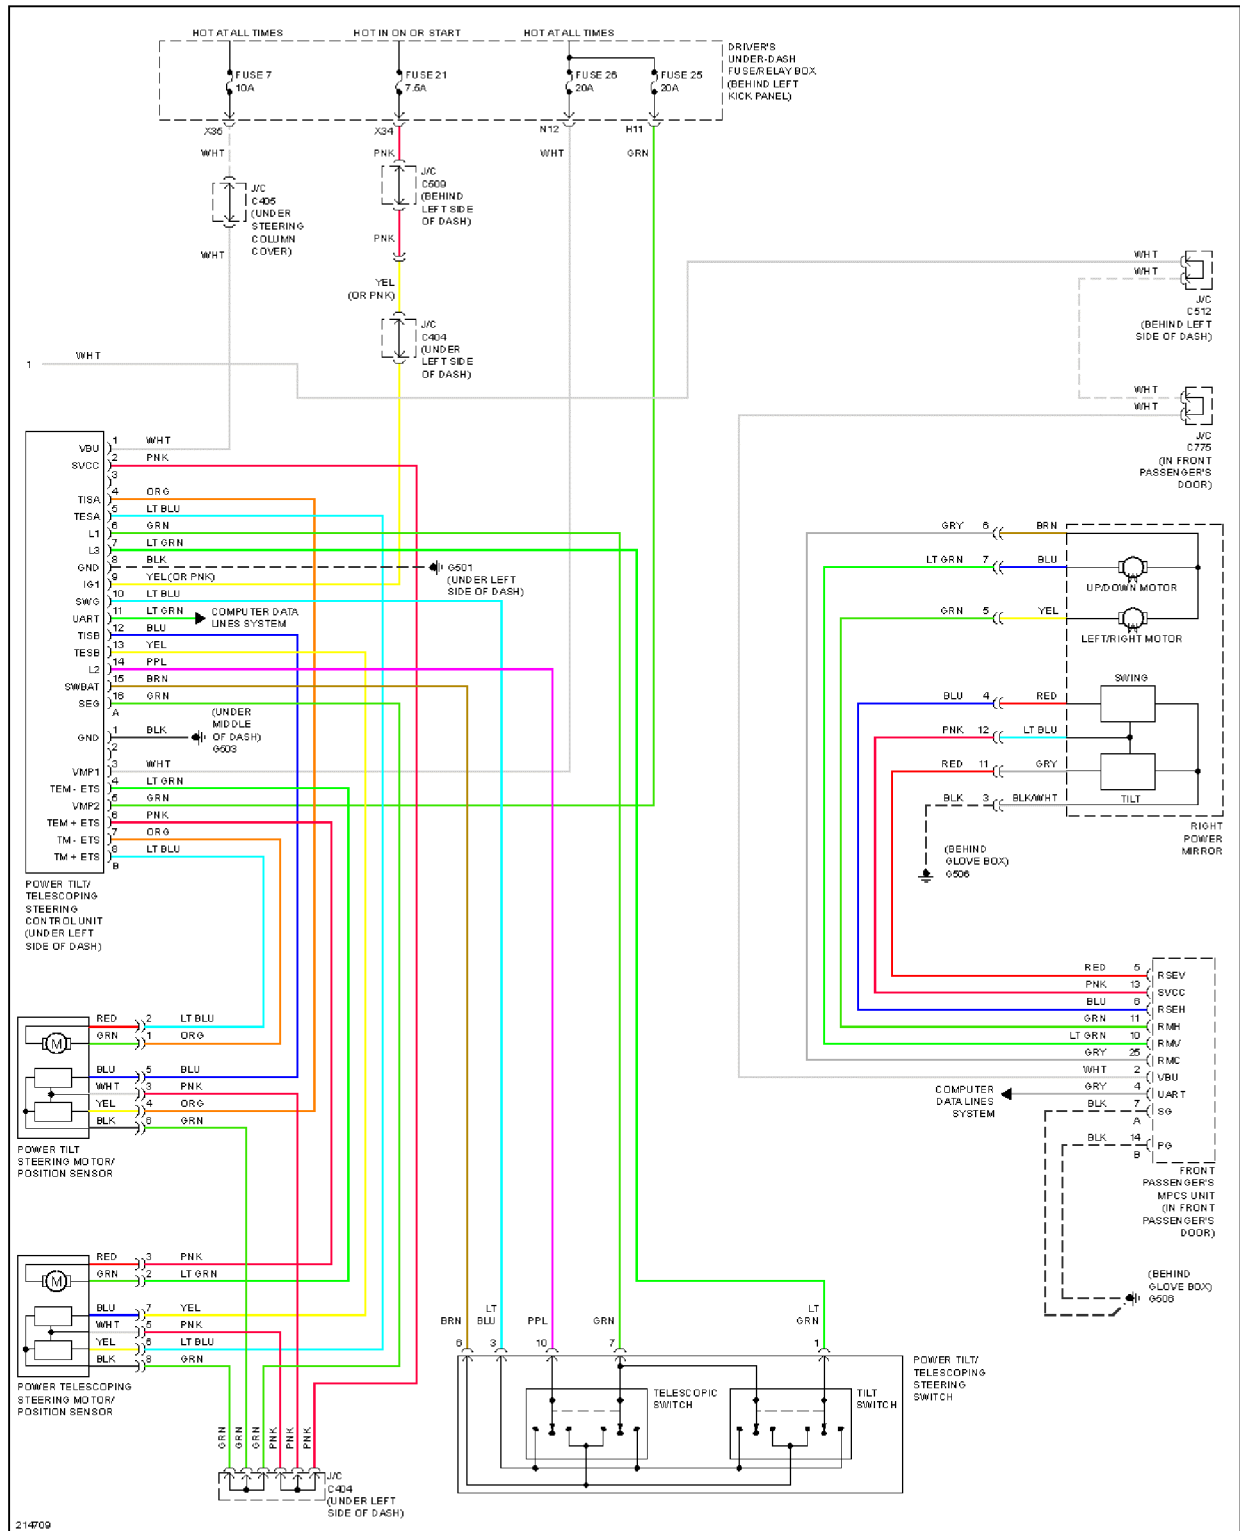


Fig. 58: Memory Systems Circuit (3 of 4)


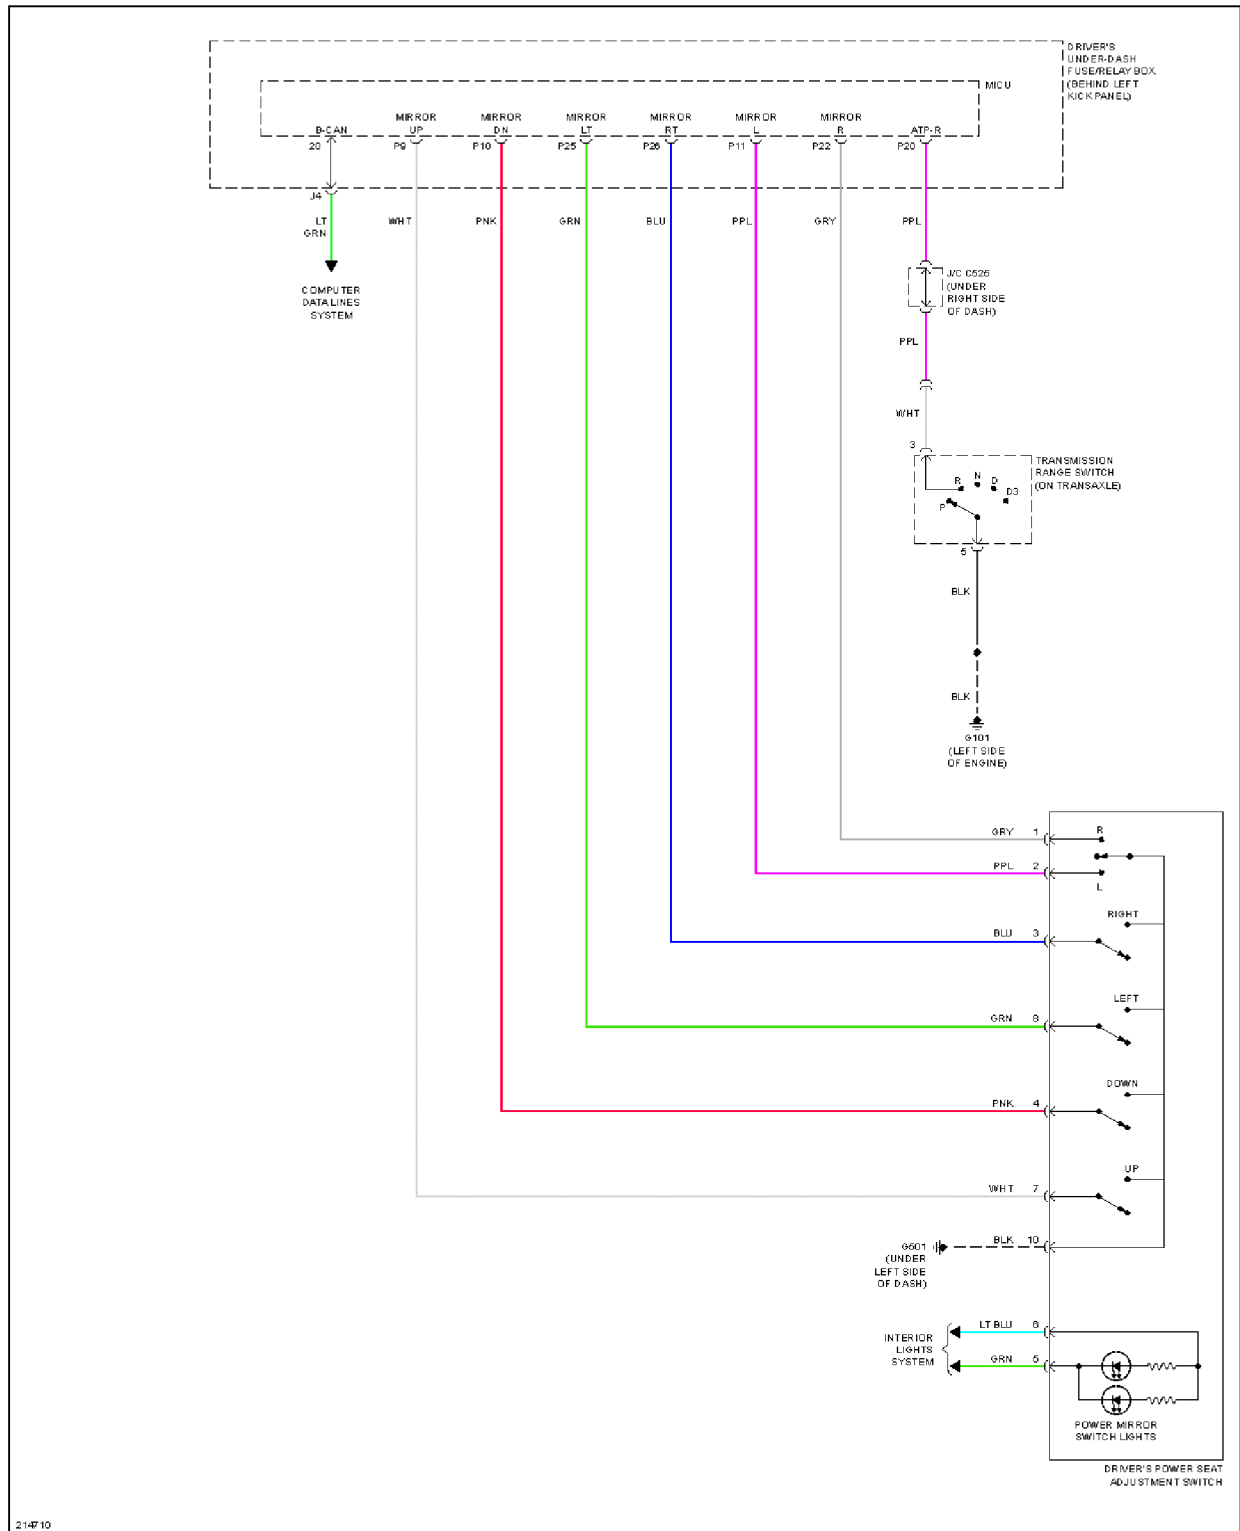


Fig. 59: Memory Systems Circuit (4 of 4)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

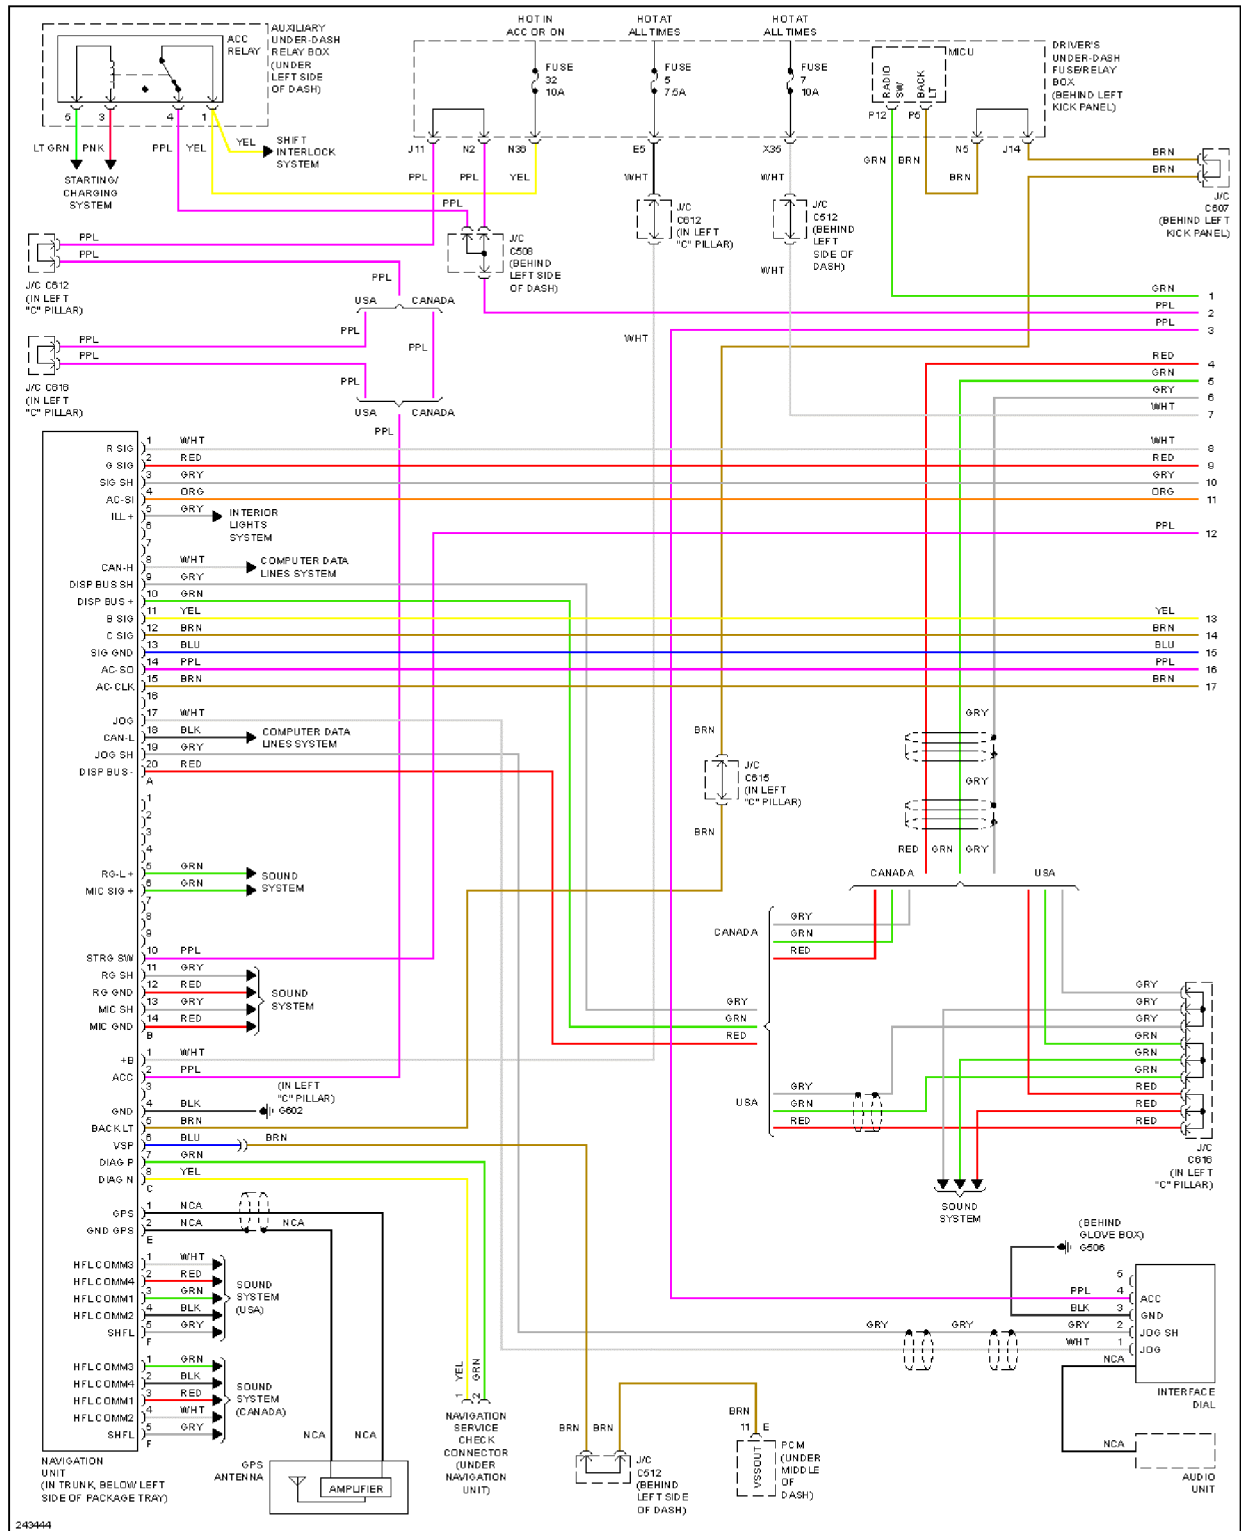

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

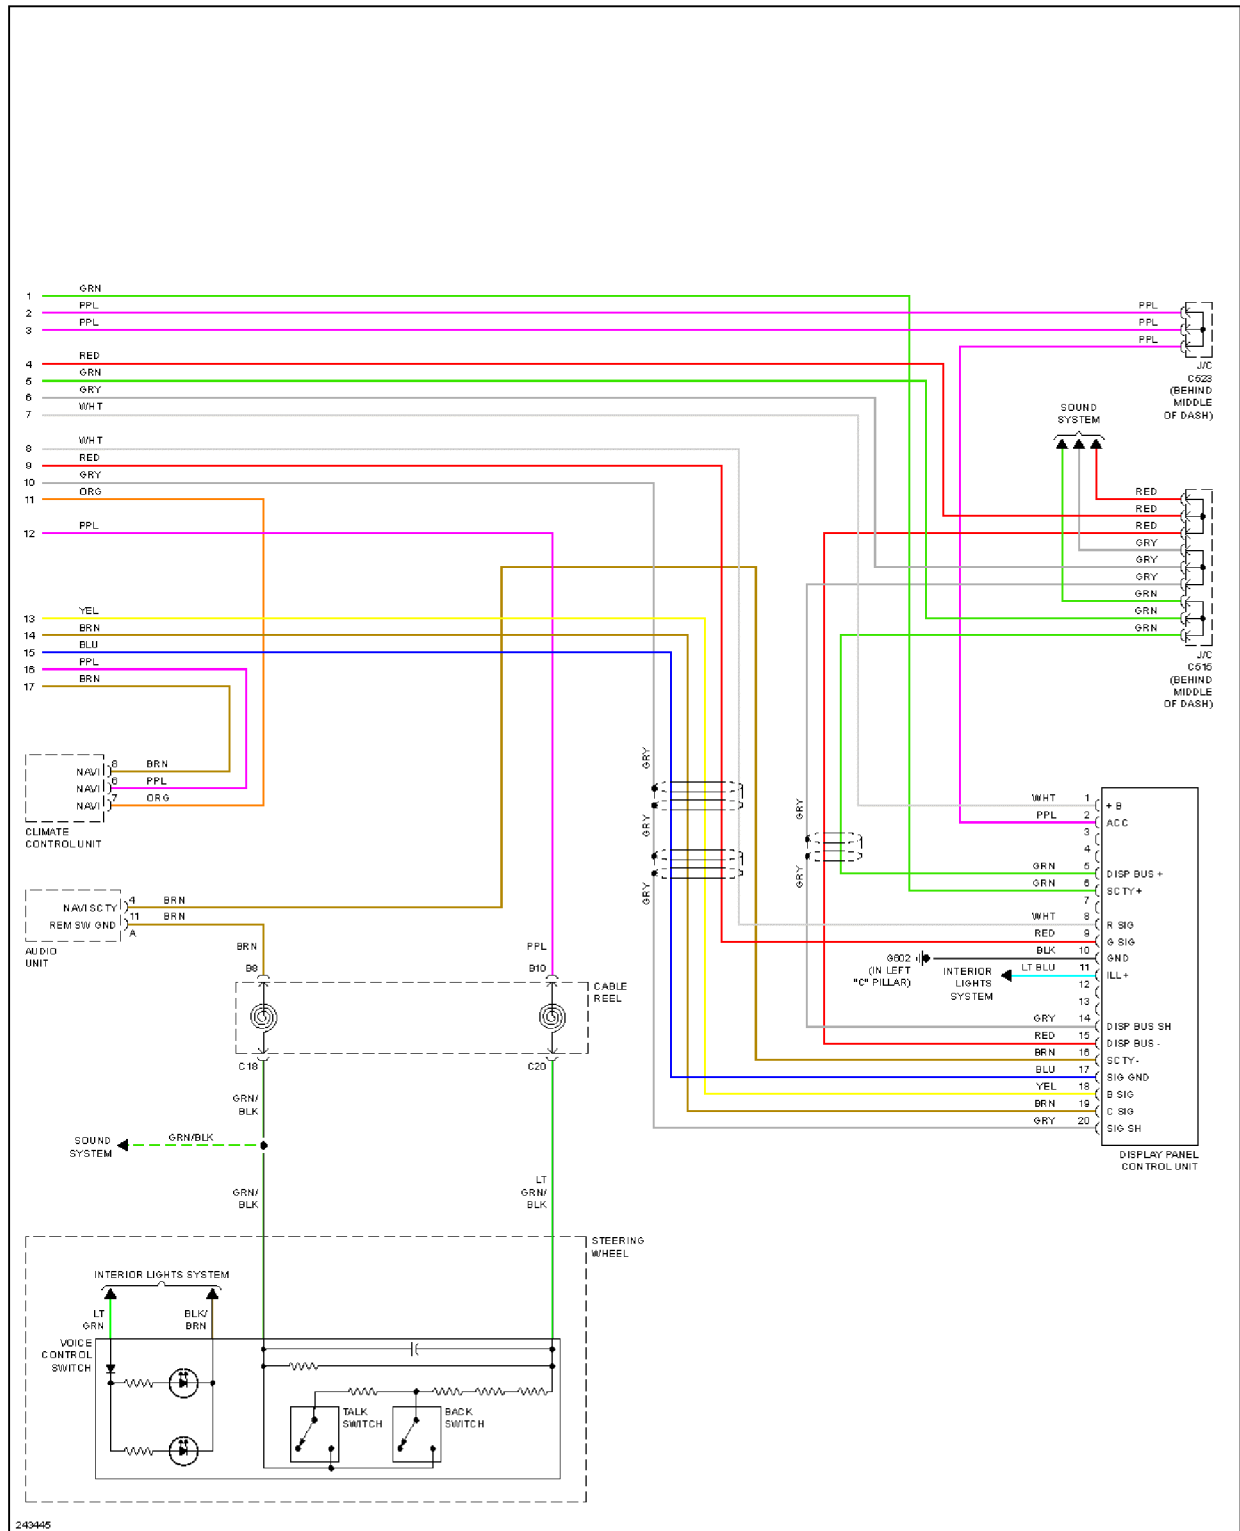


Fig. 61: Navigation Circuit (2 of 2)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



POWER DISTRIBUTION

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

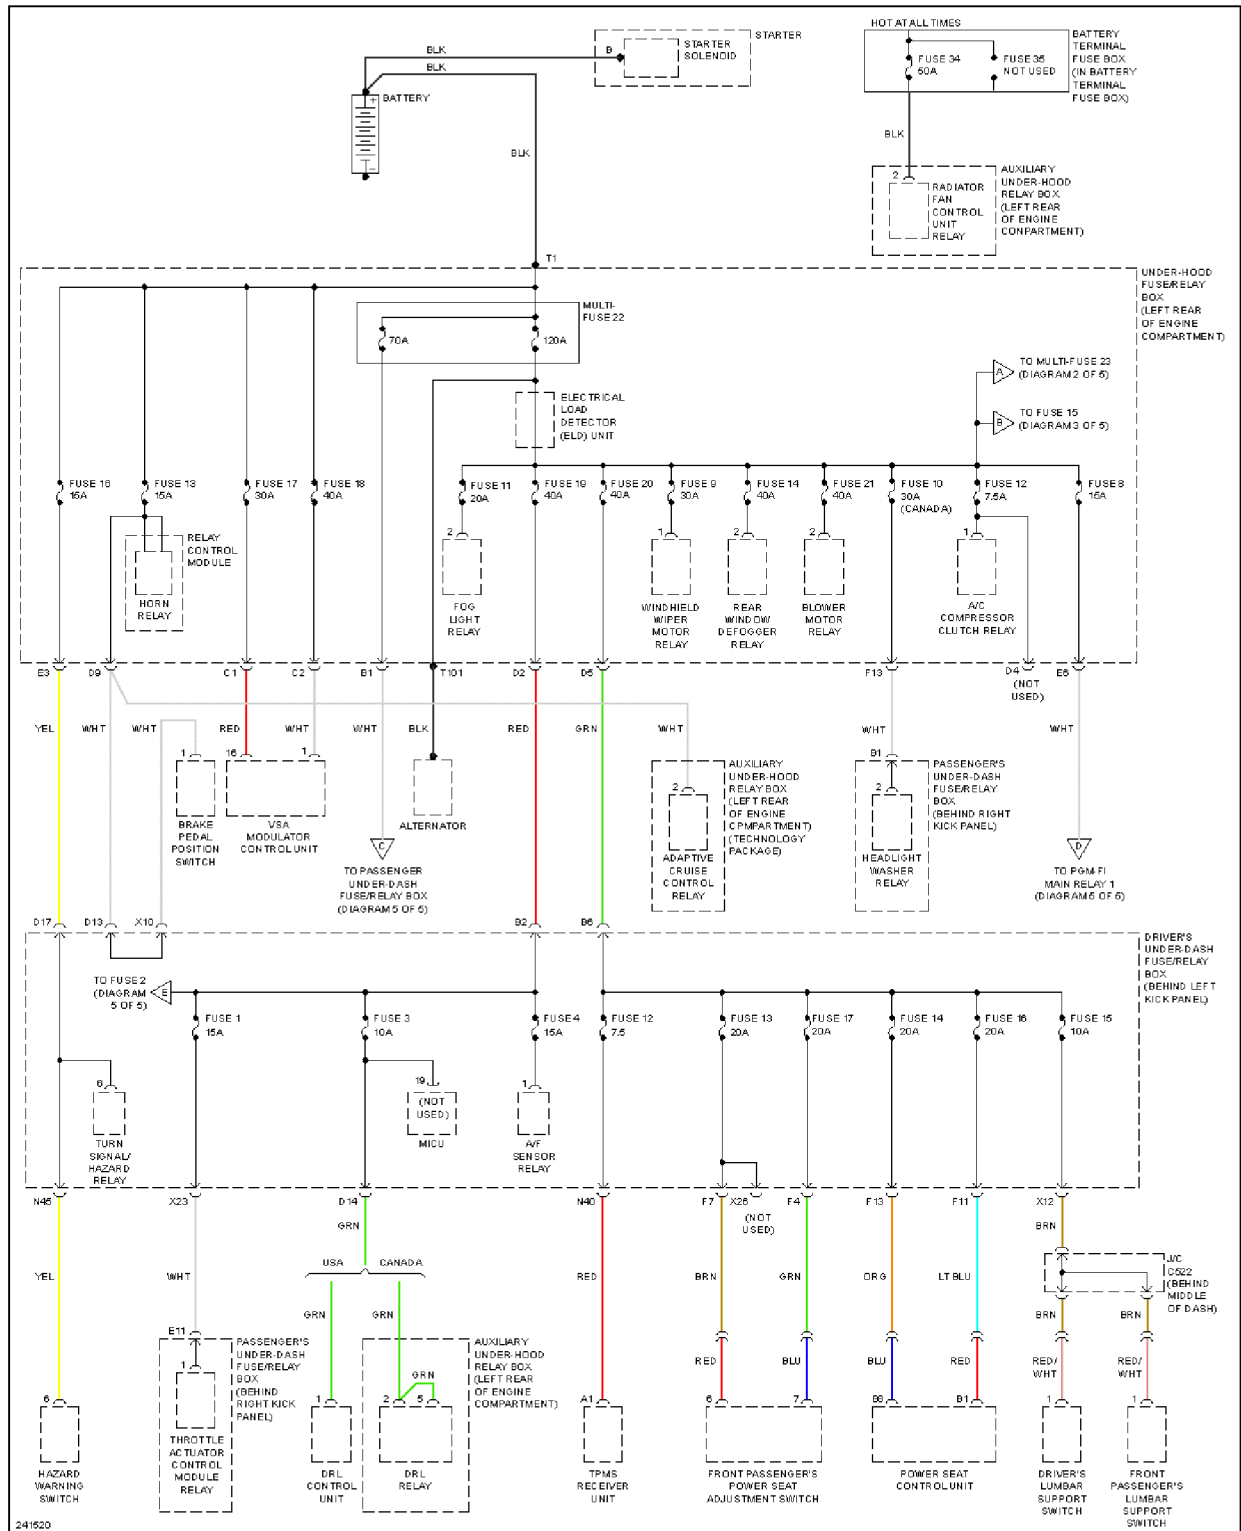


Fig. 63: Power Distribution Circuit (1 of 5)

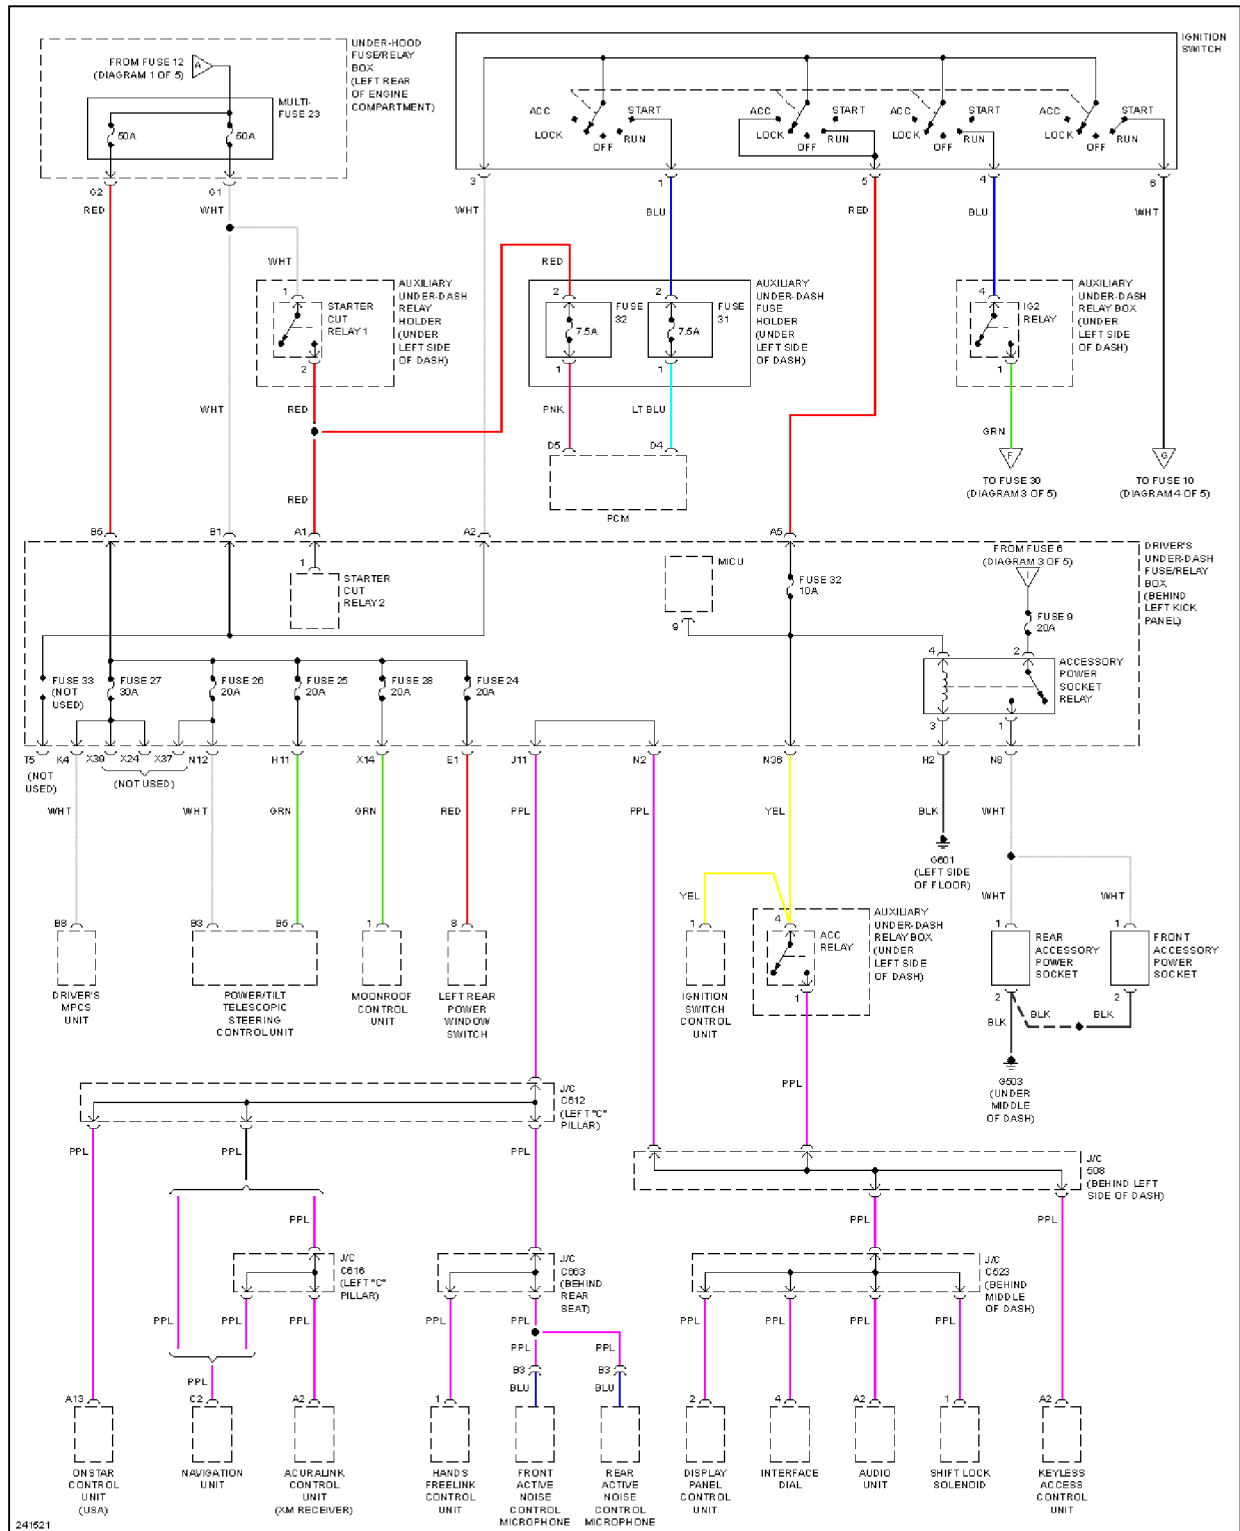


Fig. 64: Power Distribution Circuit (2 of 5)

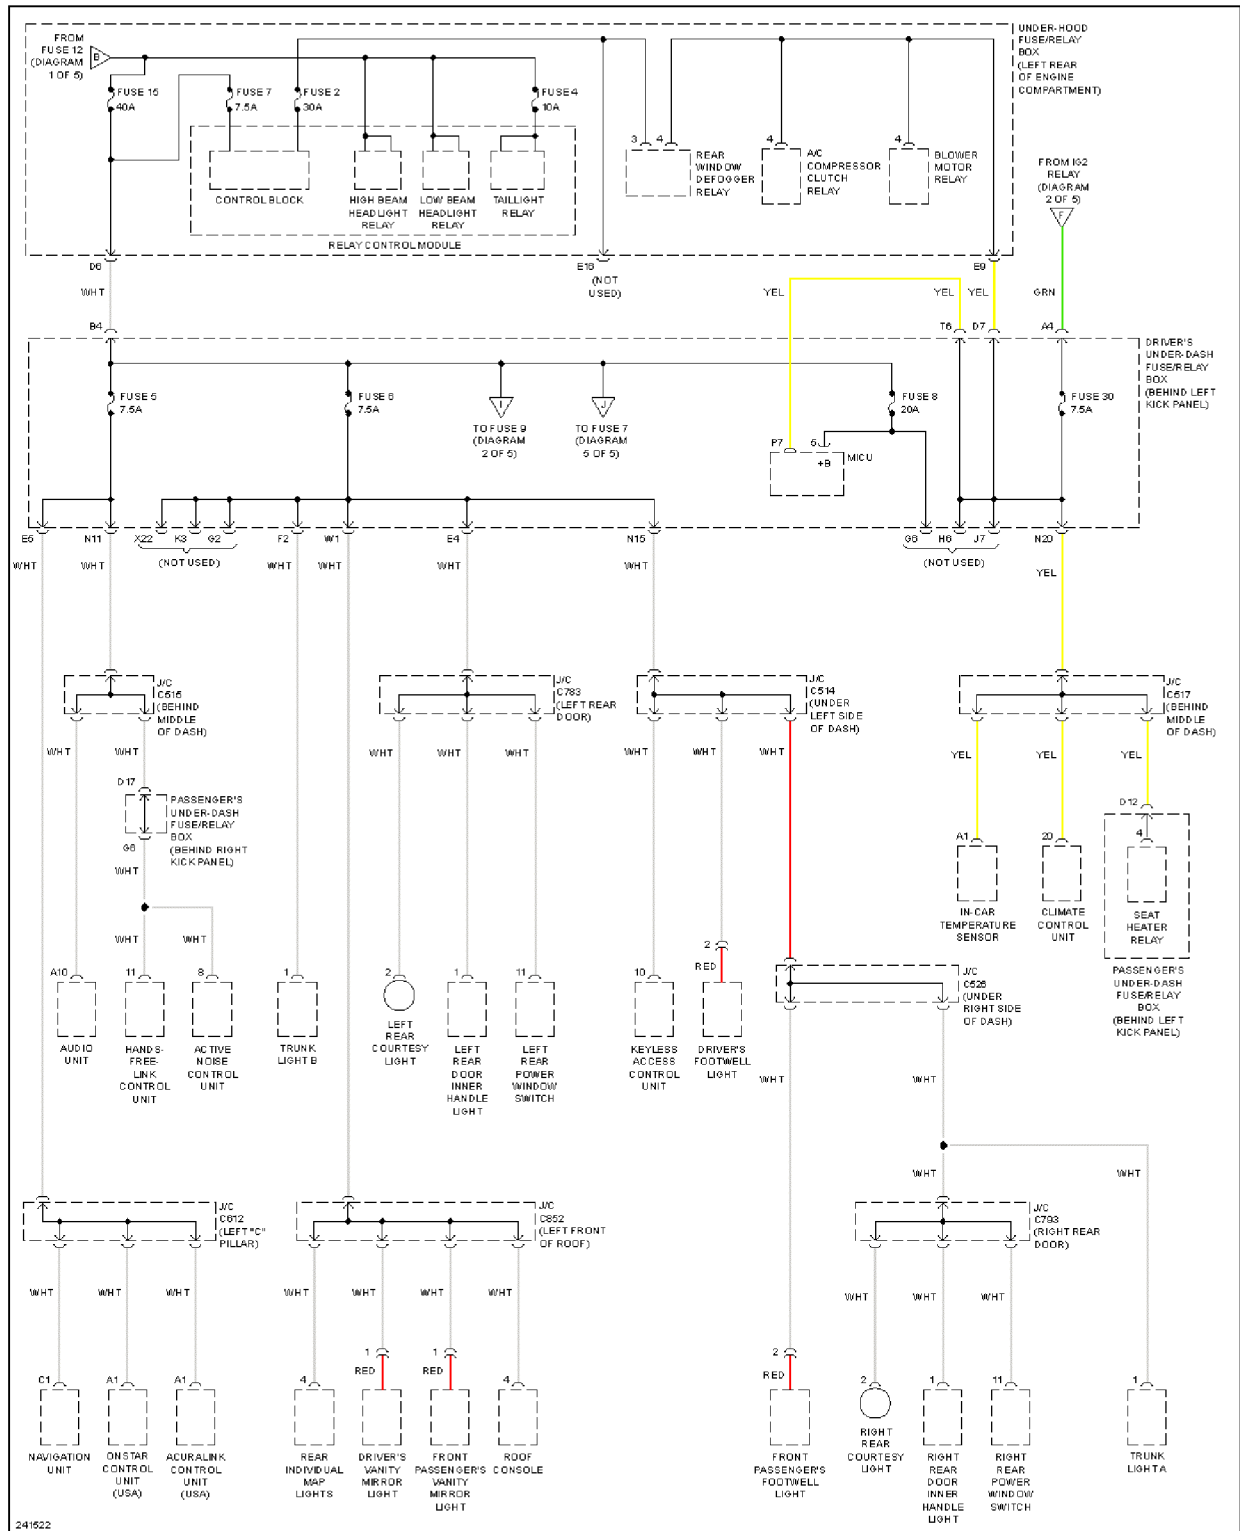


Fig. 65: Power Distribution Circuit (3 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 66: Power Distribution Circuit (4 of 5)



POWER DOOR LOCKS

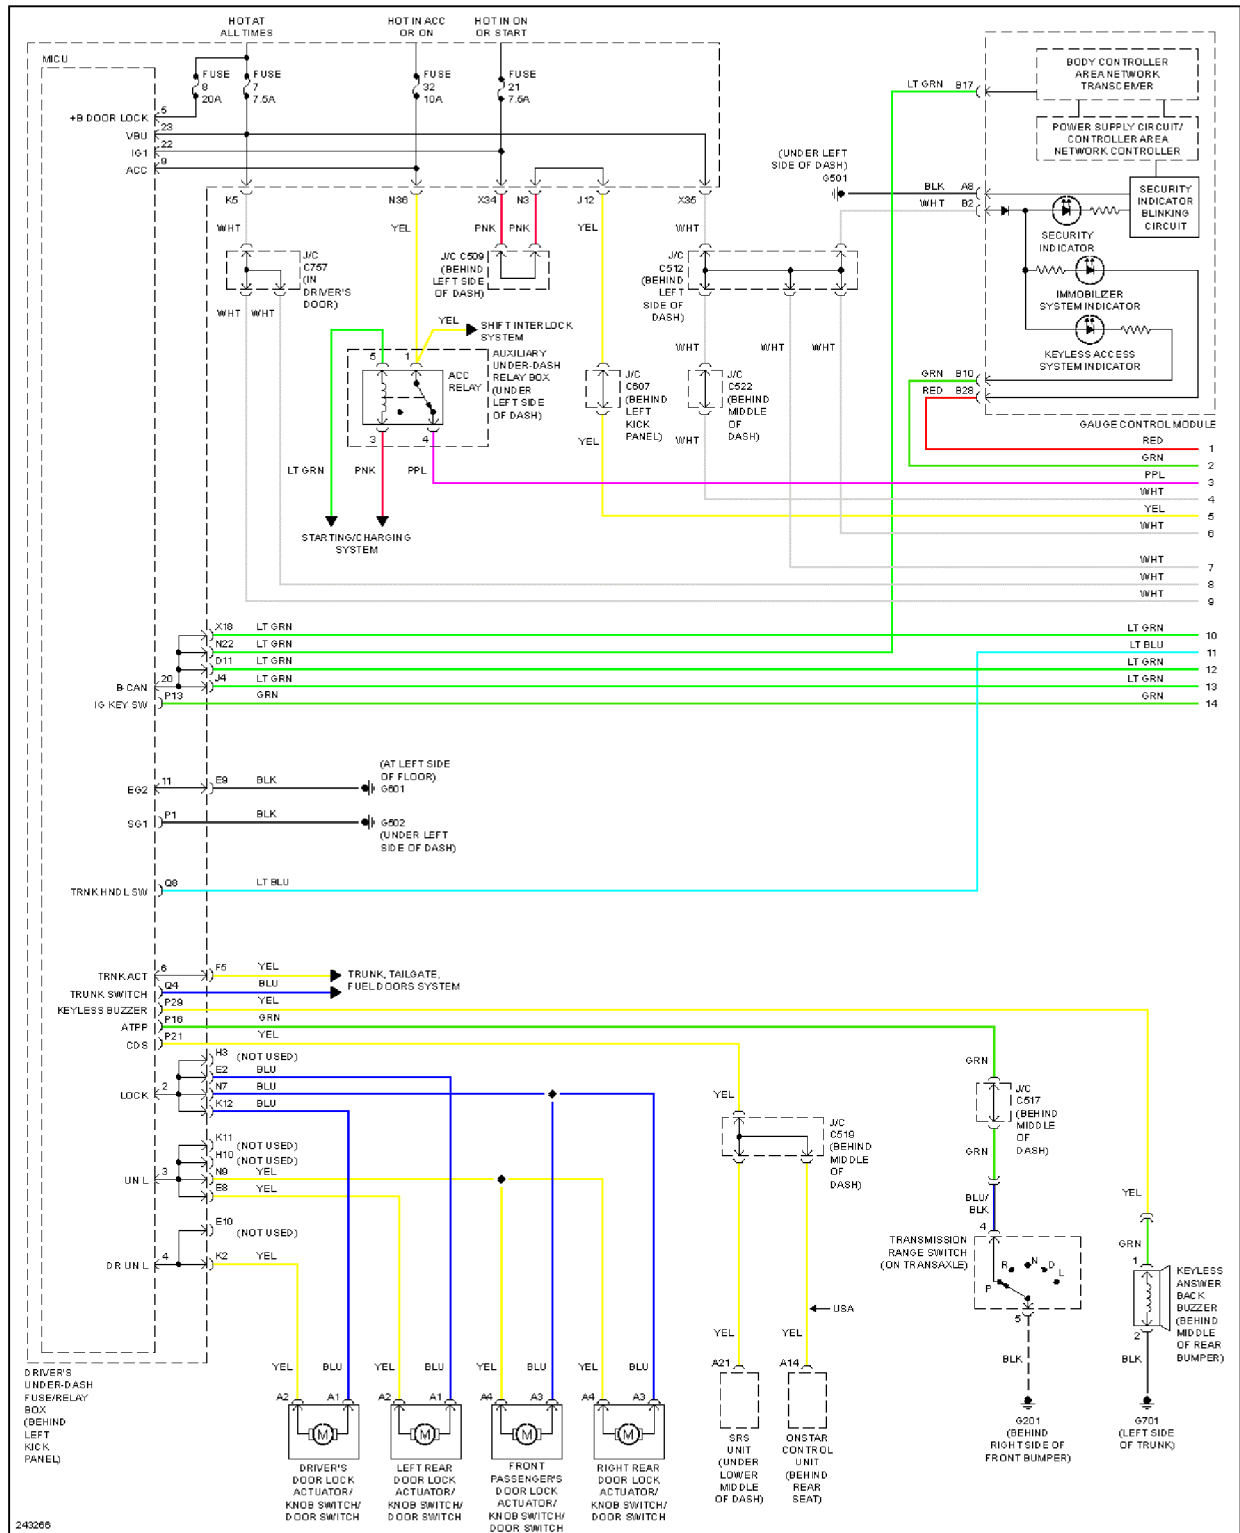


Fig. 68: Power Door Locks Circuit (1 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 69: Power Door Locks Circuit (2 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 70: Power Door Locks Circuit (3 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

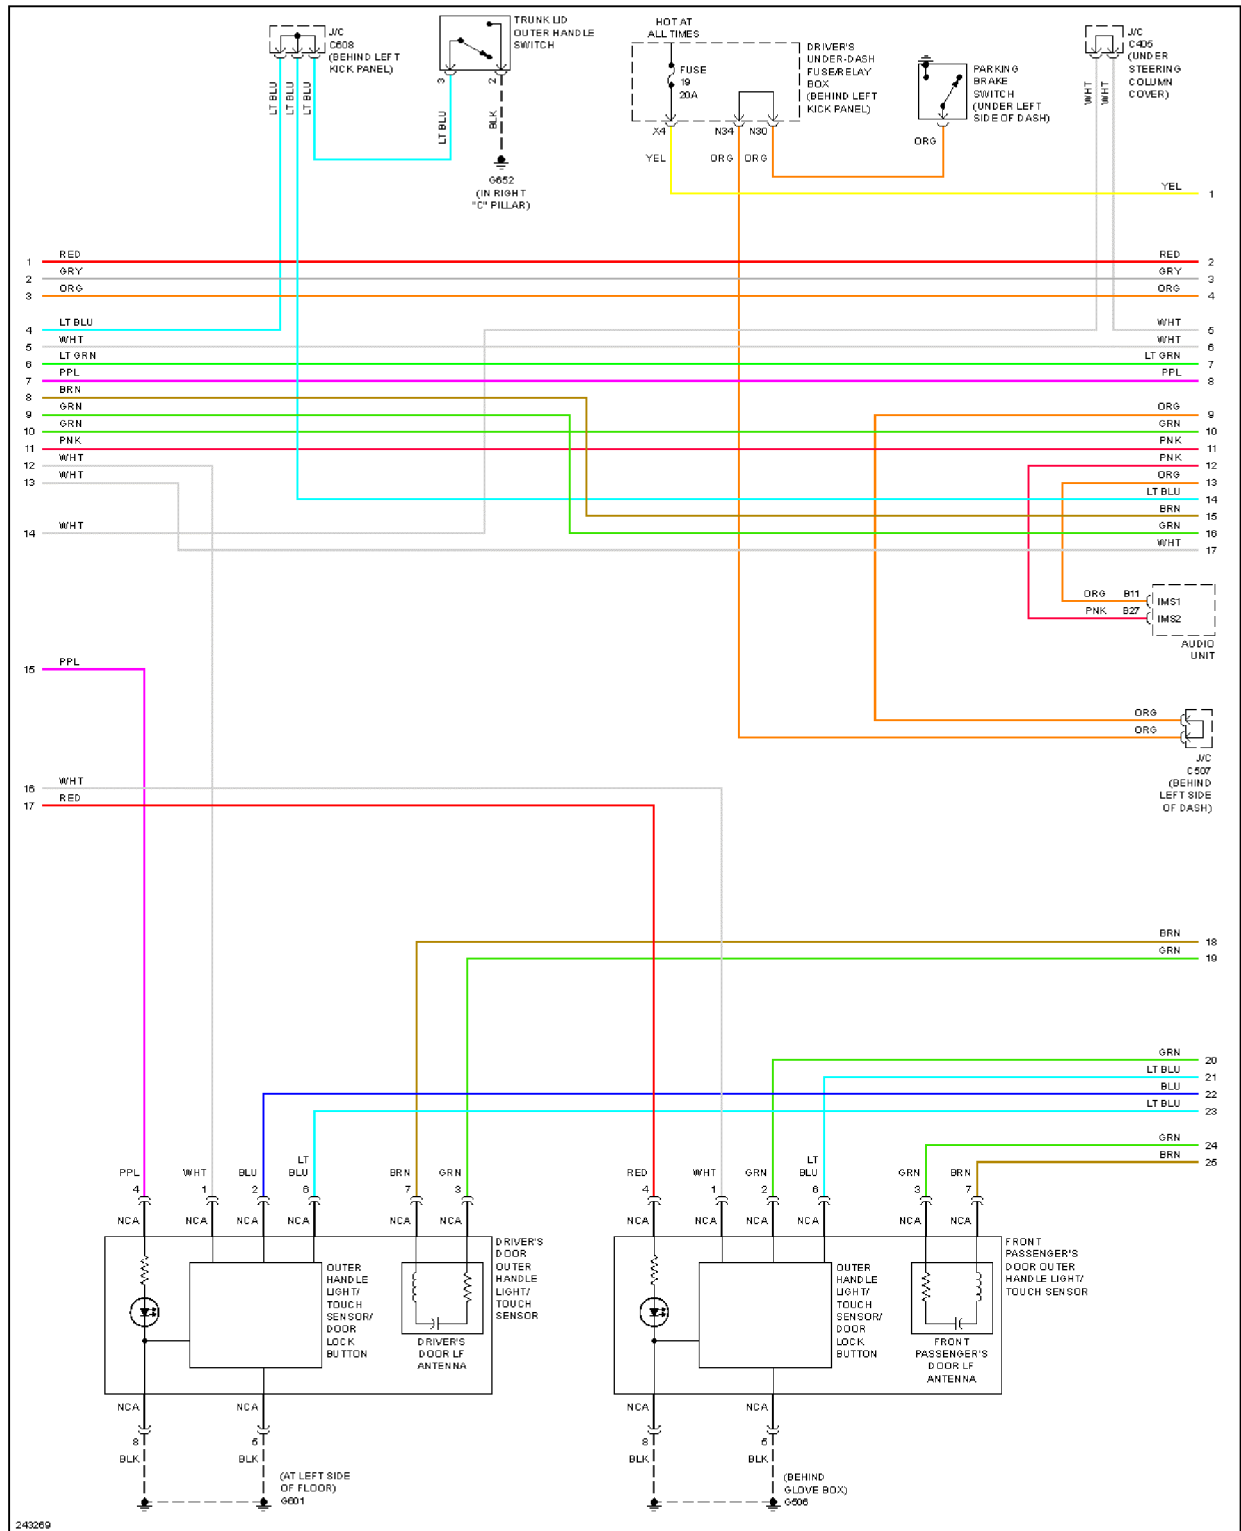


Fig. 71: Power Door Locks Circuit (4 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

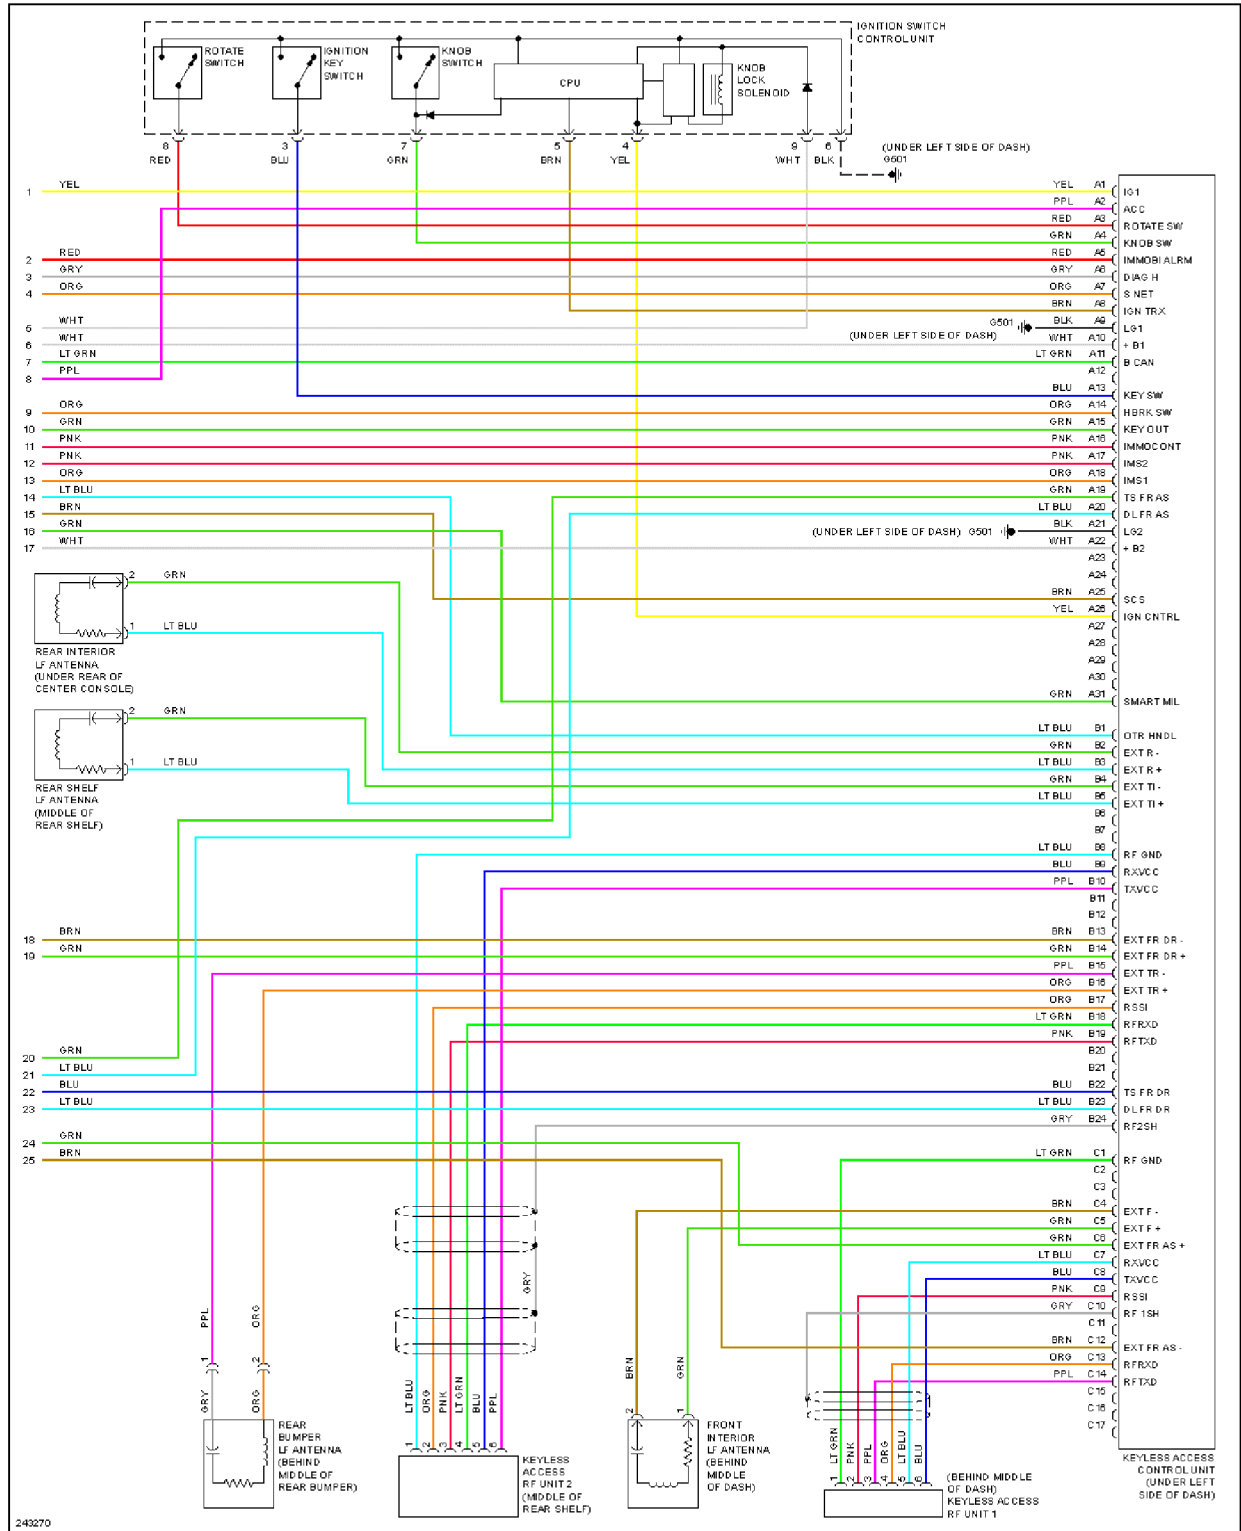


Fig. 72: Power Door Locks Circuit (5 of 5)

POWER MIRRORS

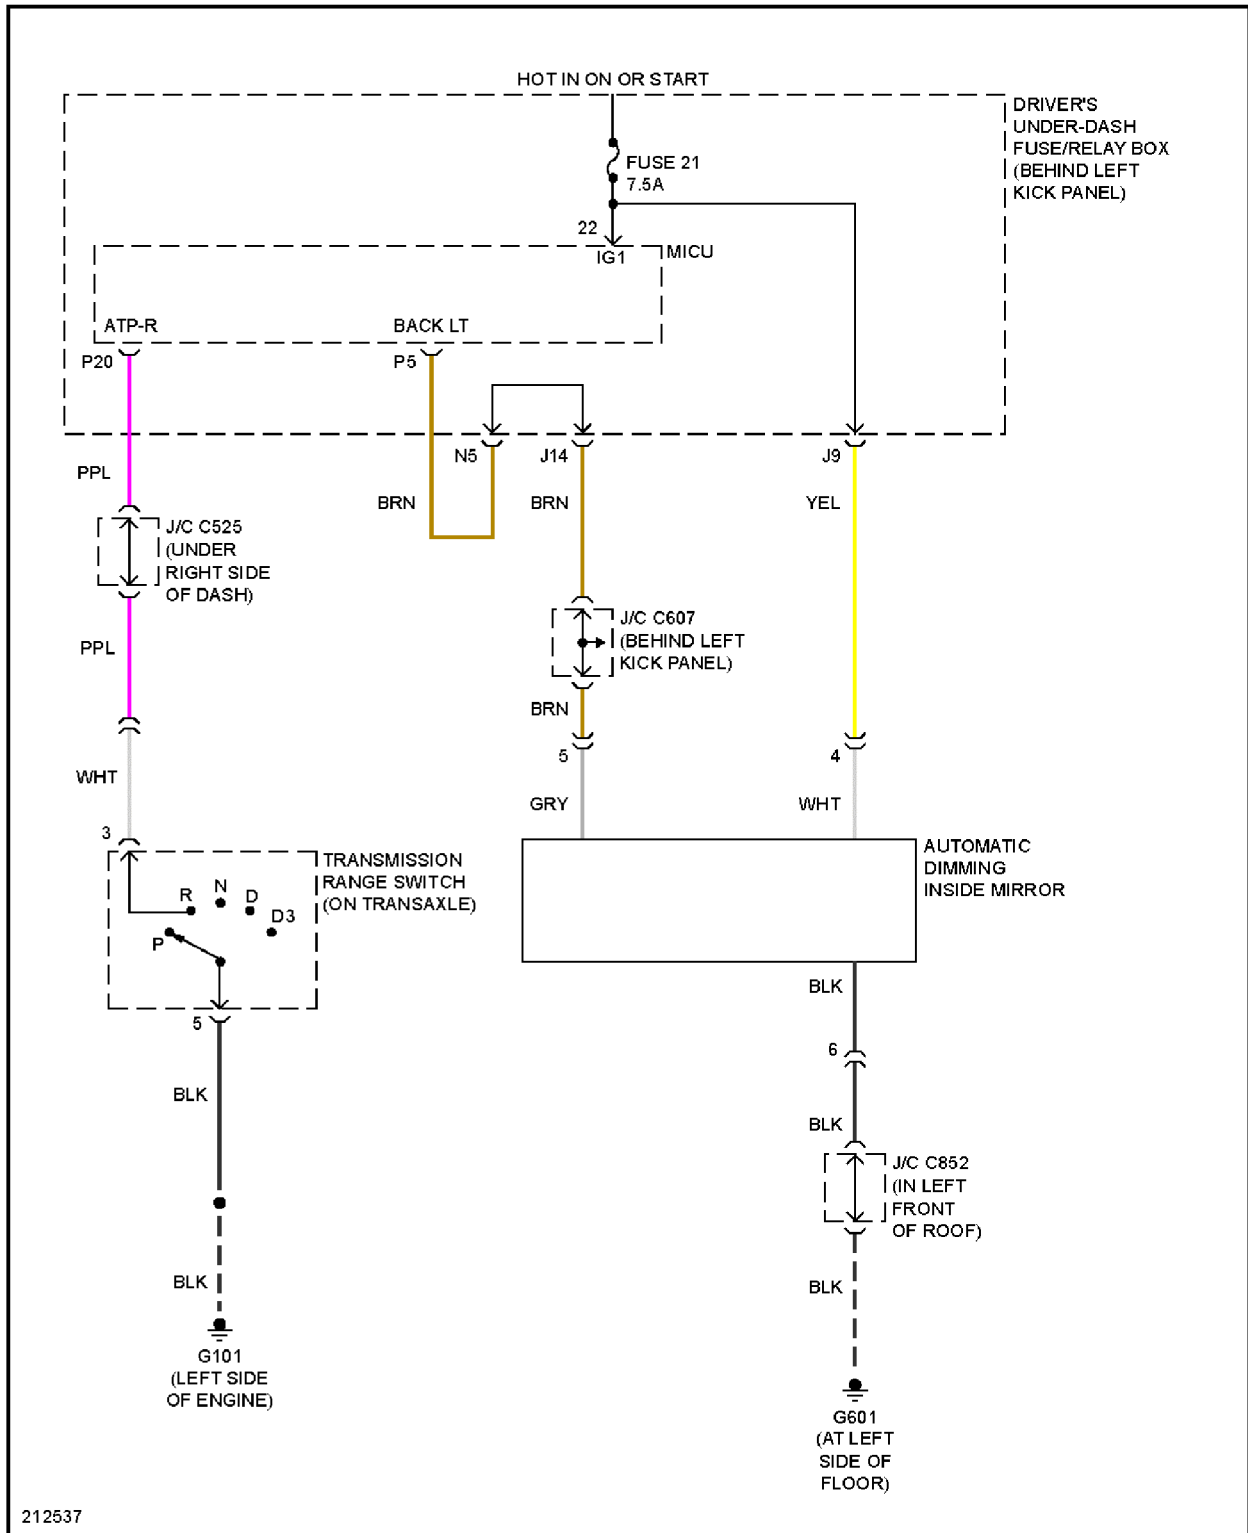


Fig. 73: Automatic Day/Night Mirror Circuit

POWER SEATS

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

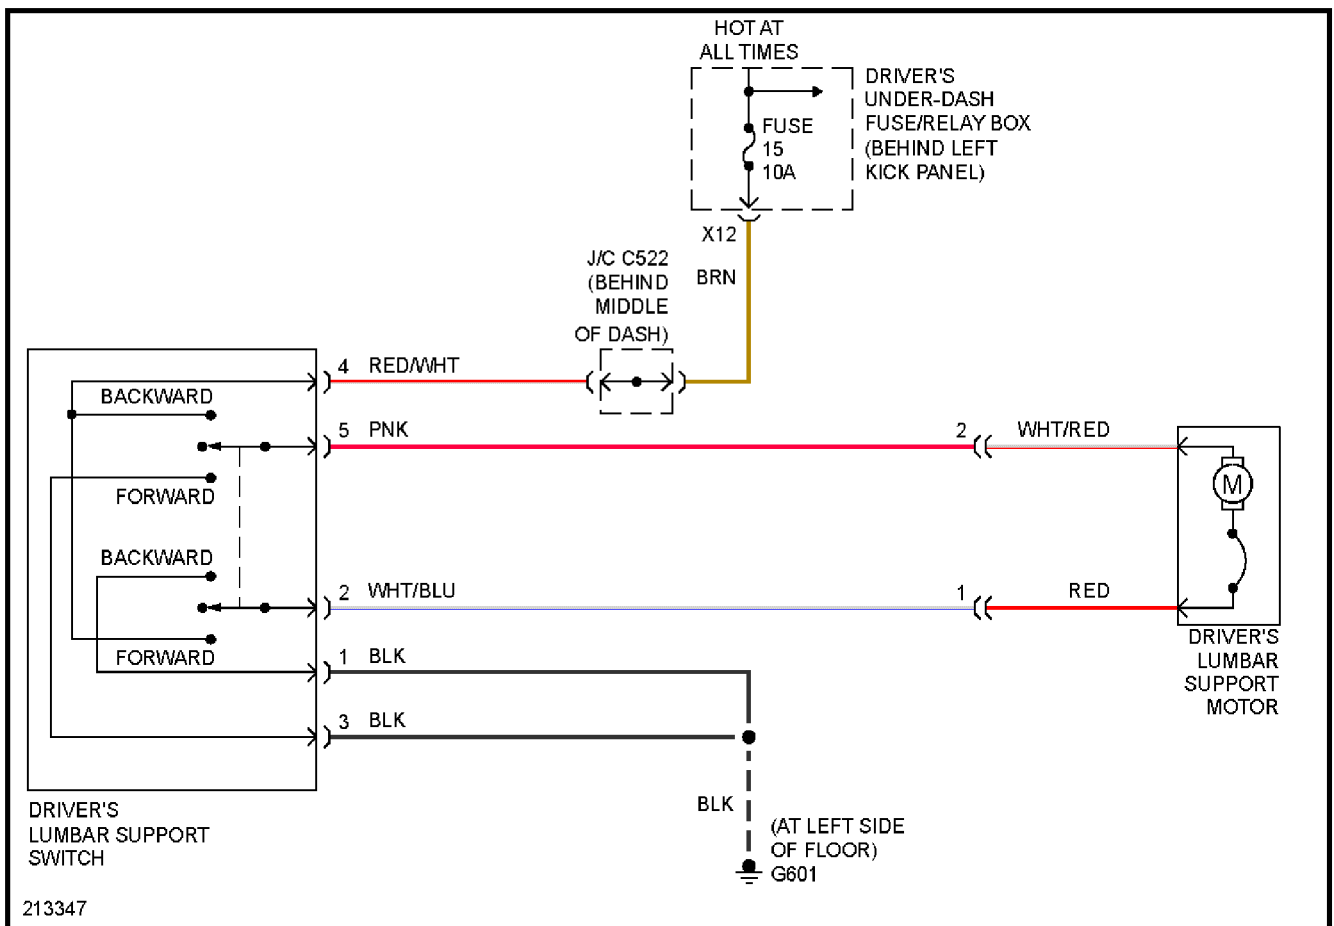


Fig. 74: Driver's Lumbar Circuit

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

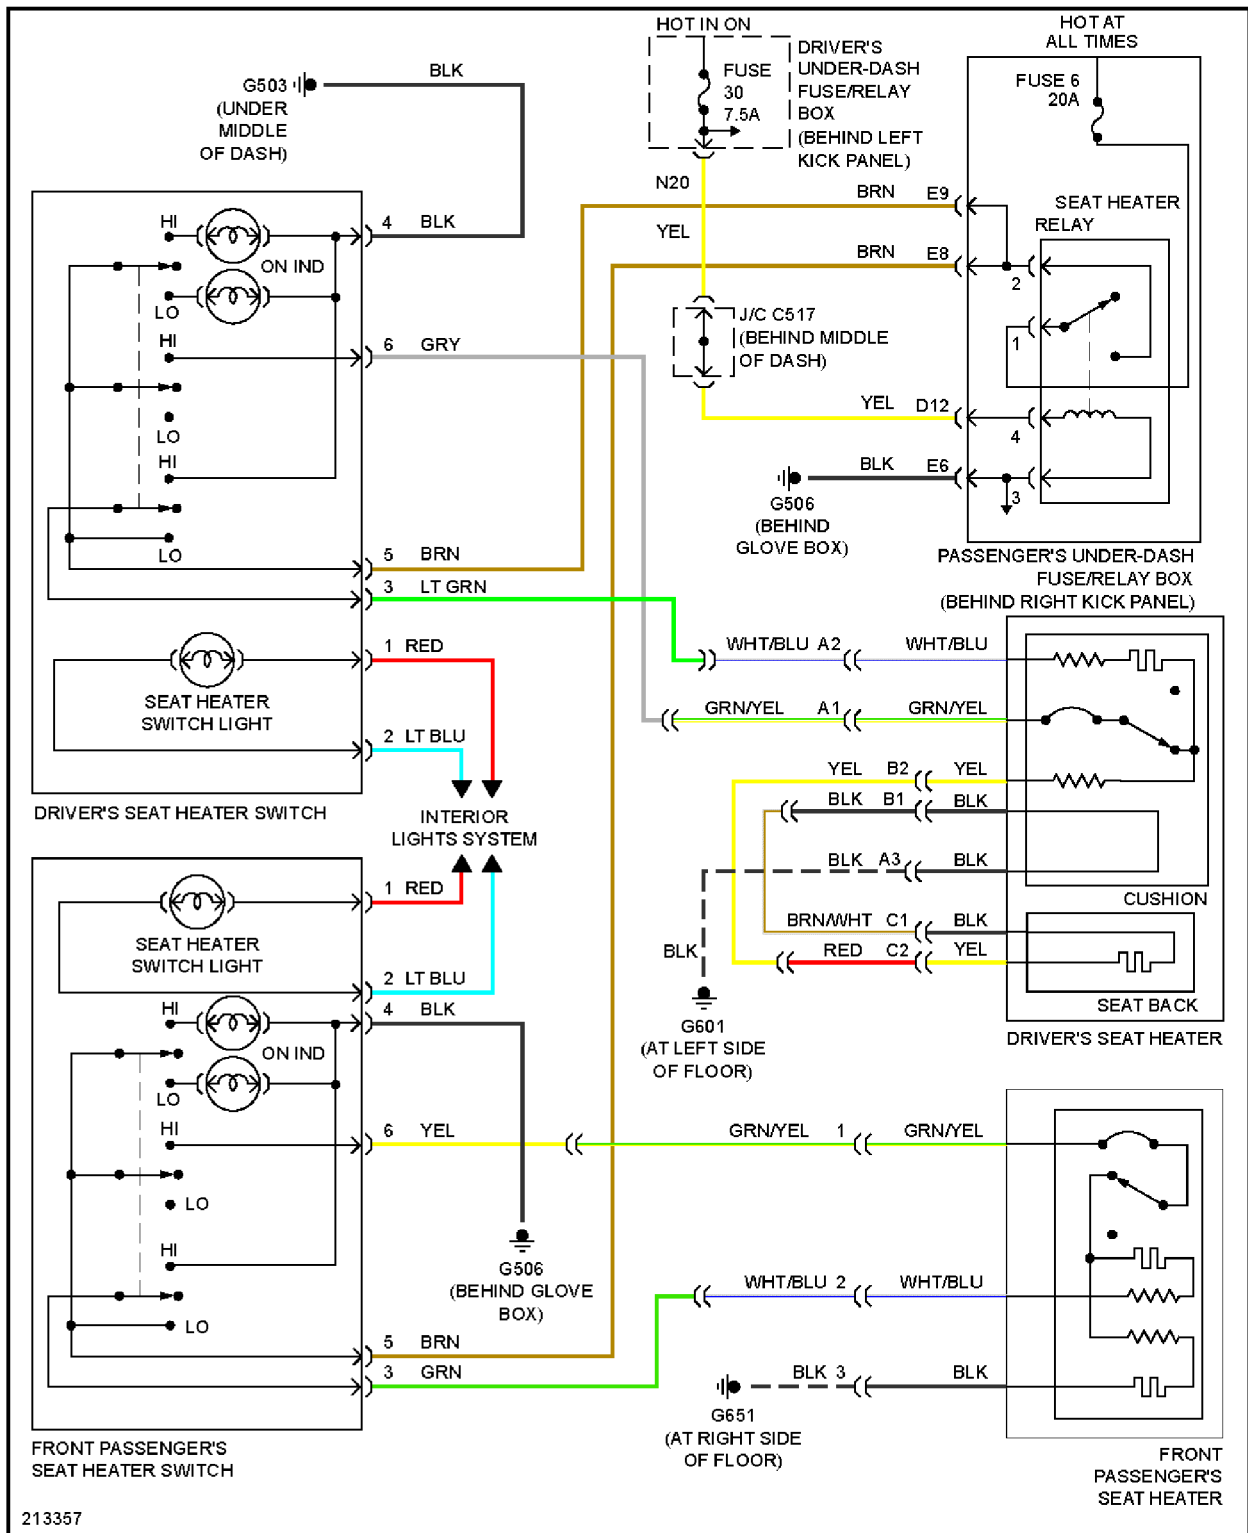


Fig. 75: Heated Seats Circuit

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

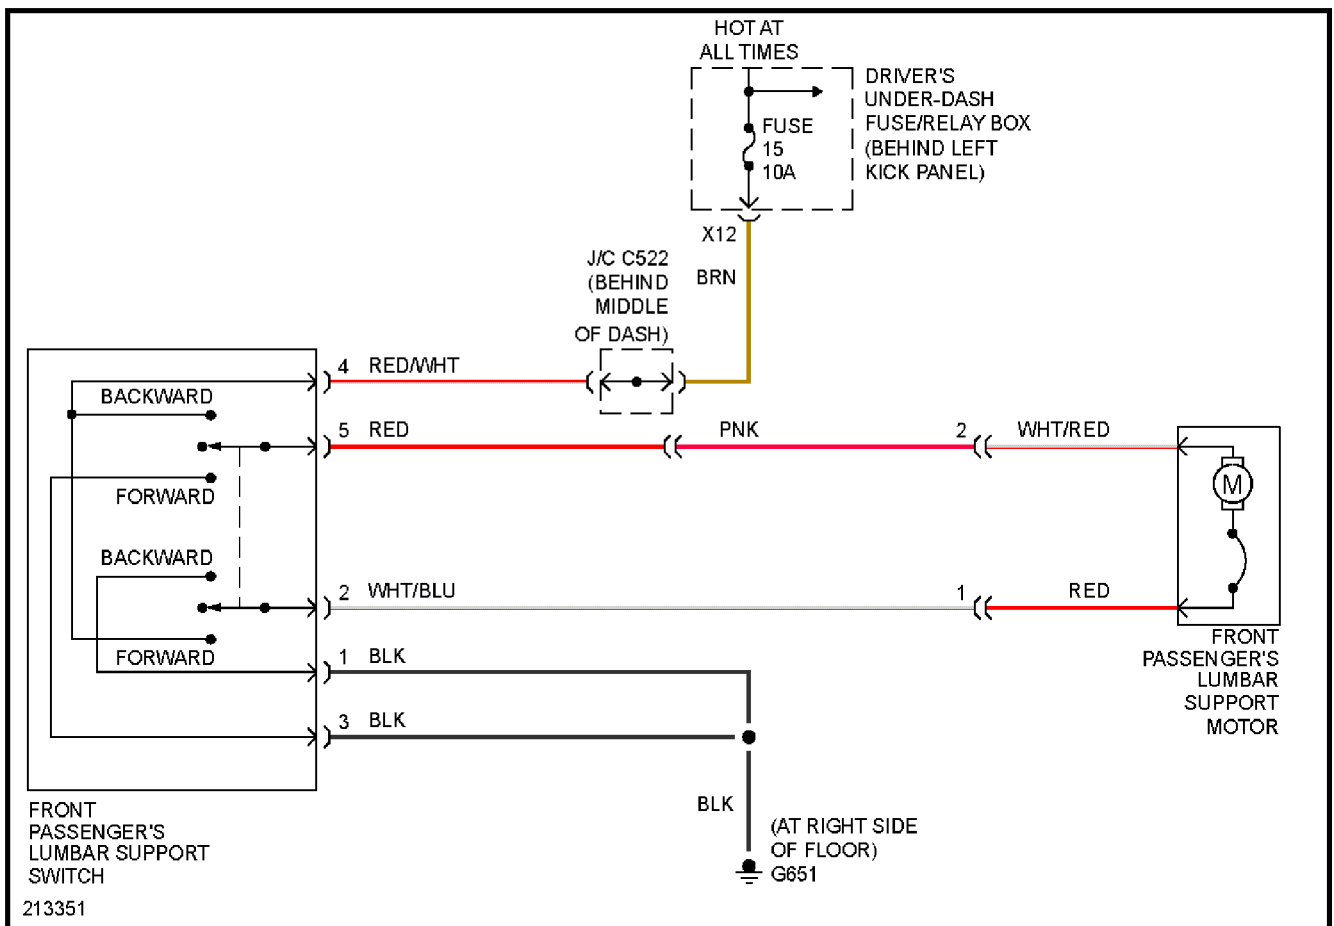
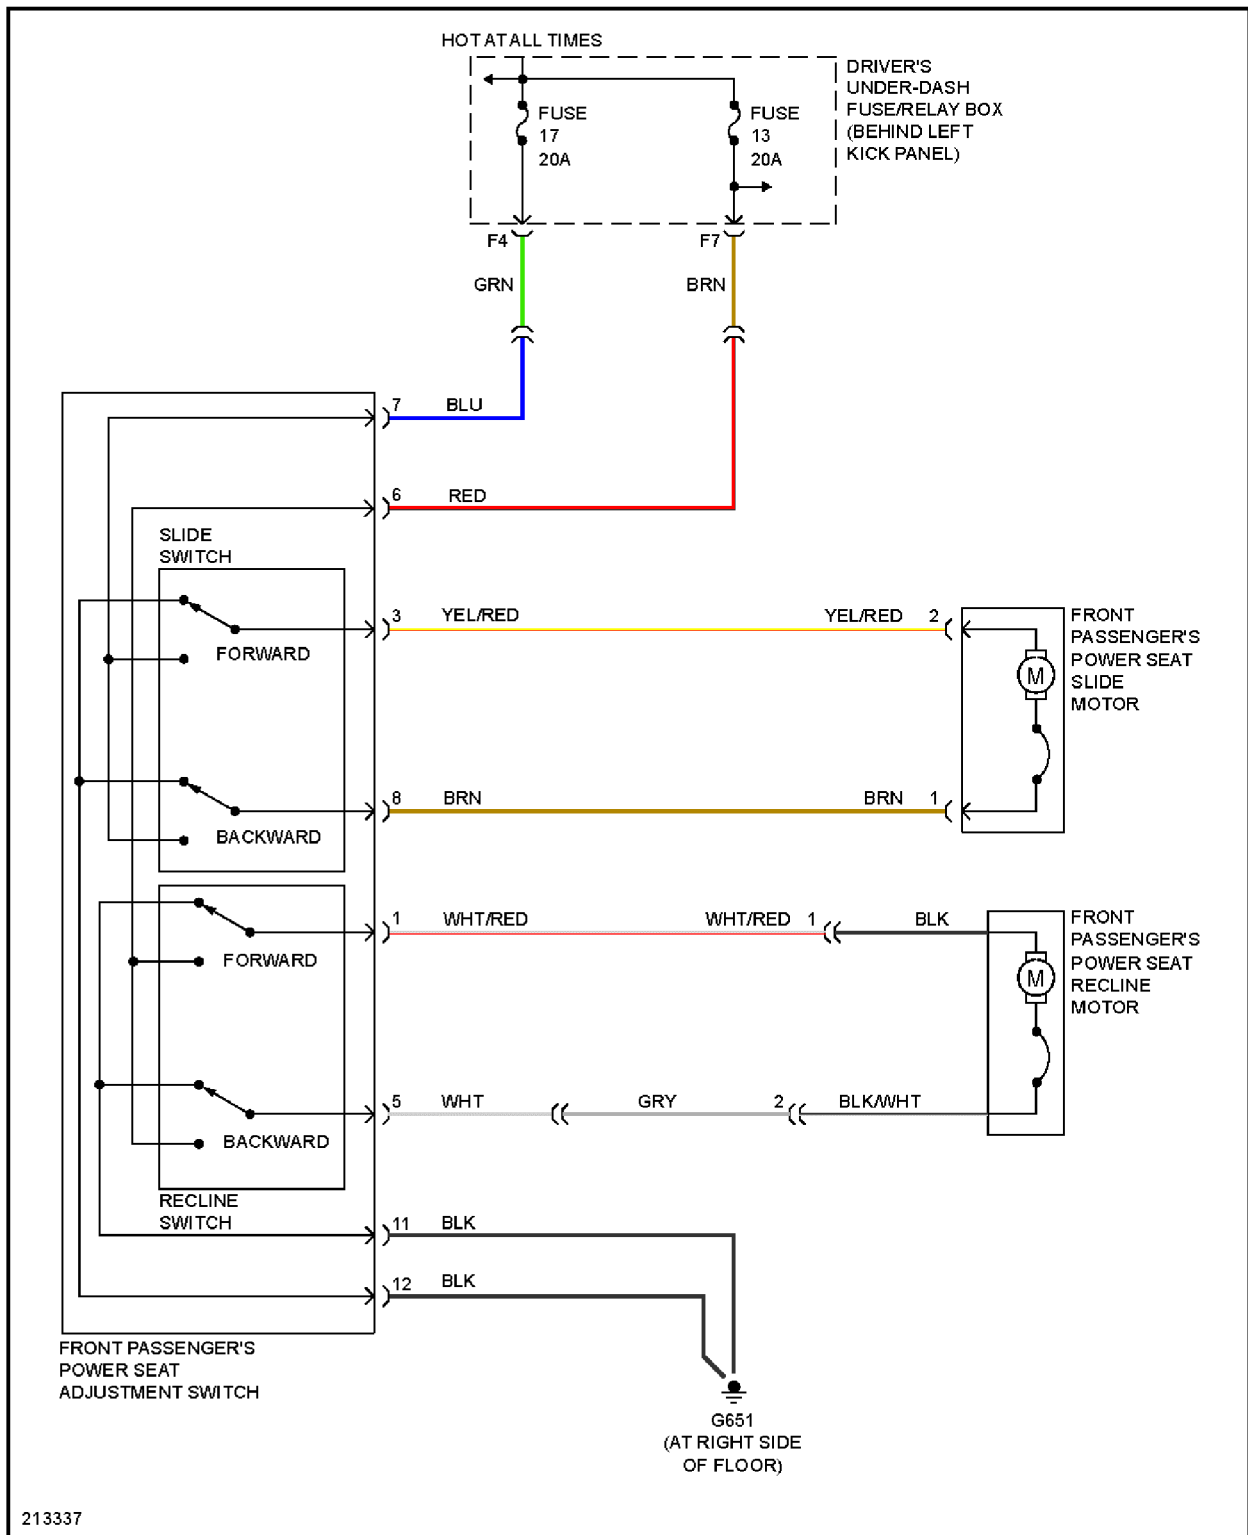


Fig. 76: Passenger's Lumbar Circuit

**Fig. 77: Passenger's Power Seat Circuit**

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

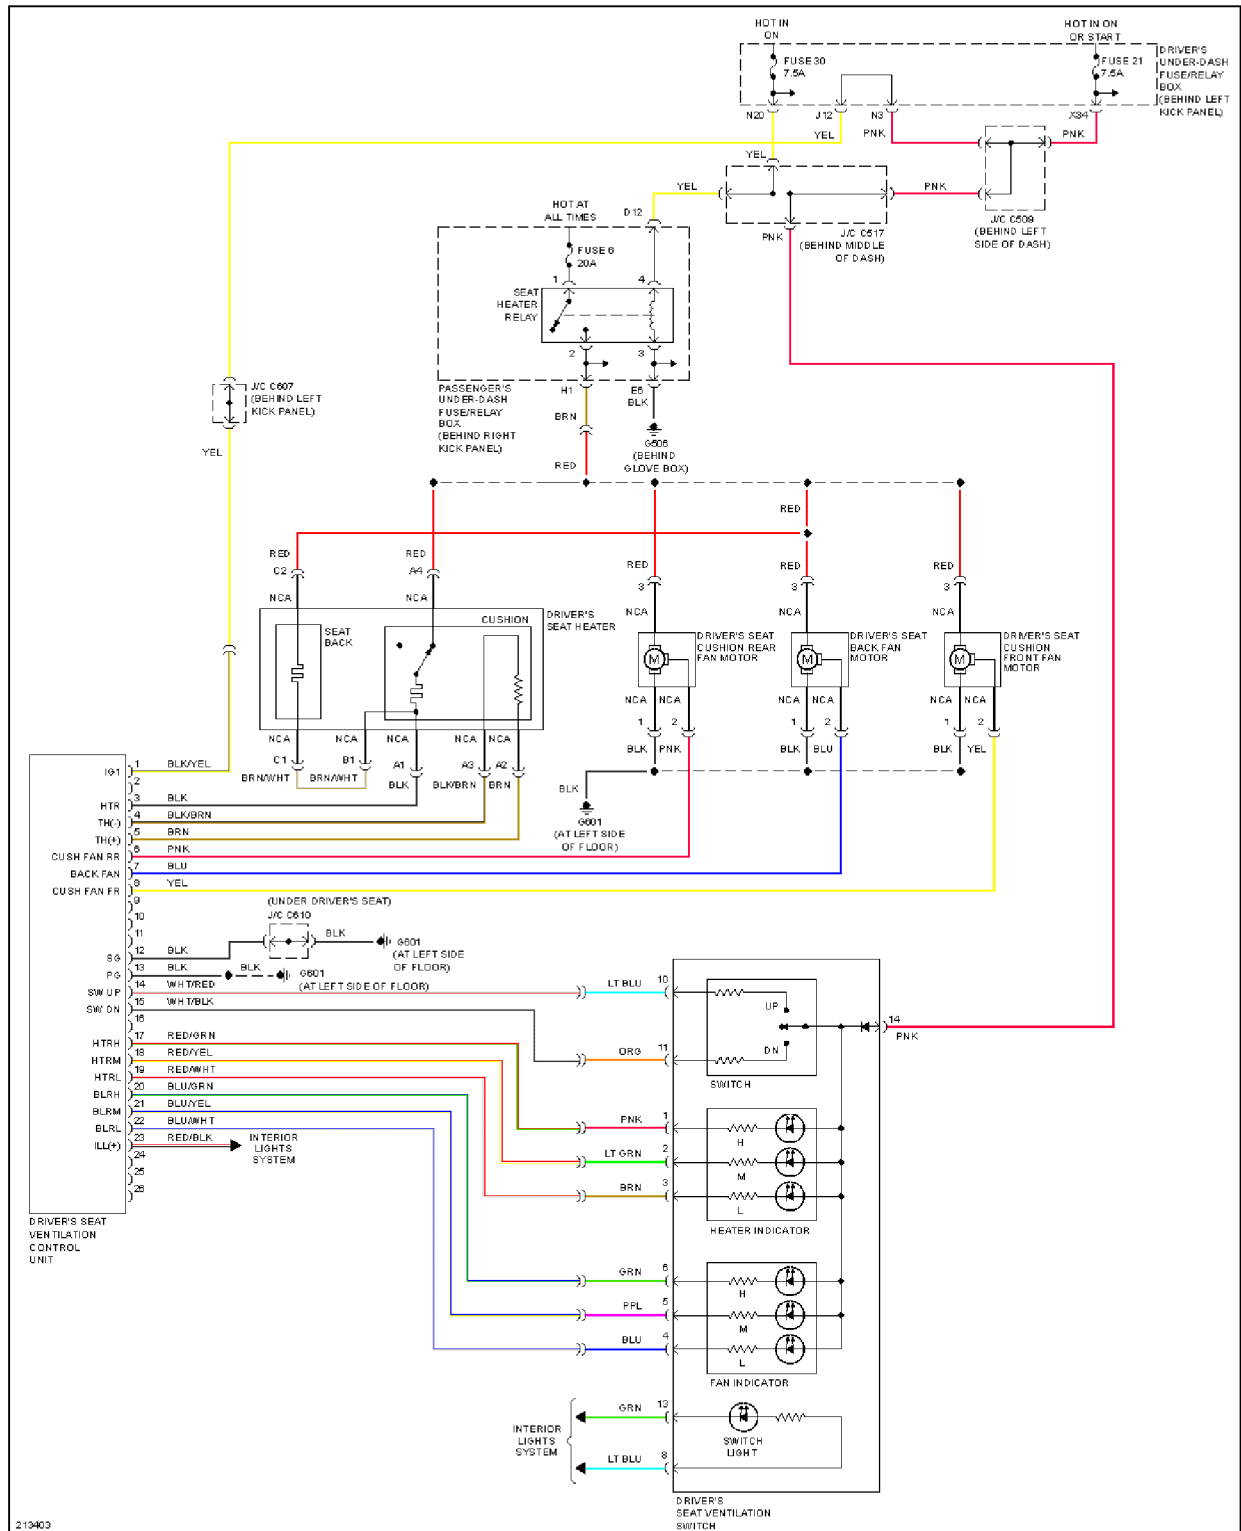


Fig. 78: Seat Ventilation Circuit, Driver's

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

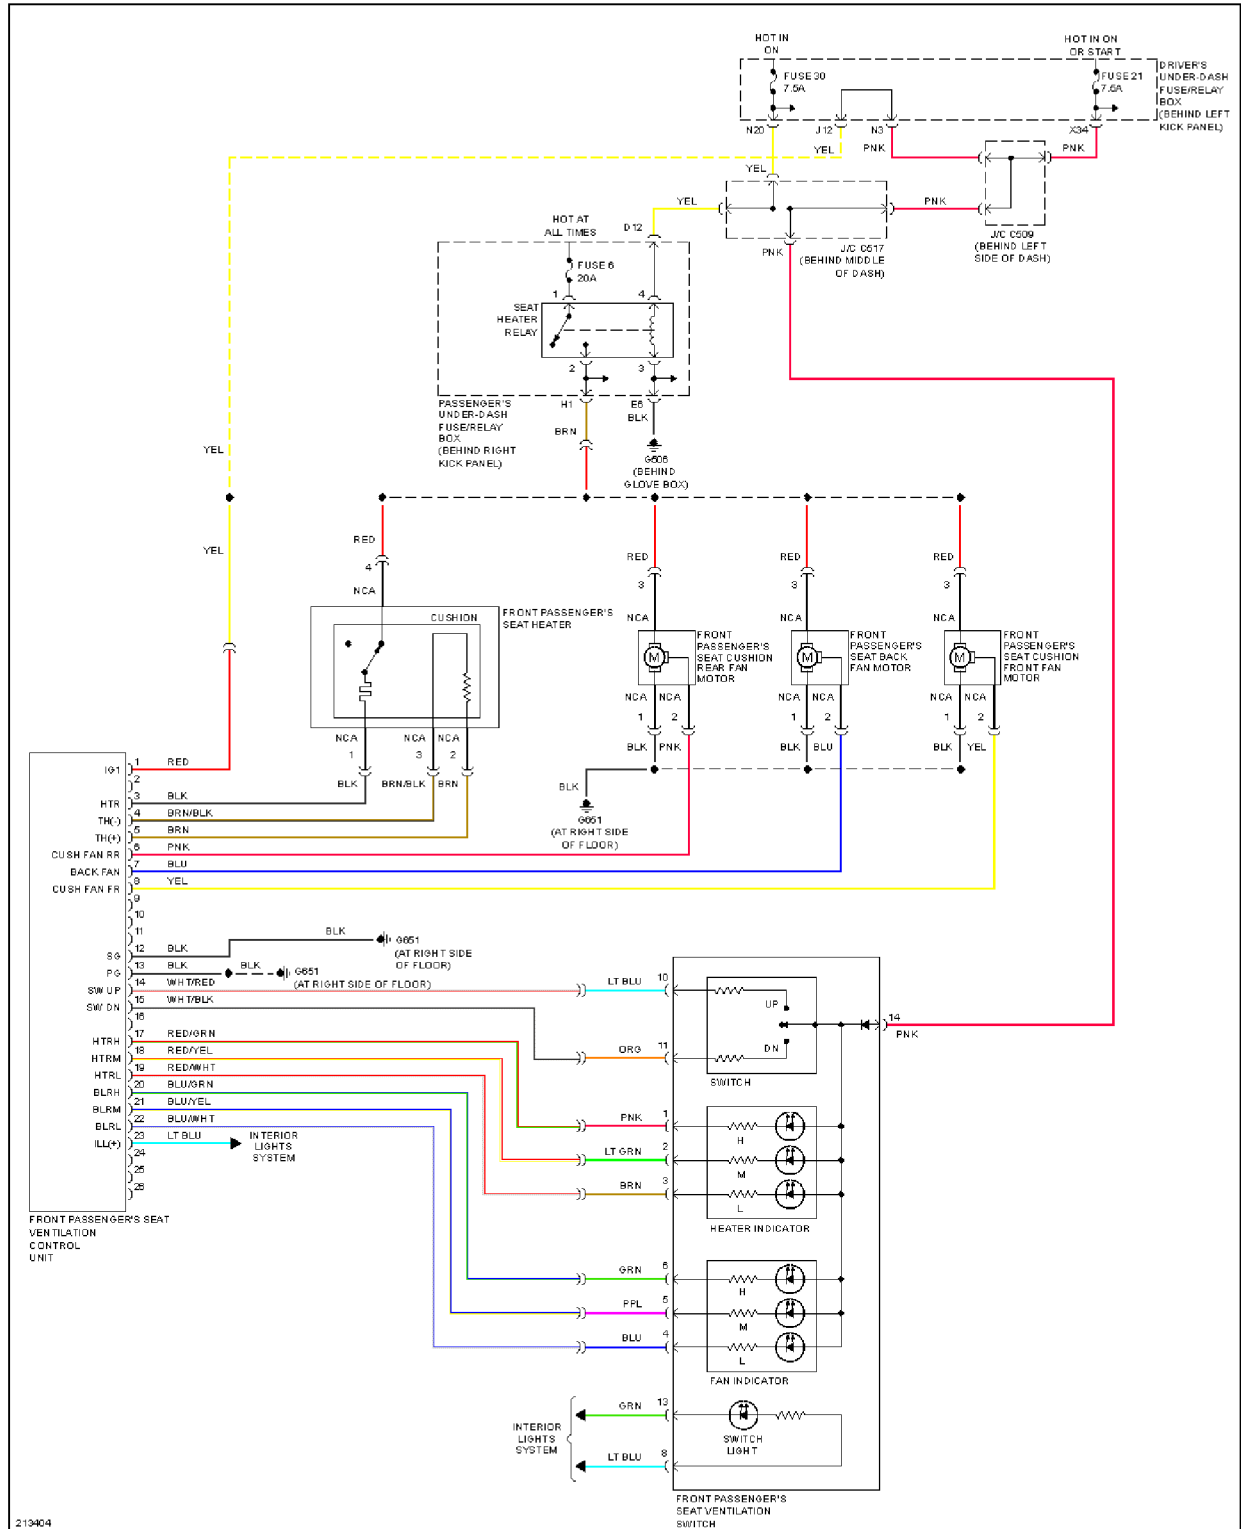


Fig. 79: Seat Ventilation Circuit, Passenger's

POWER TOP/SUNROOF

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

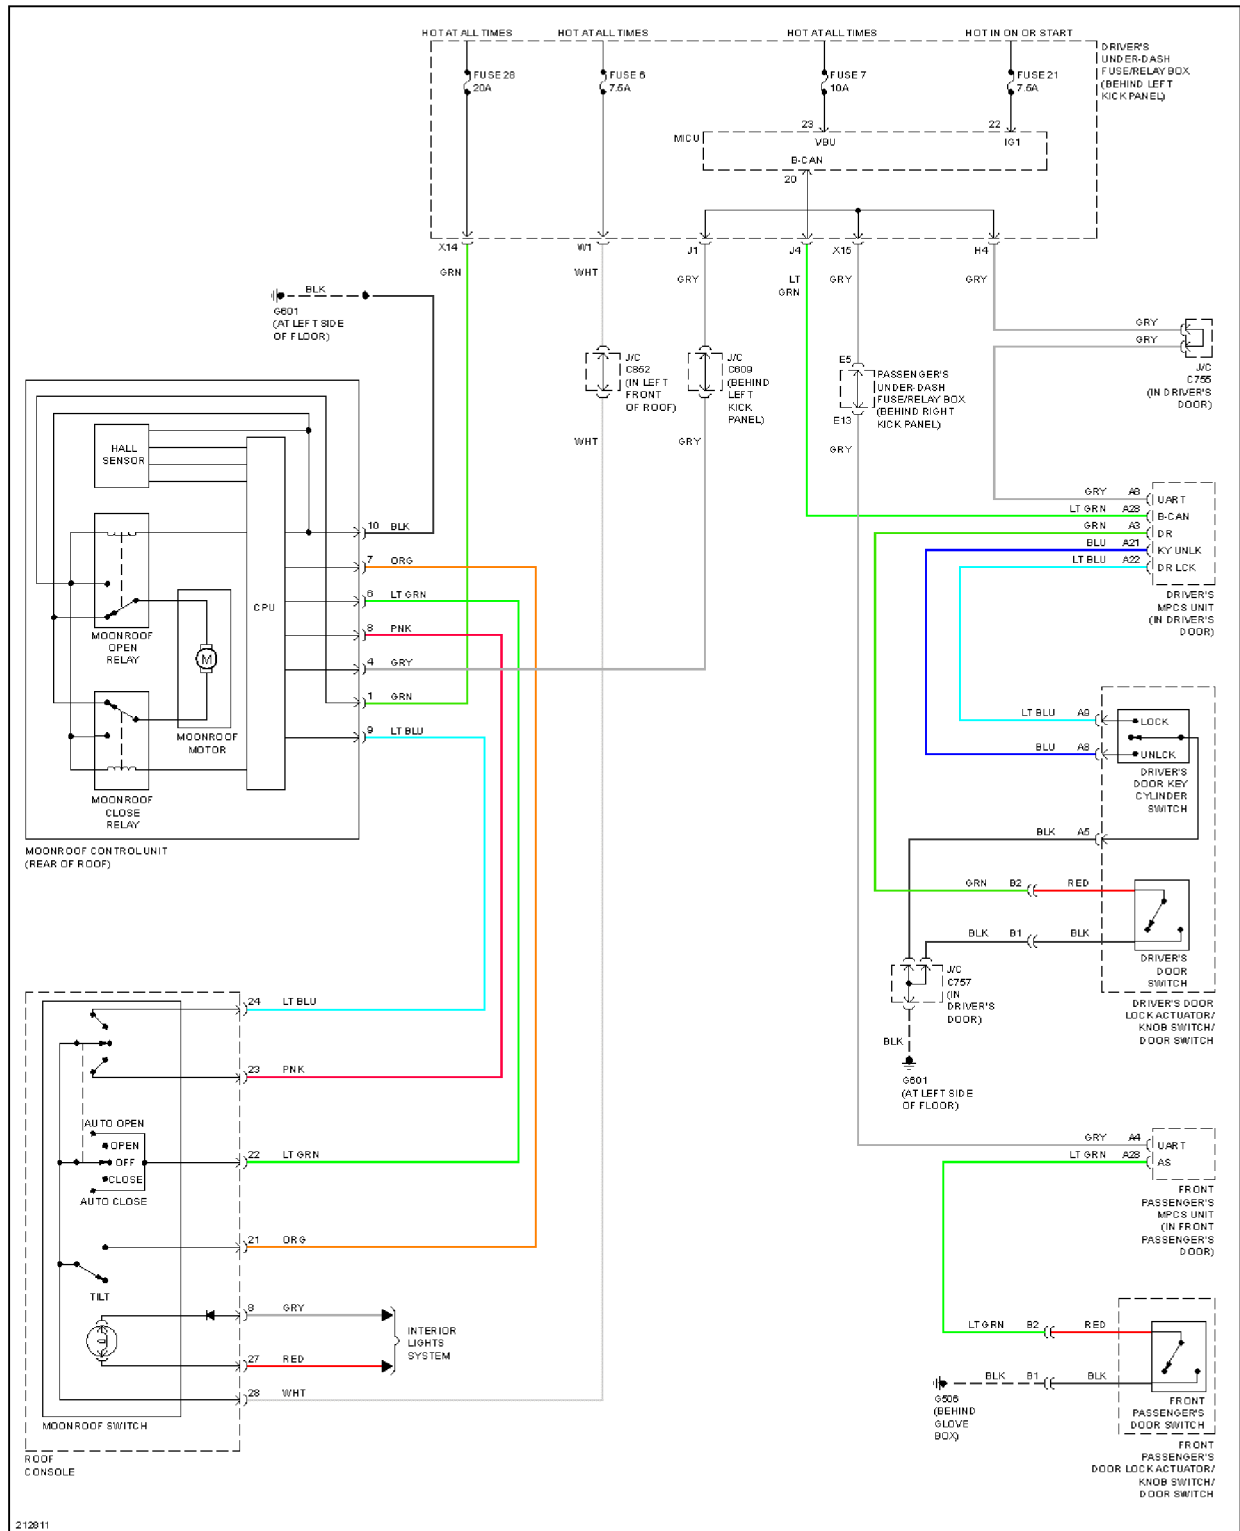


Fig. 80: Power Top/Sunroof Circuit

POWER WINDOWS

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

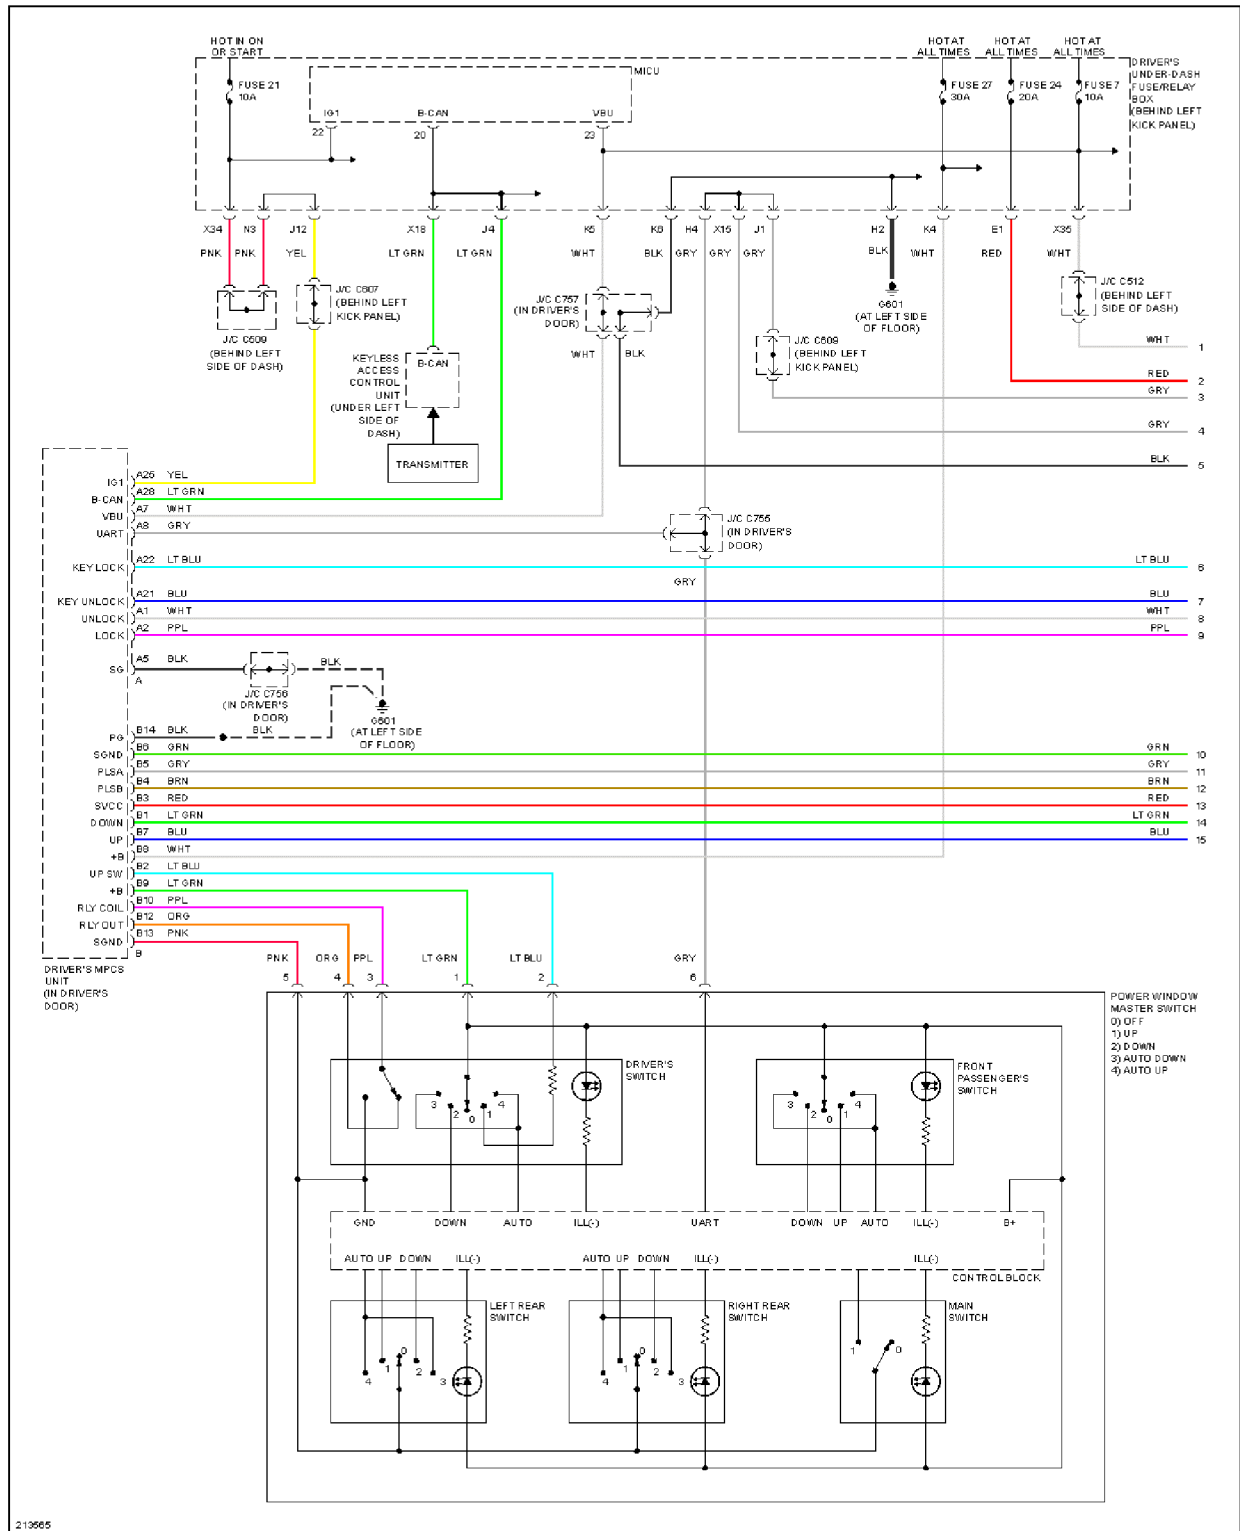


Fig. 81: Power Windows Circuit (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

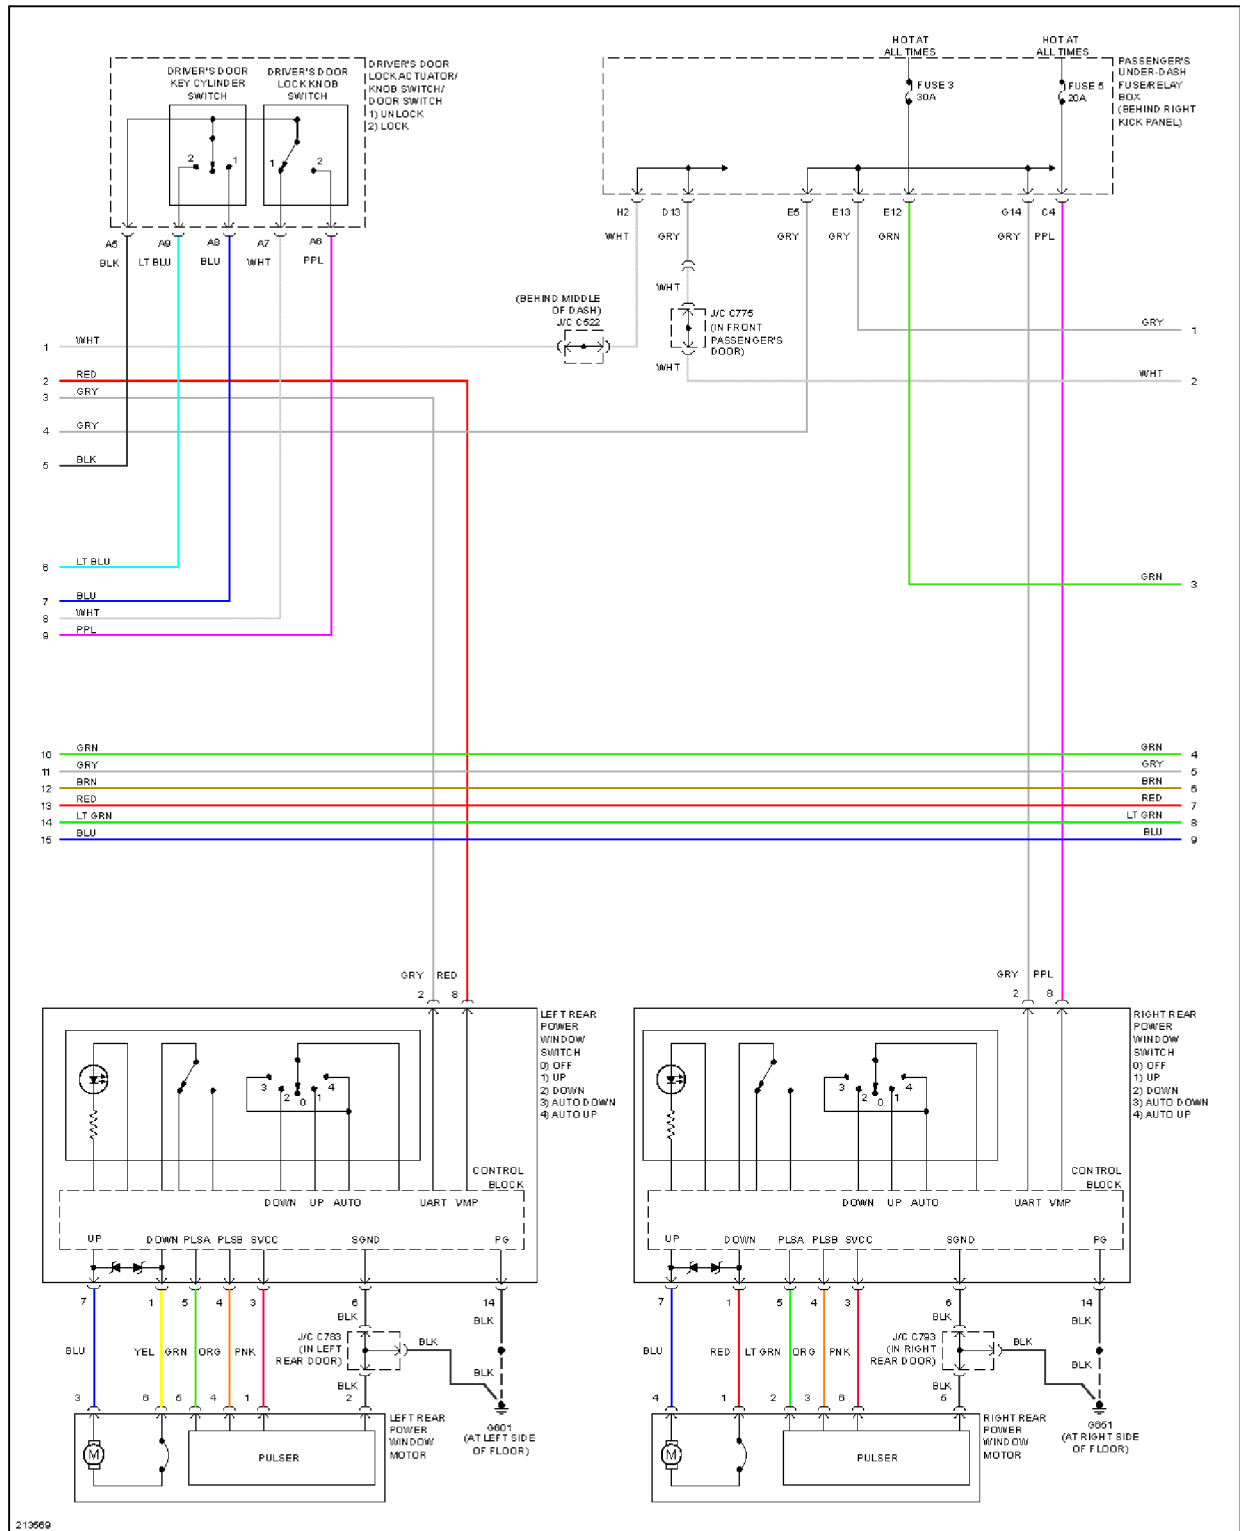


Fig. 82: Power Windows Circuit (2 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

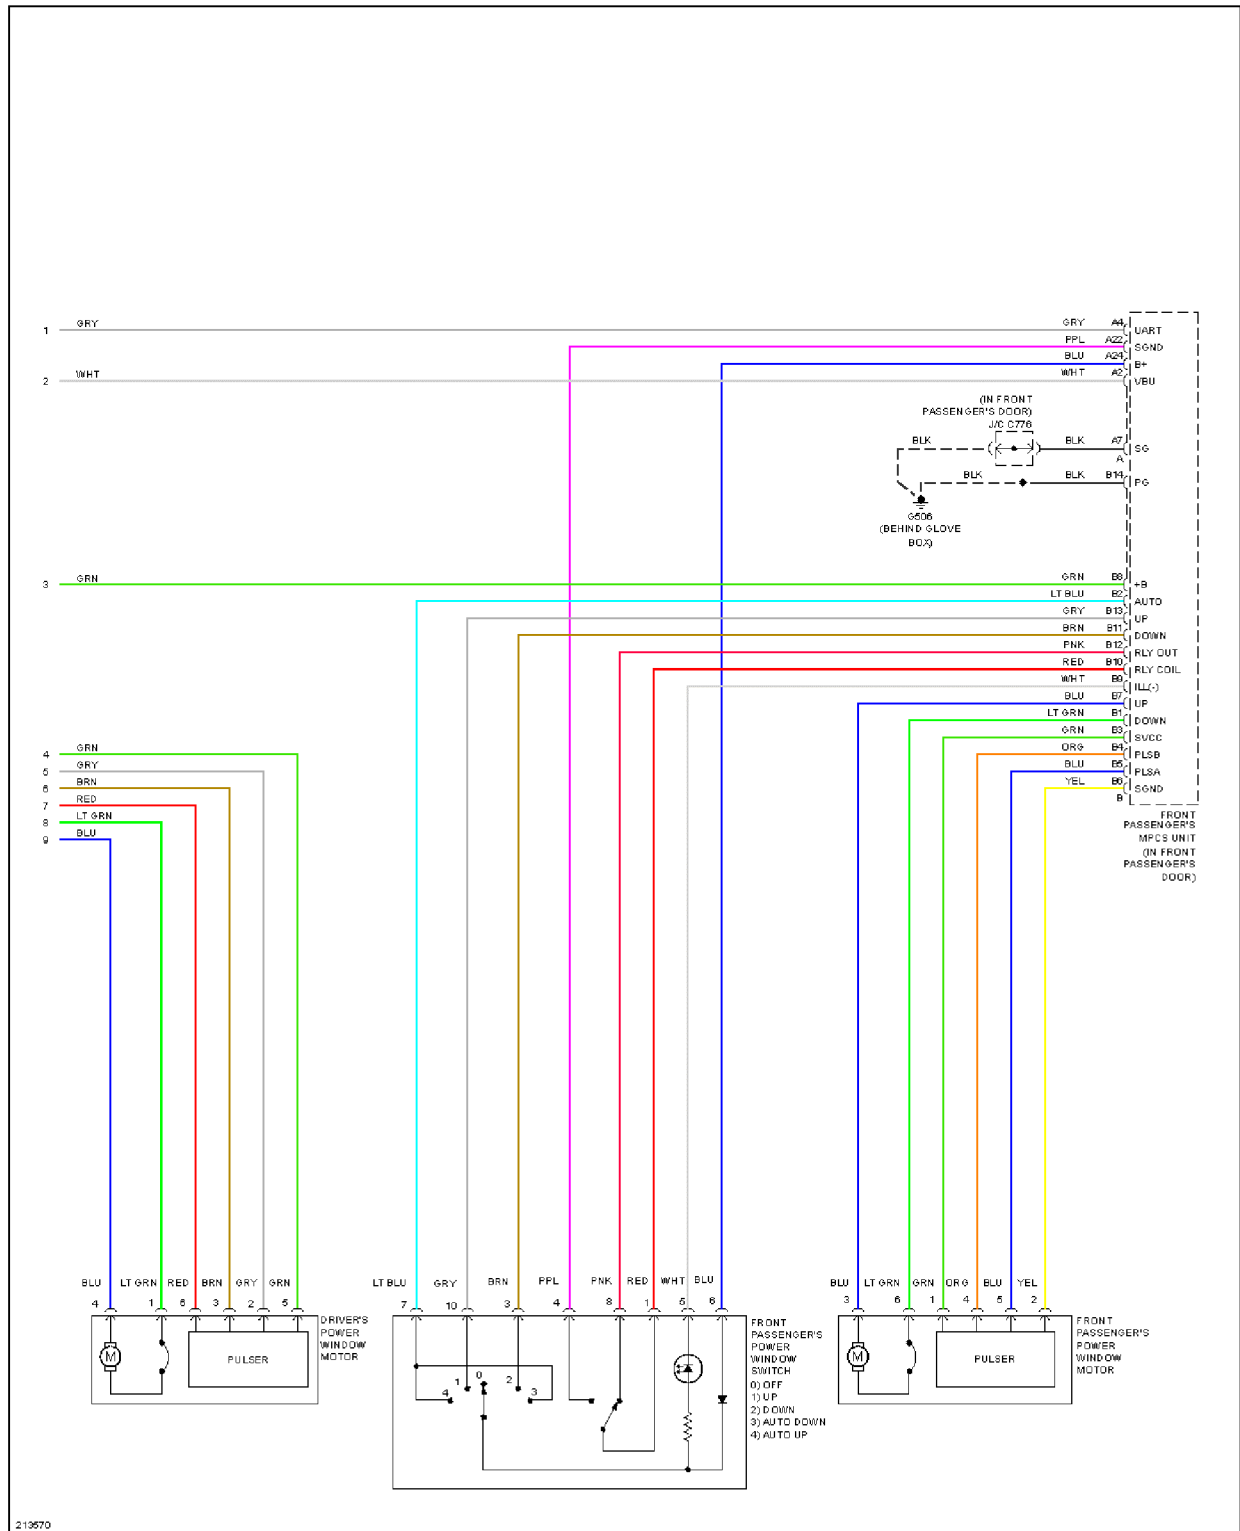


Fig. 83: Power Windows Circuit (3 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

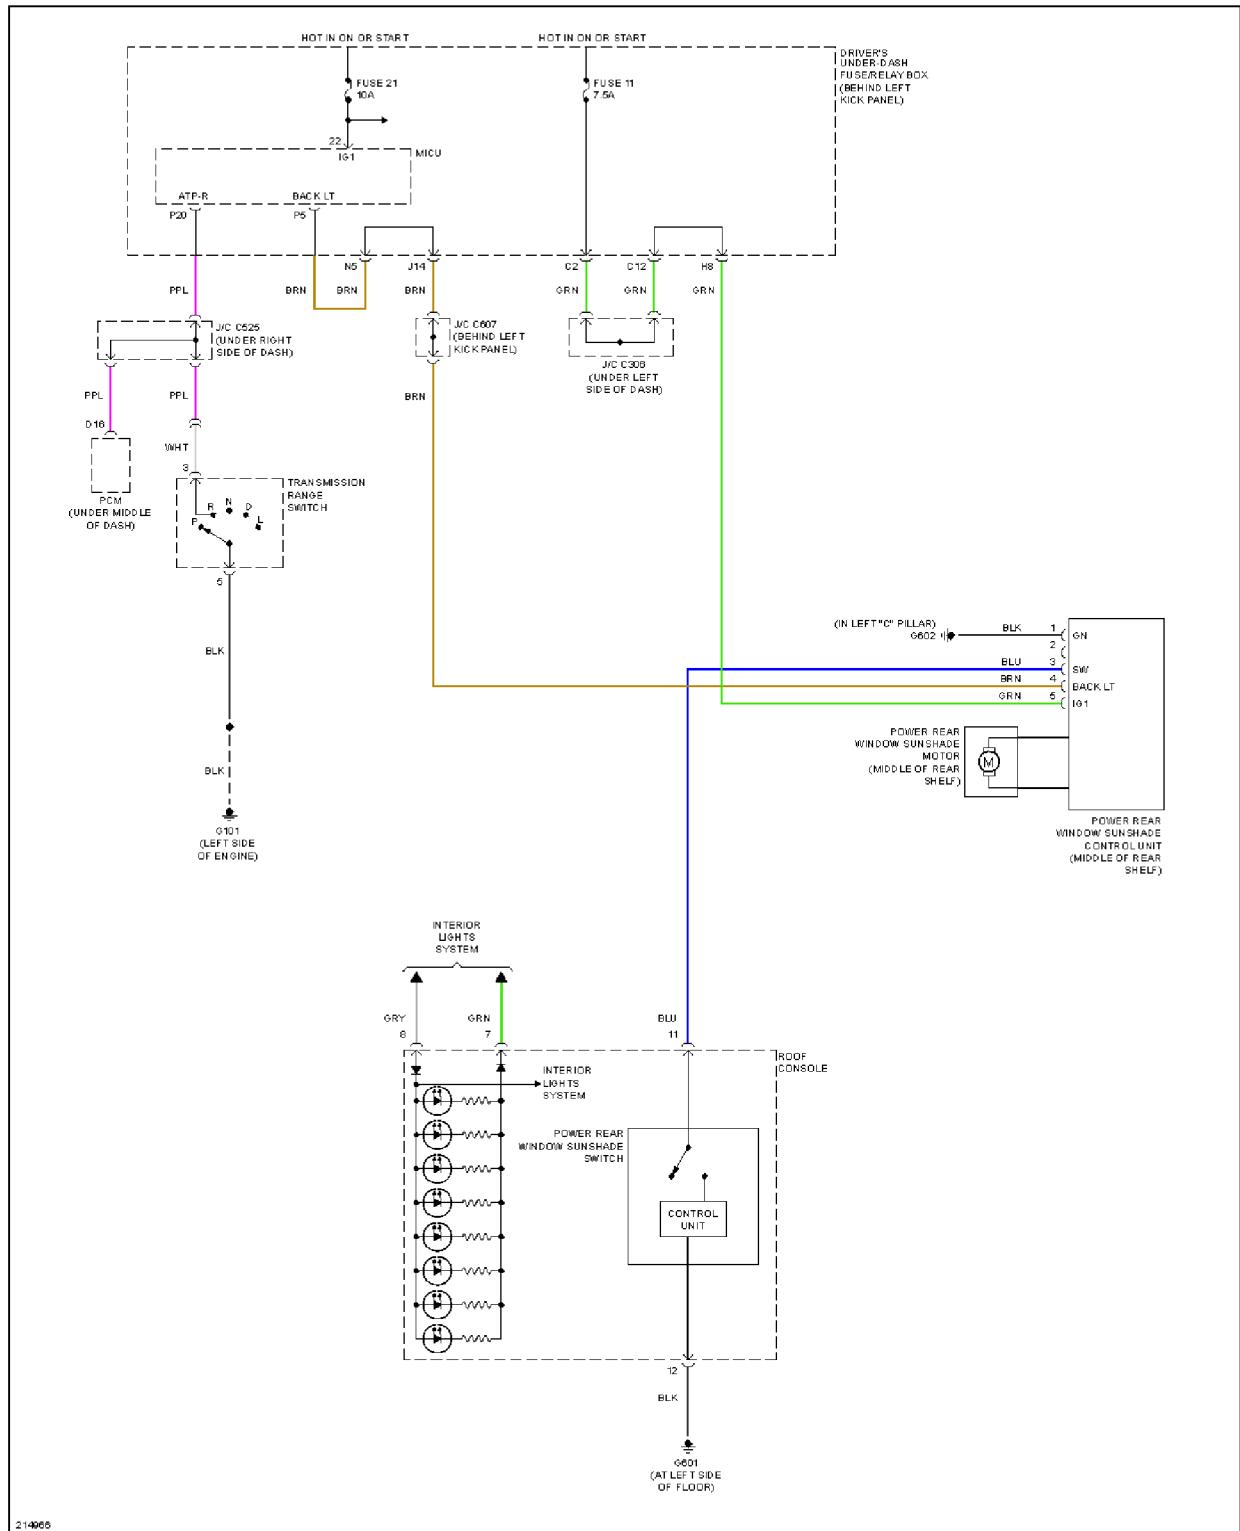


Fig. 84: Rear Window Sun Shade Circuit

RADIO

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

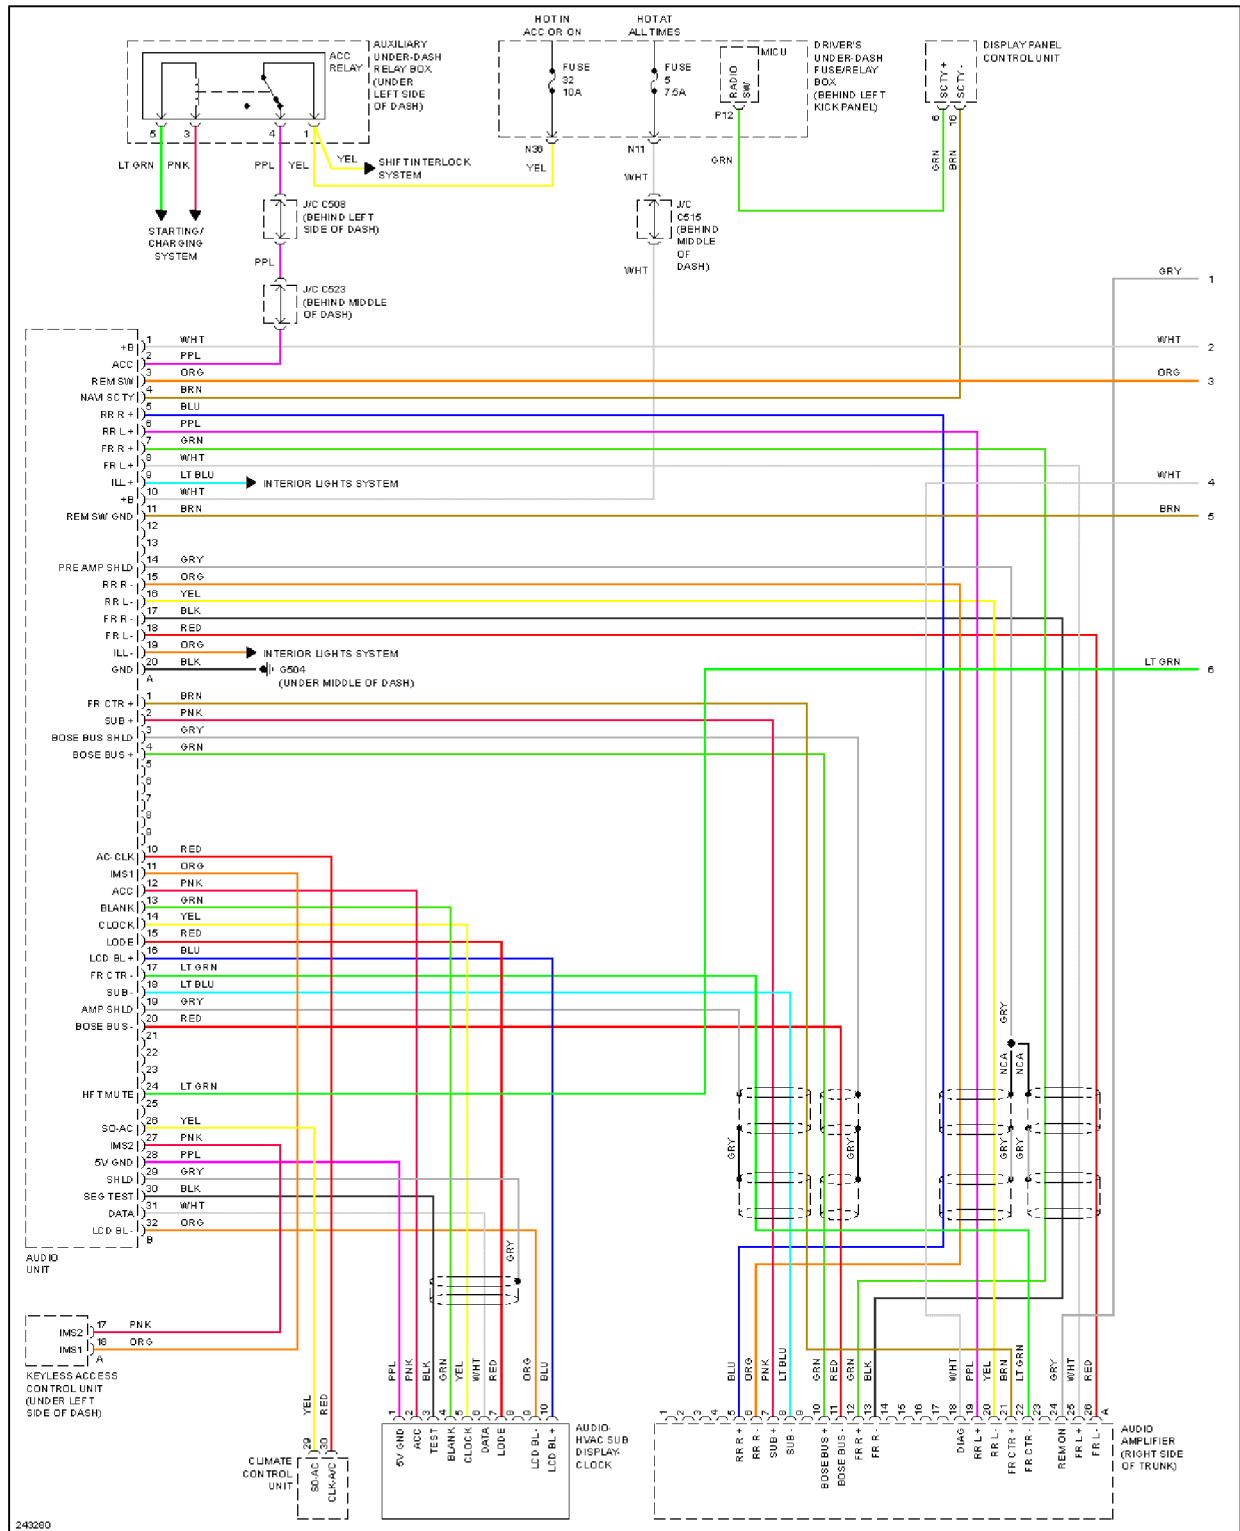


Fig. 85: Radio Circuit, Canada (1 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

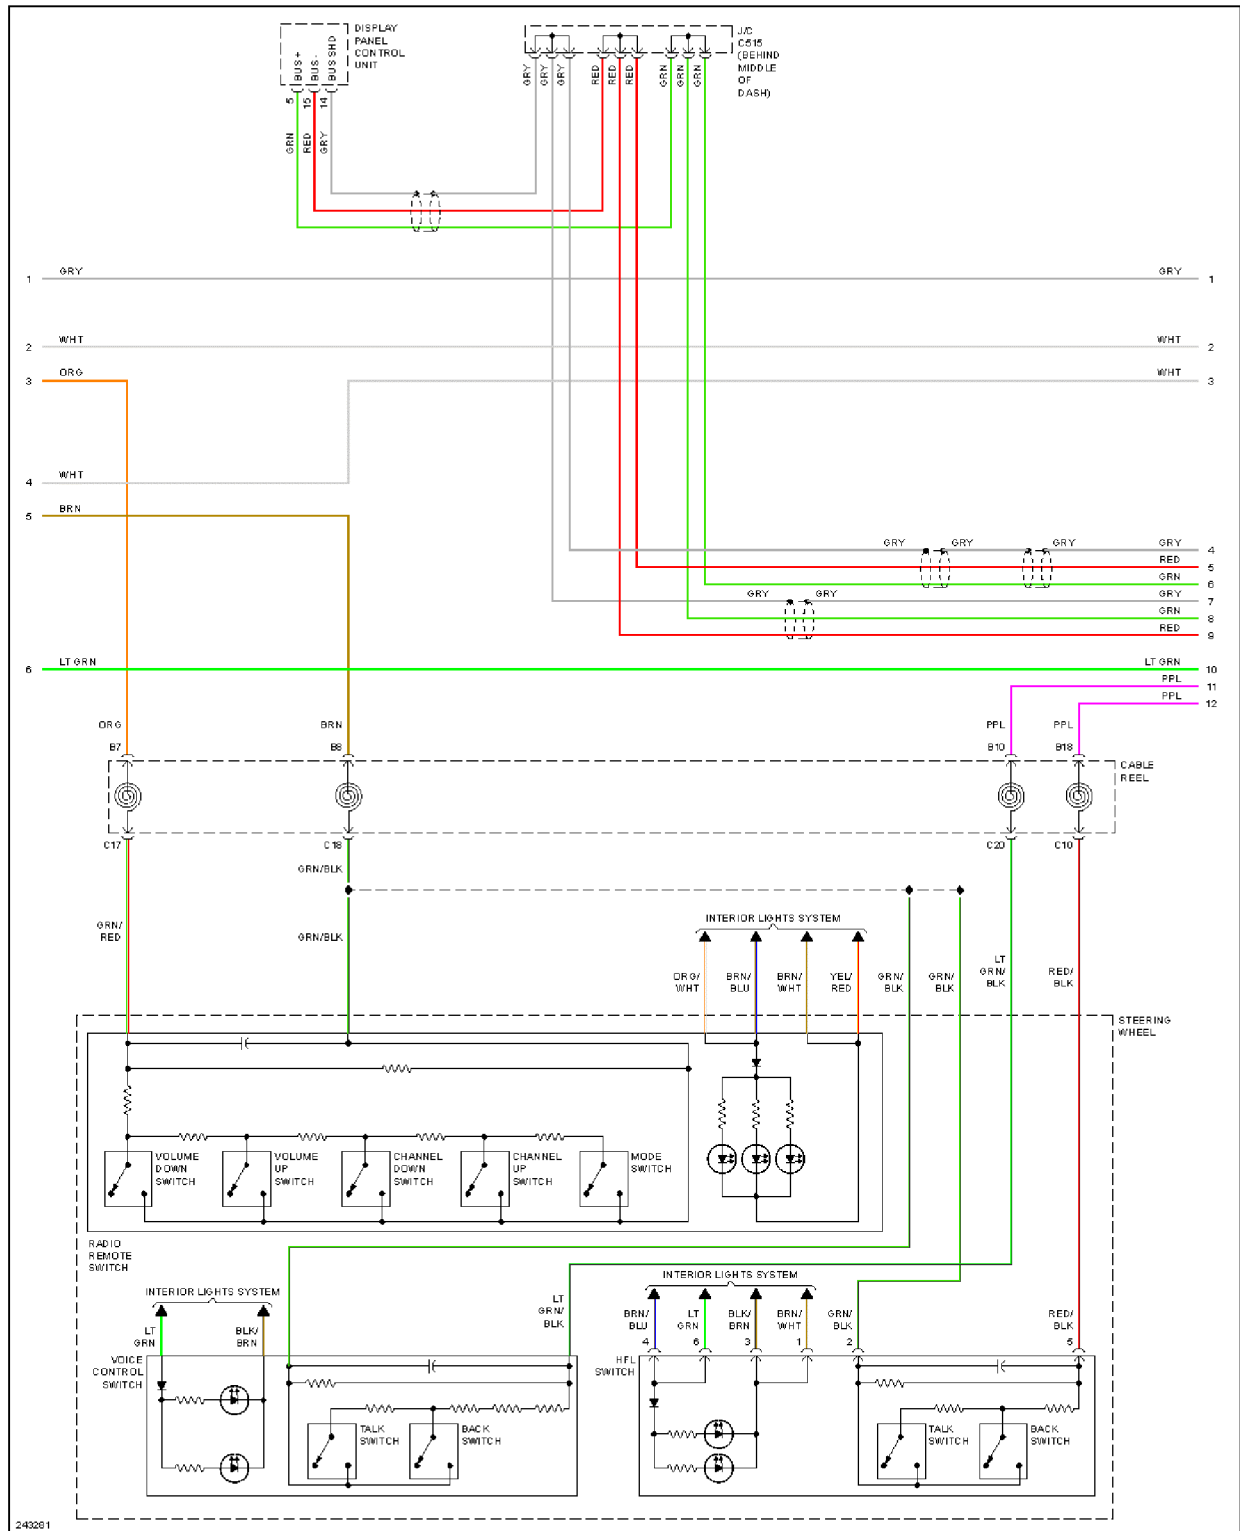


Fig. 86: Radio Circuit, Canada (2 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 87: Radio Circuit, Canada (3 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

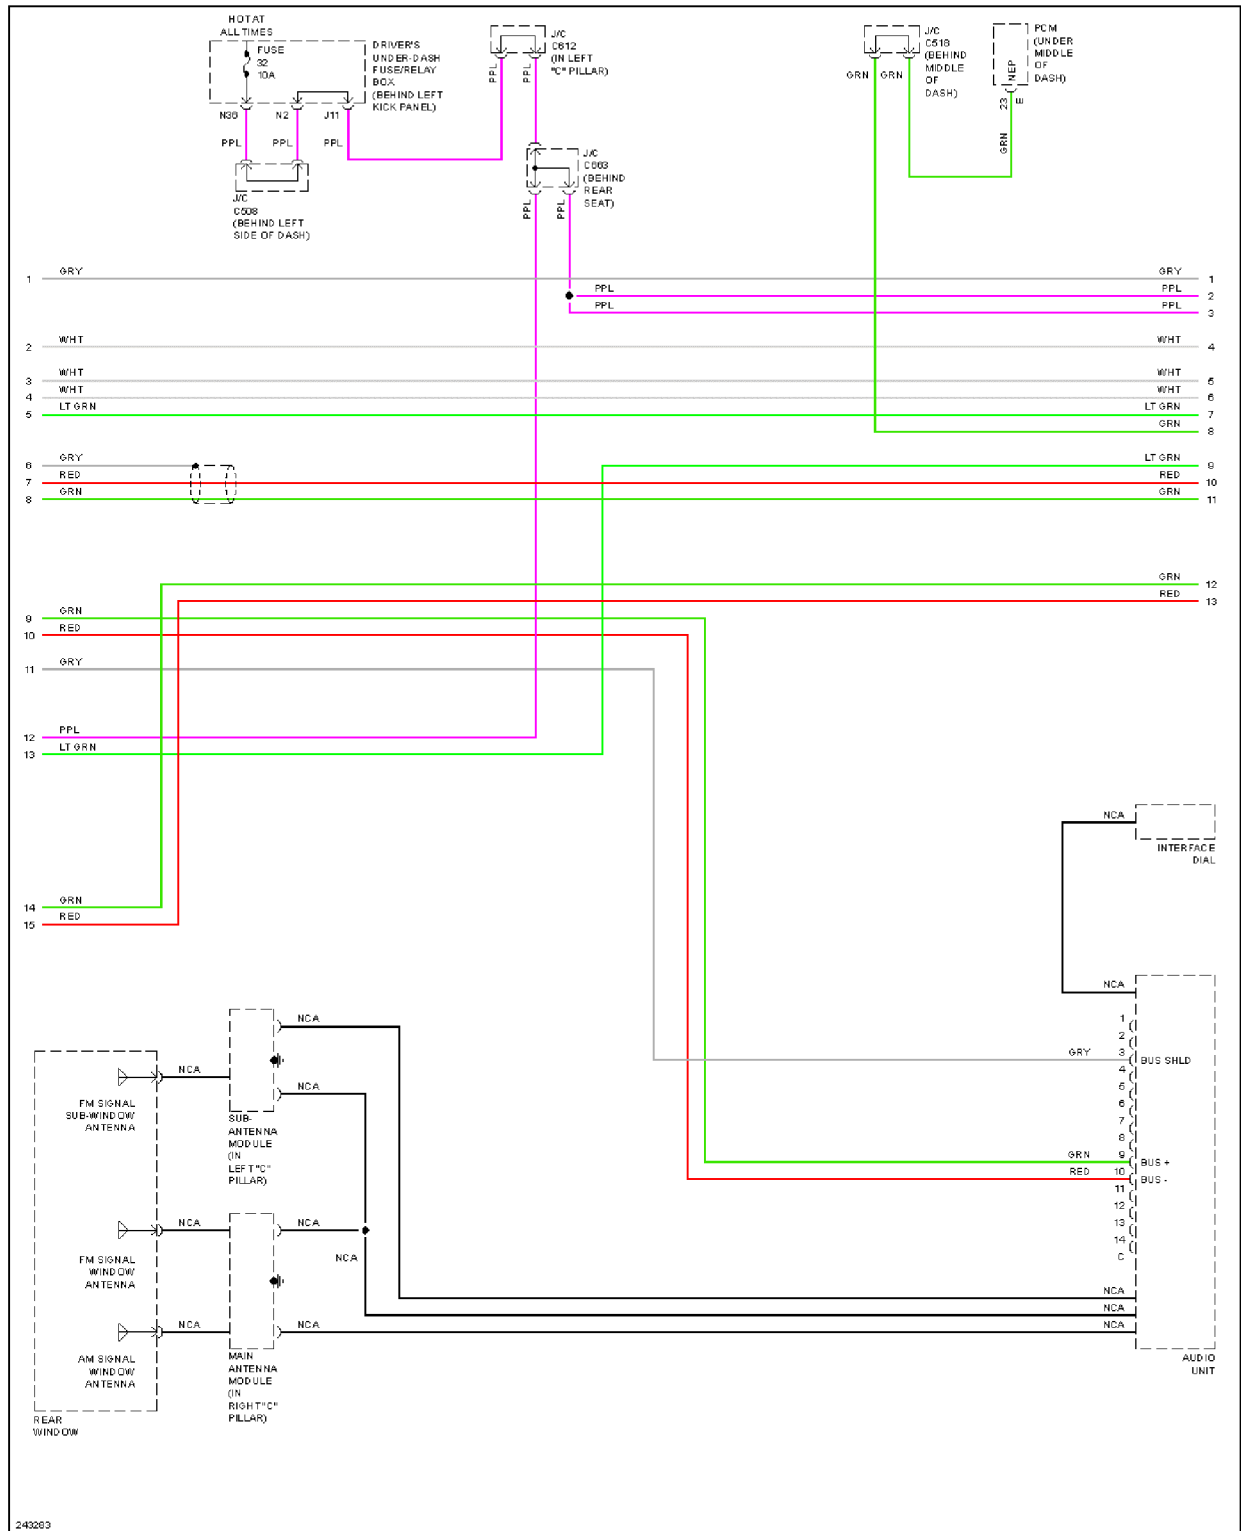


Fig. 88: Radio Circuit, Canada (4 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

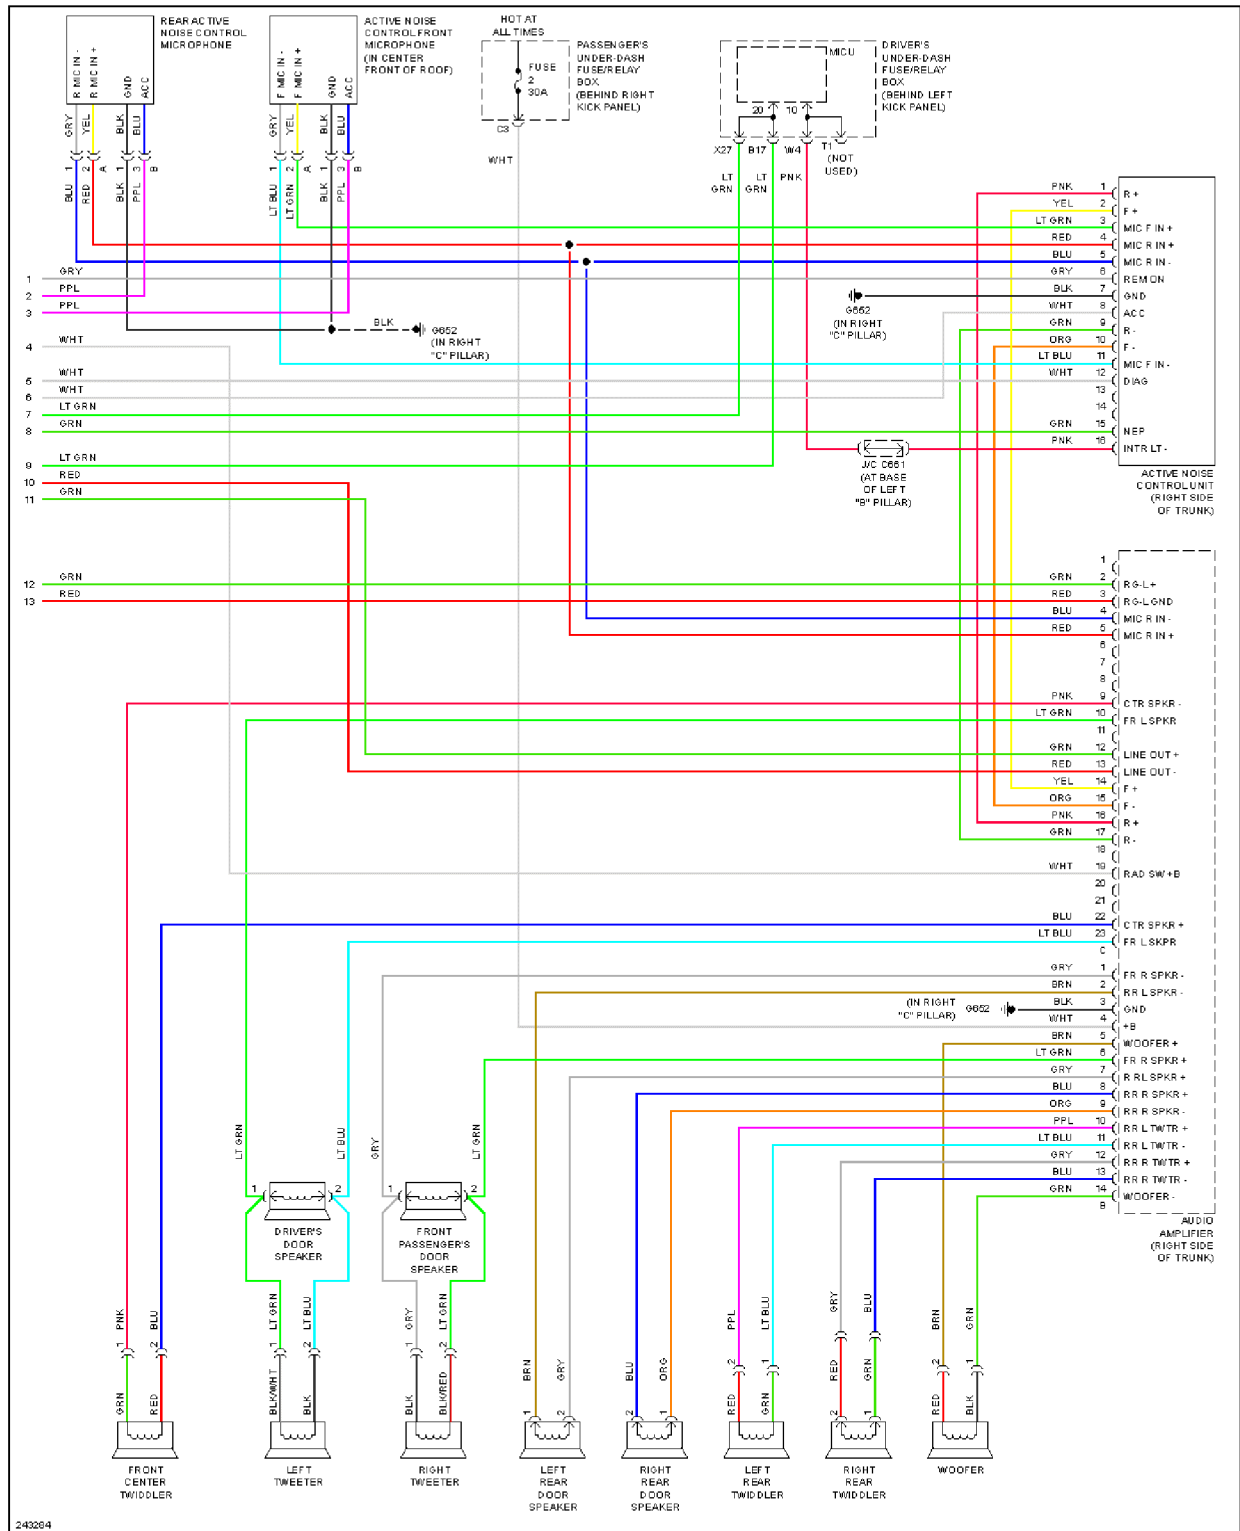


Fig. 89: Radio Circuit, Canada (5 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

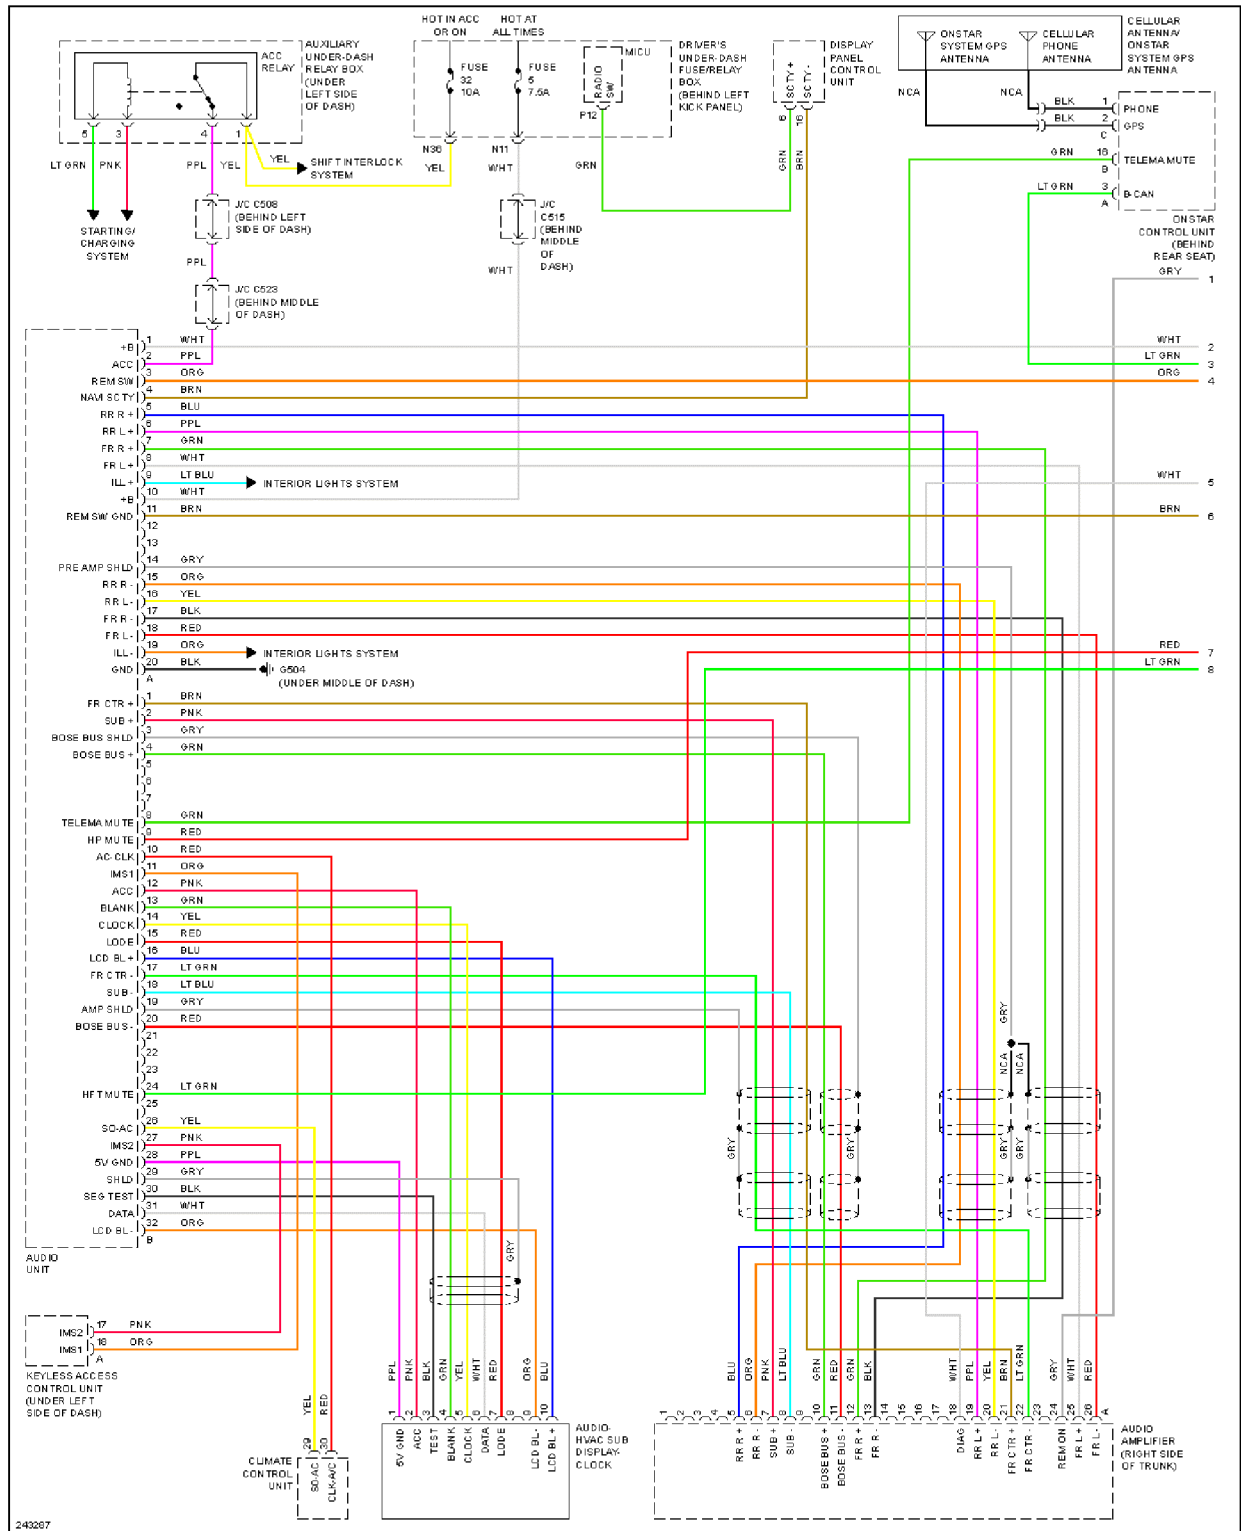


Fig. 90: Radio Circuit, USA (1 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

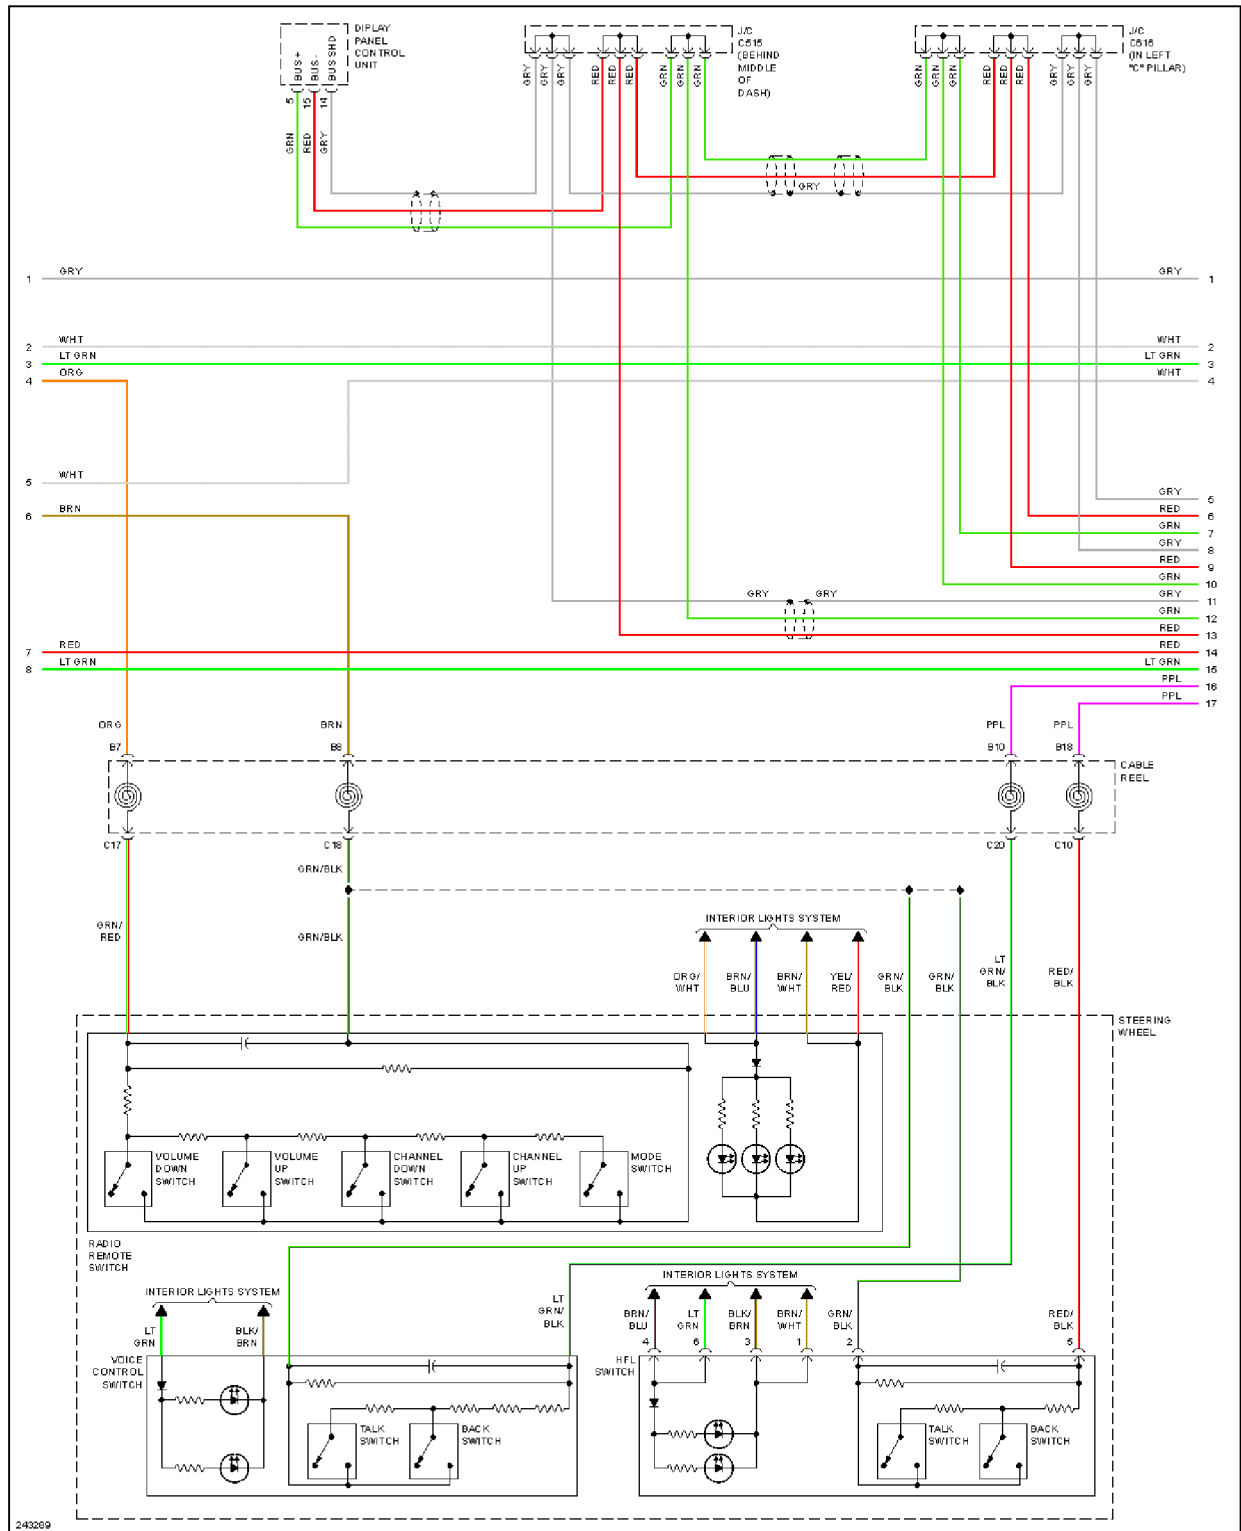


Fig. 91: Radio Circuit, USA (2 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 92: Radio Circuit, USA (3 of 5)

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 93: Radio Circuit, USA (4 of 5)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

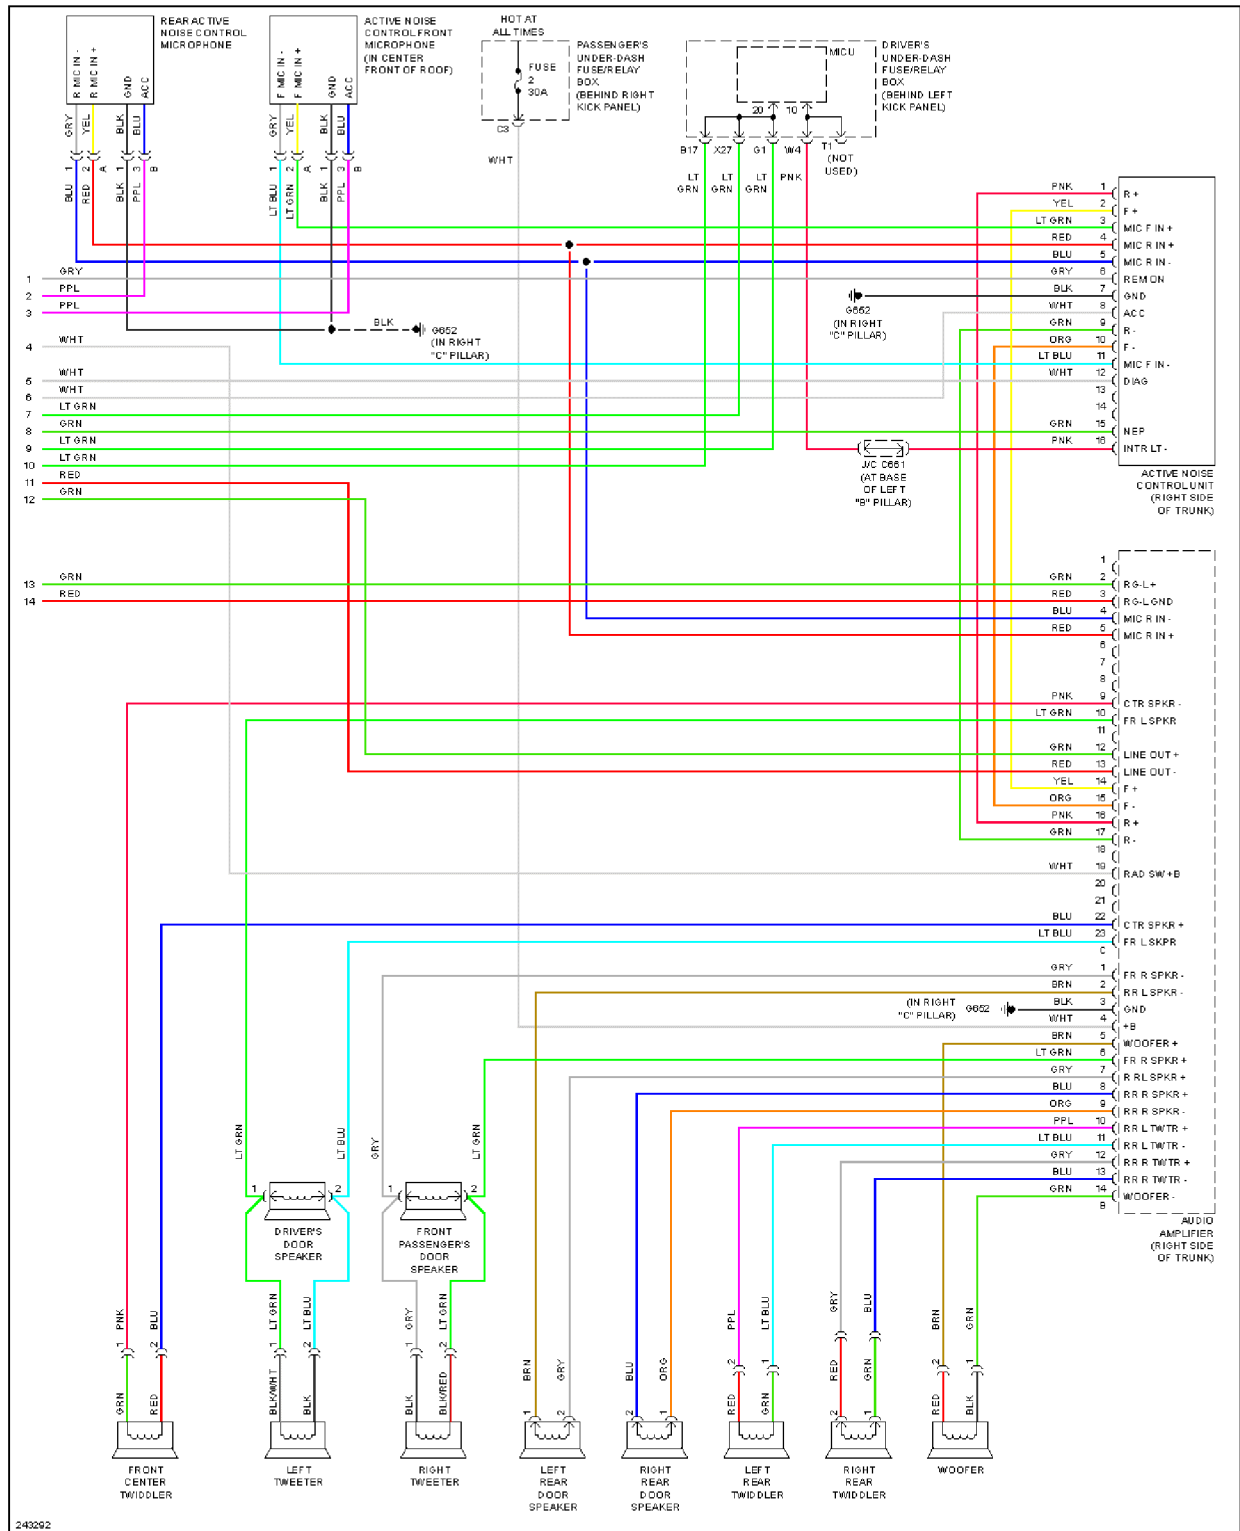


Fig. 94: Radio Circuit, USA (5 of 5)

SHIFT INTERLOCK

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

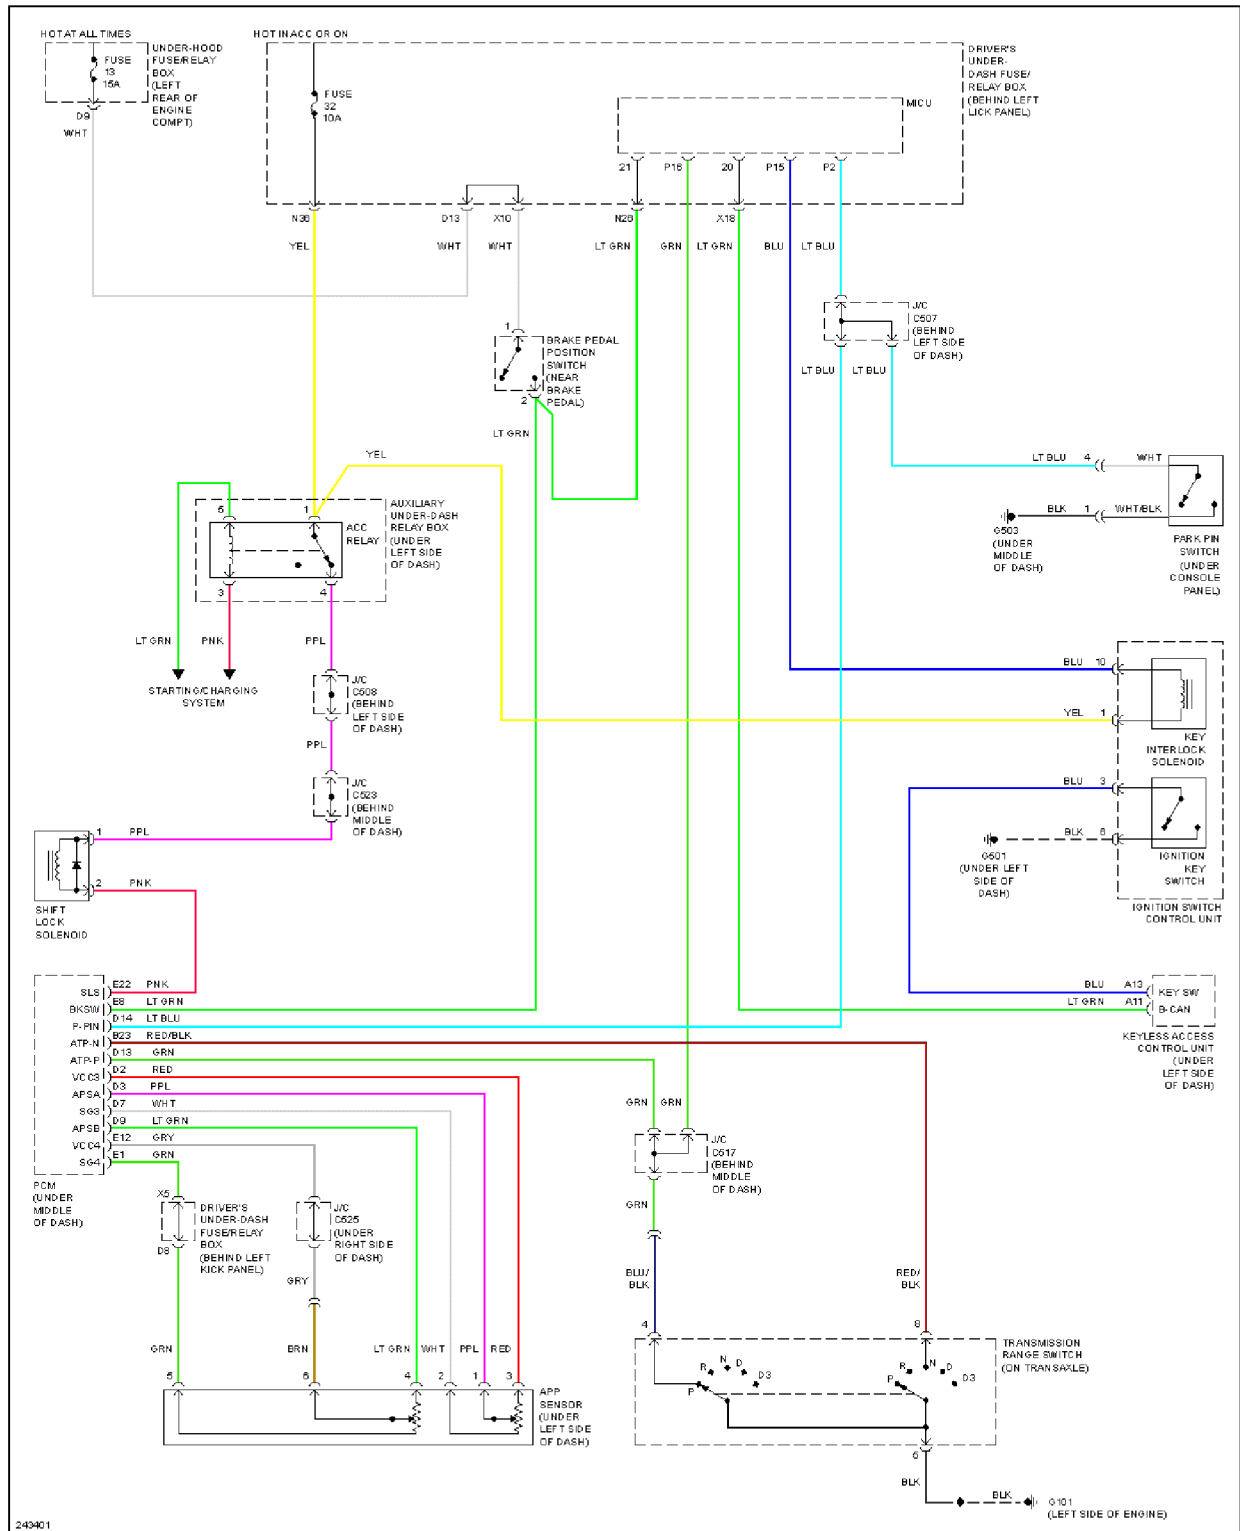


Fig. 95: Shift Interlock Circuit

STARTING/CHARGING

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

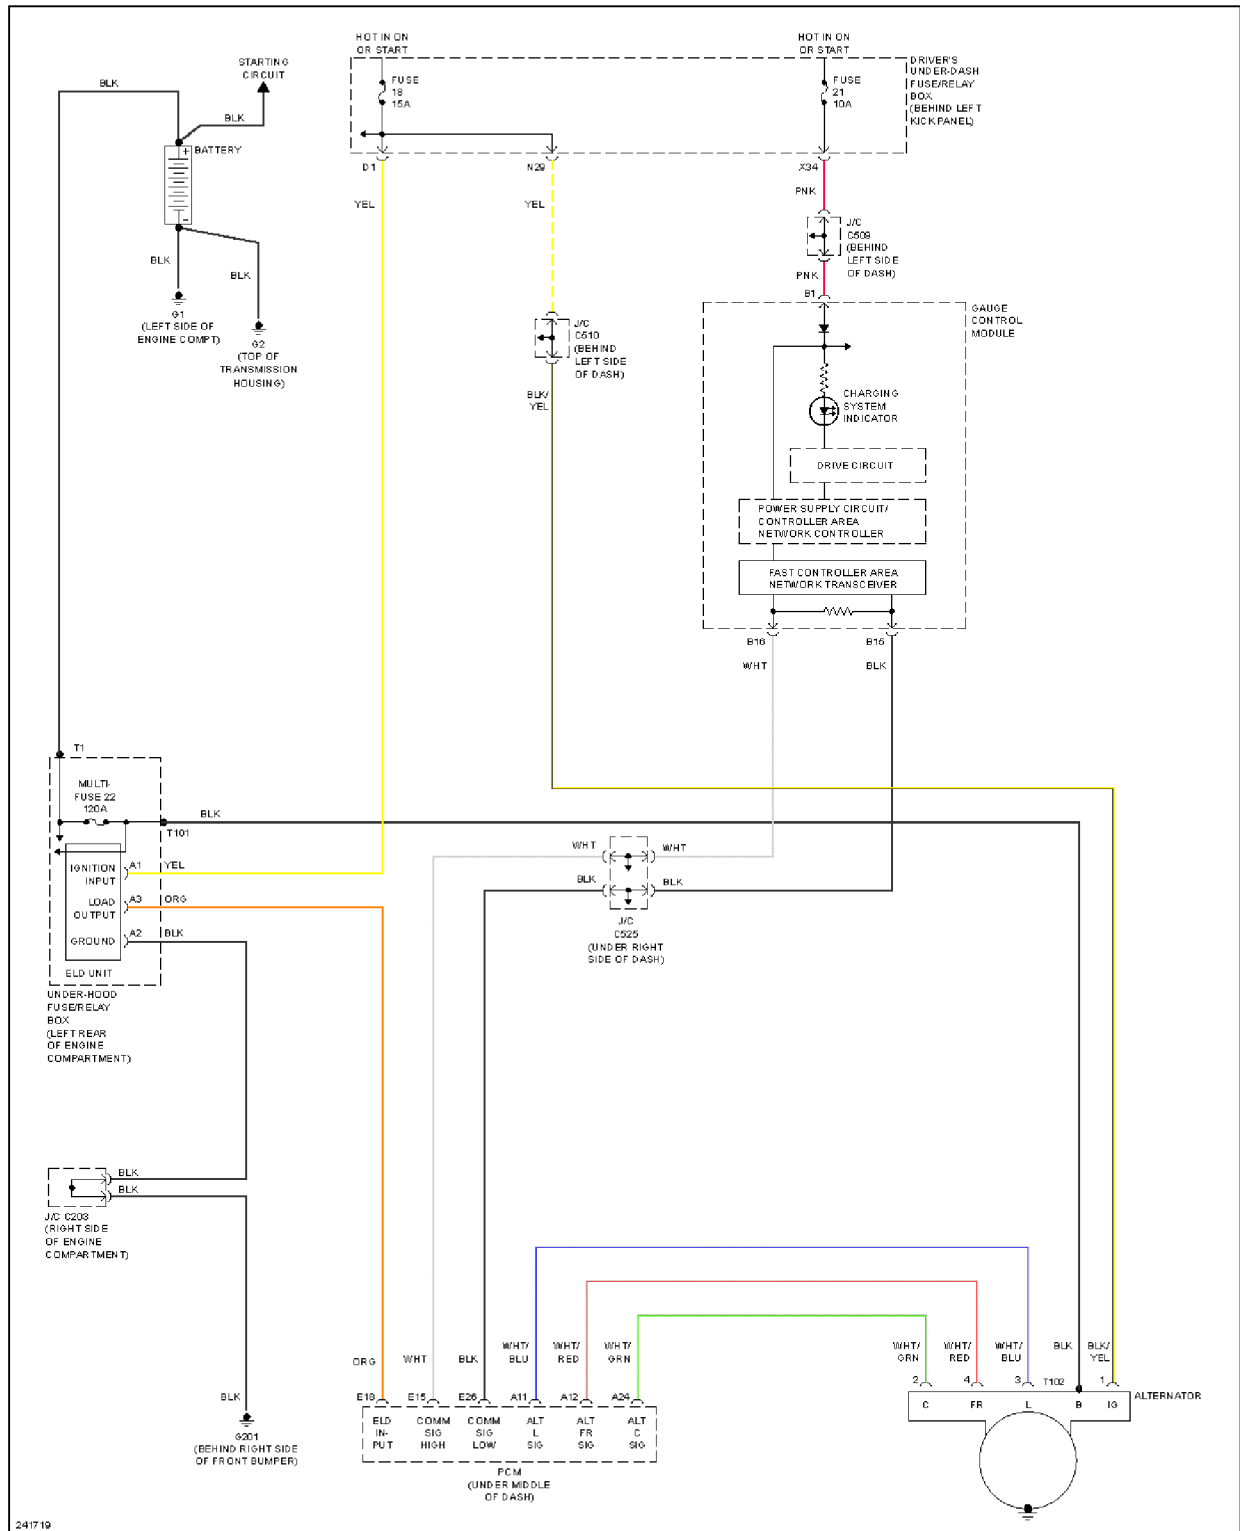


Fig. 96: Charging Circuit

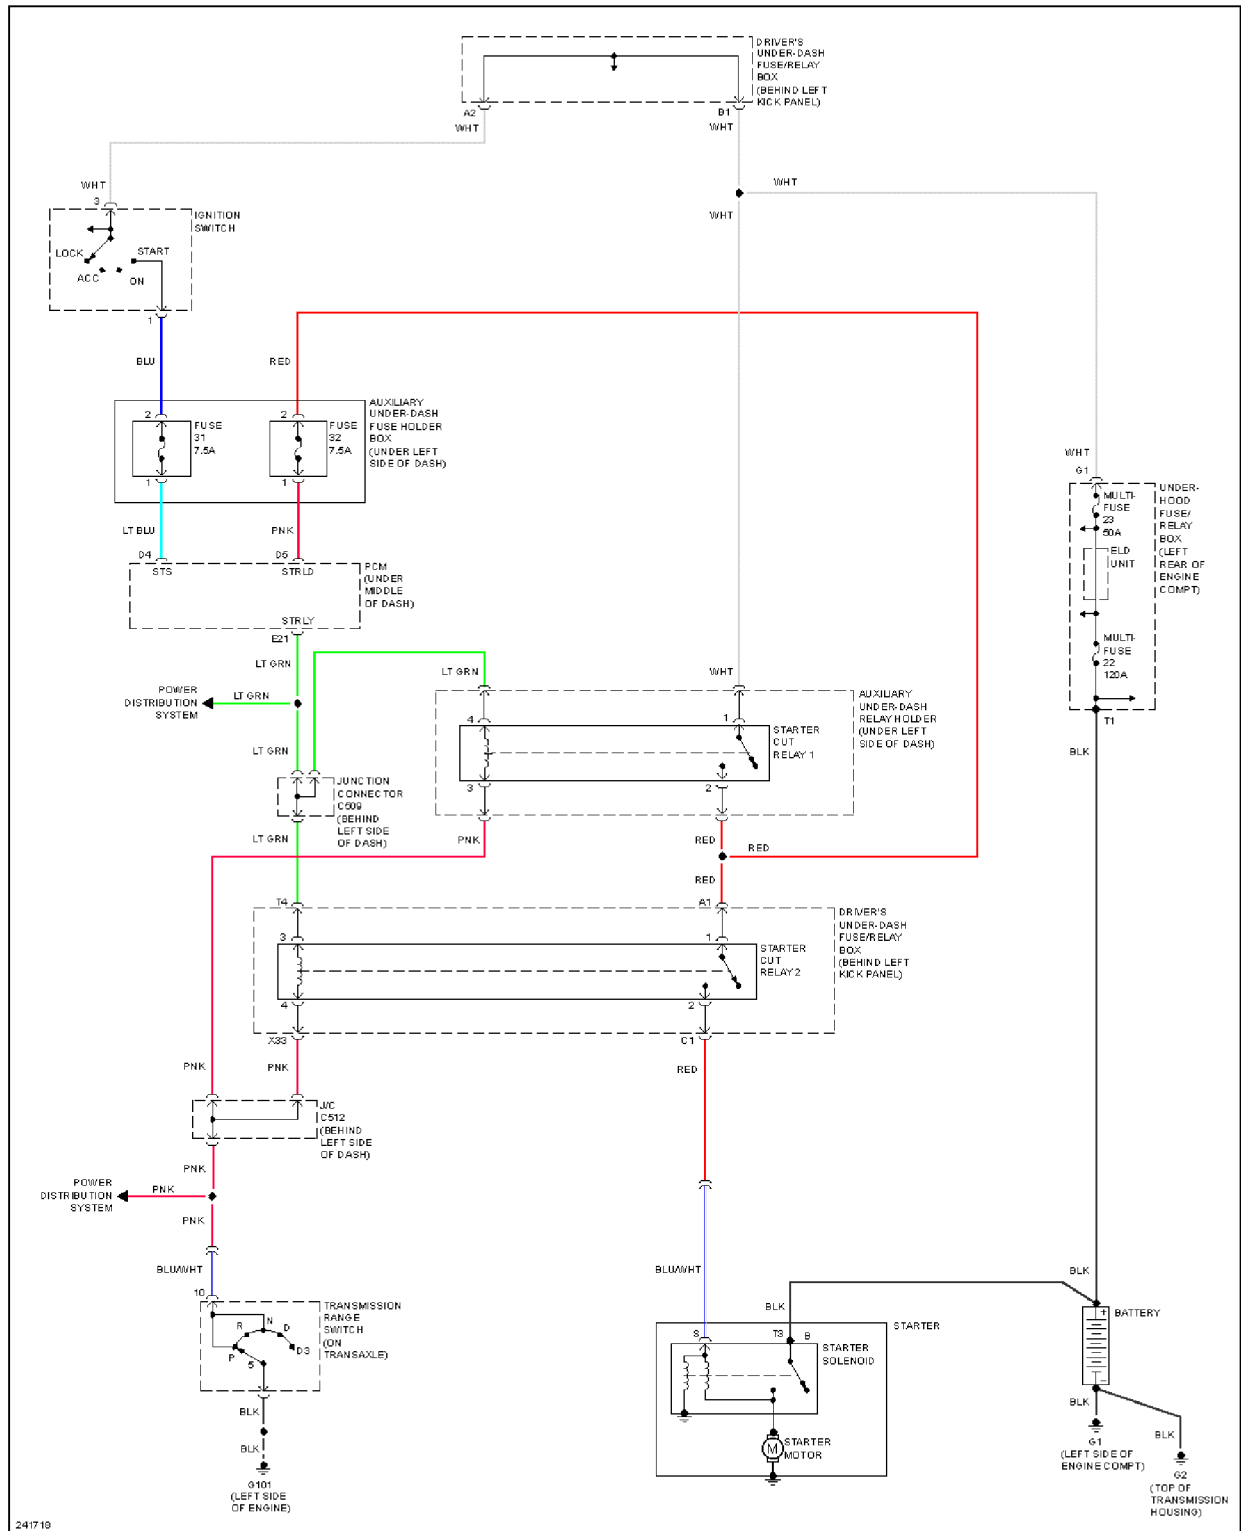


Fig. 97: Starting Circuit

SUPPLEMENTAL RESTRAINTS

2006 SYSTEM WIRING DIAGRAMS Acura - RL



2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 99: Supplemental Restraints Circuit (2 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

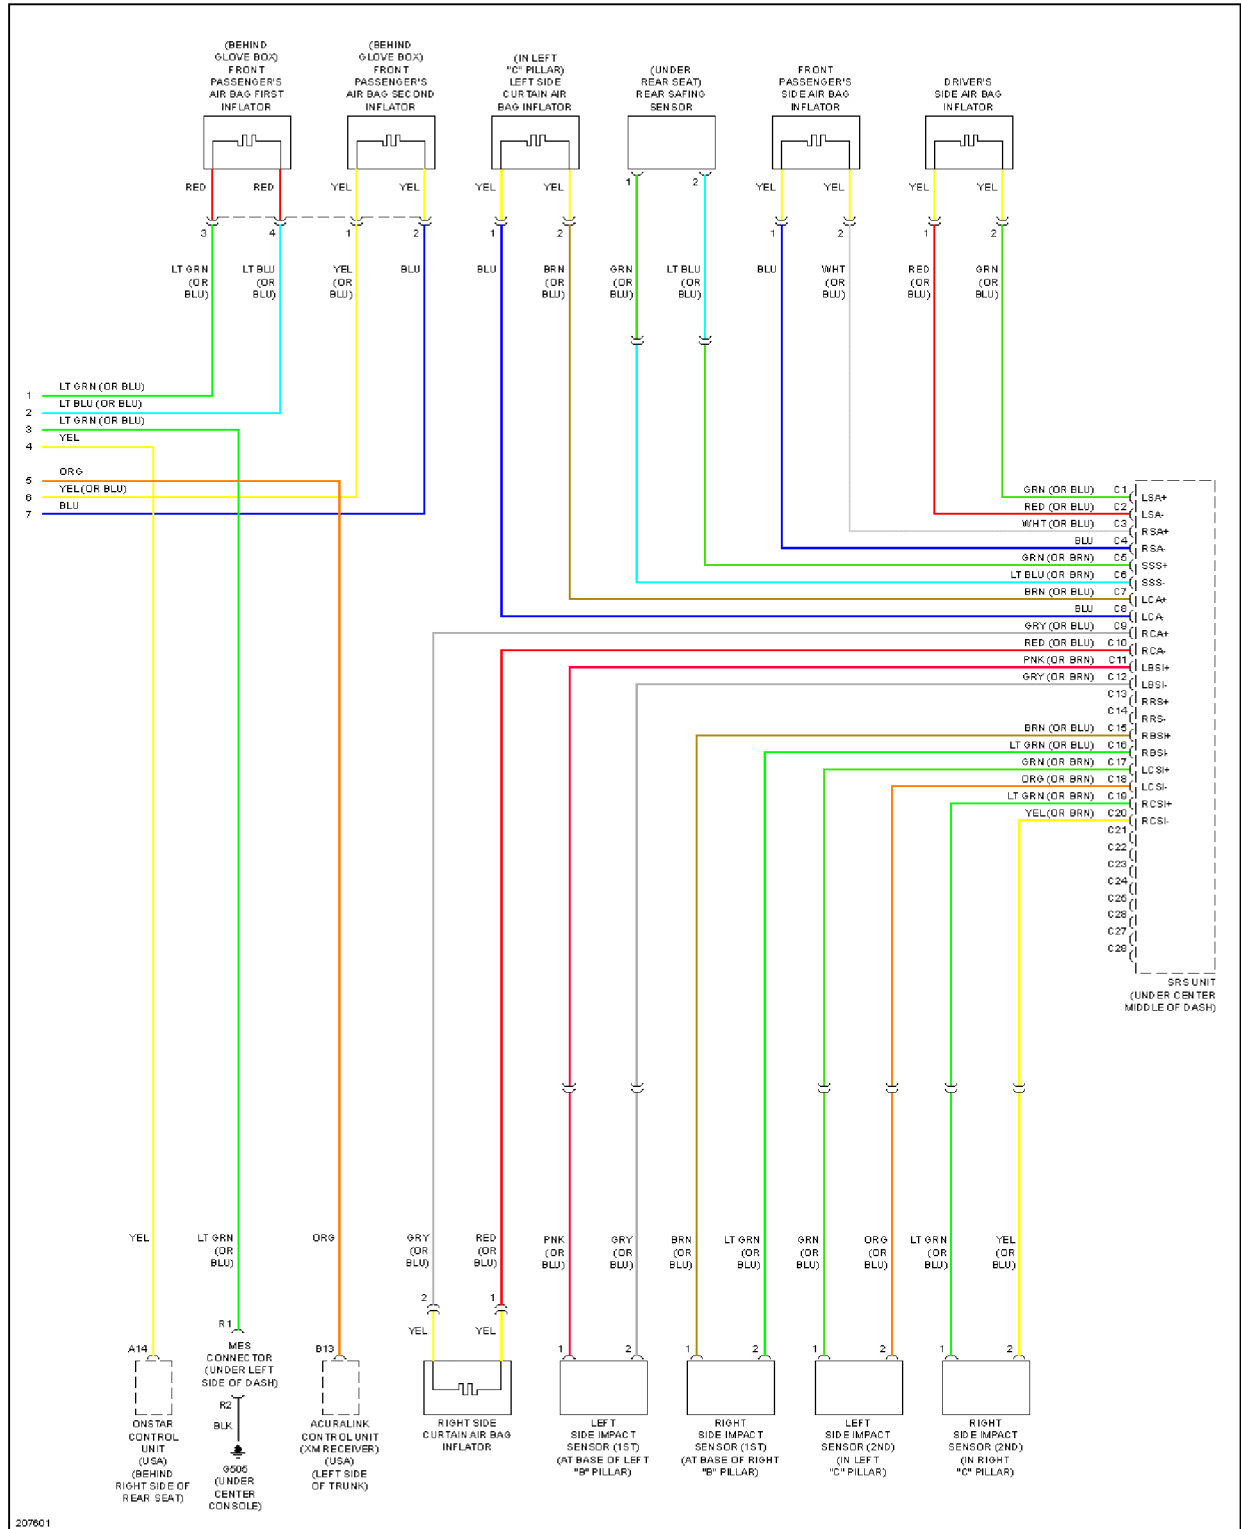


Fig. 100: Supplemental Restraints Circuit (3 of 3)

TRANSMISSION

2006 SYSTEM WIRING DIAGRAMS Acura - RL



Fig. 101: Transmission Circuit (1 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

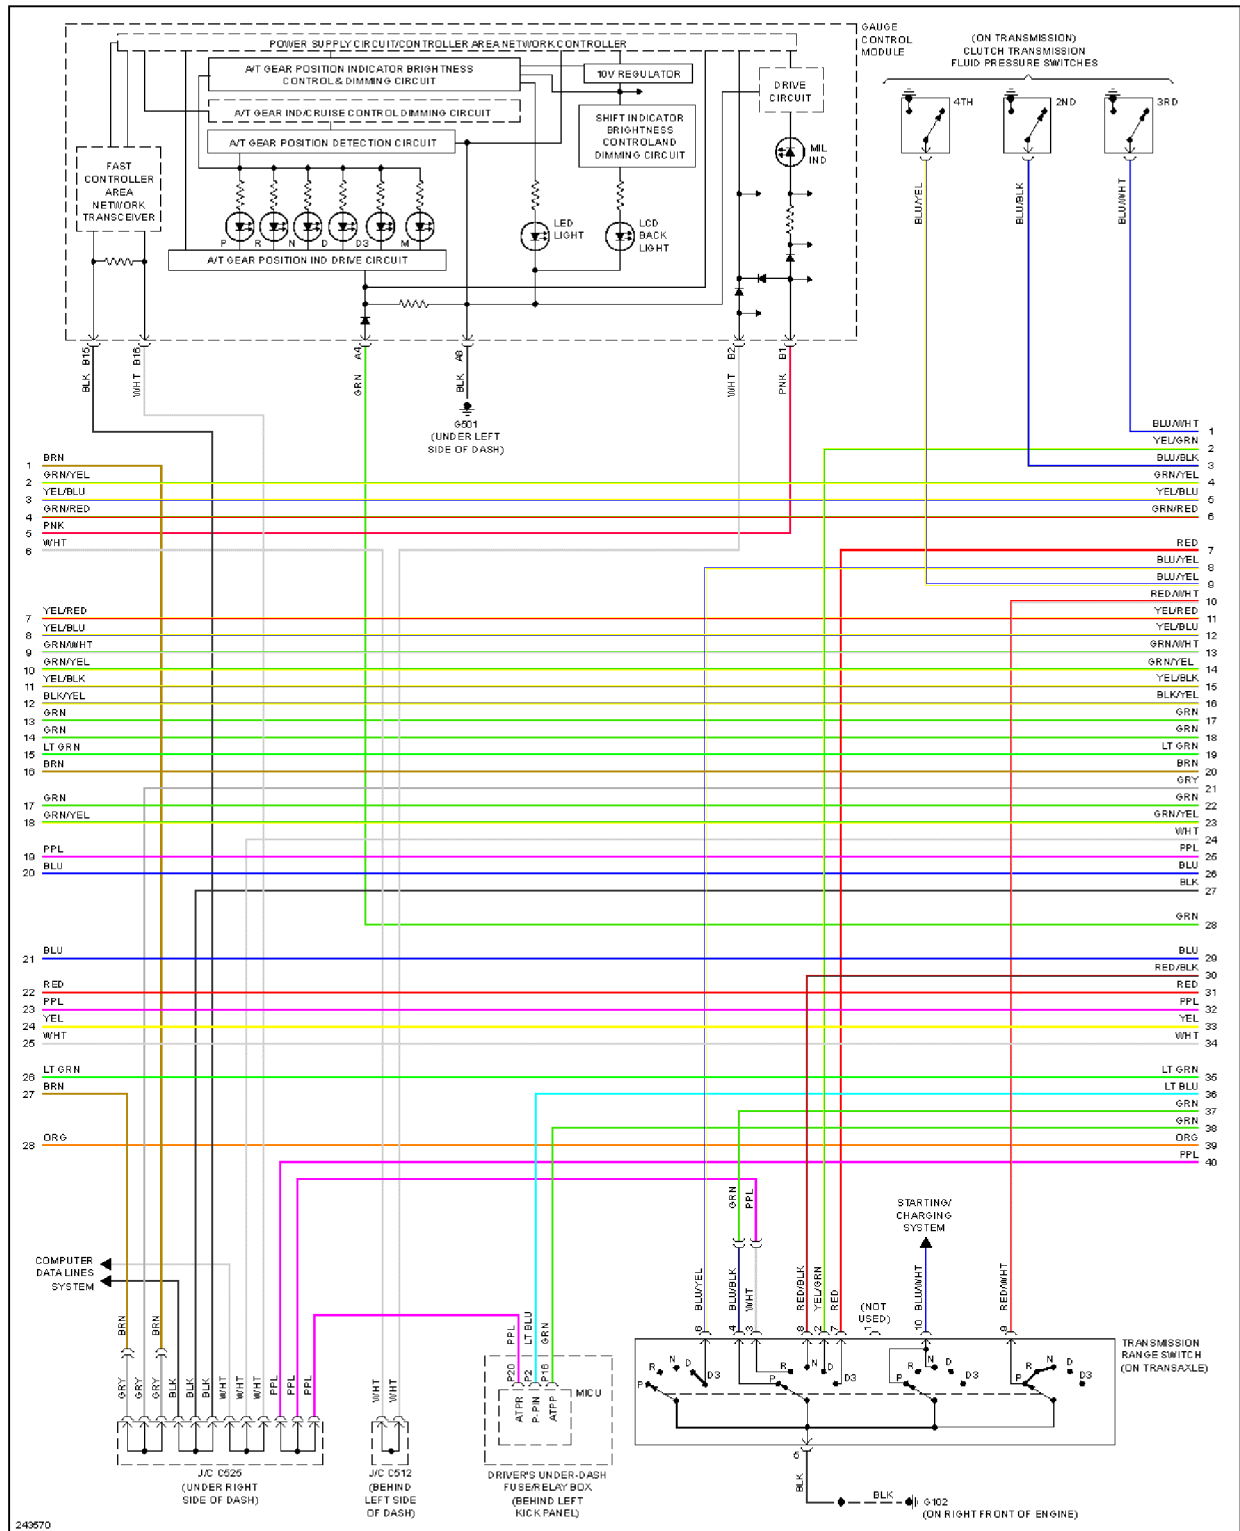


Fig. 102: Transmission Circuit (2 of 3)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

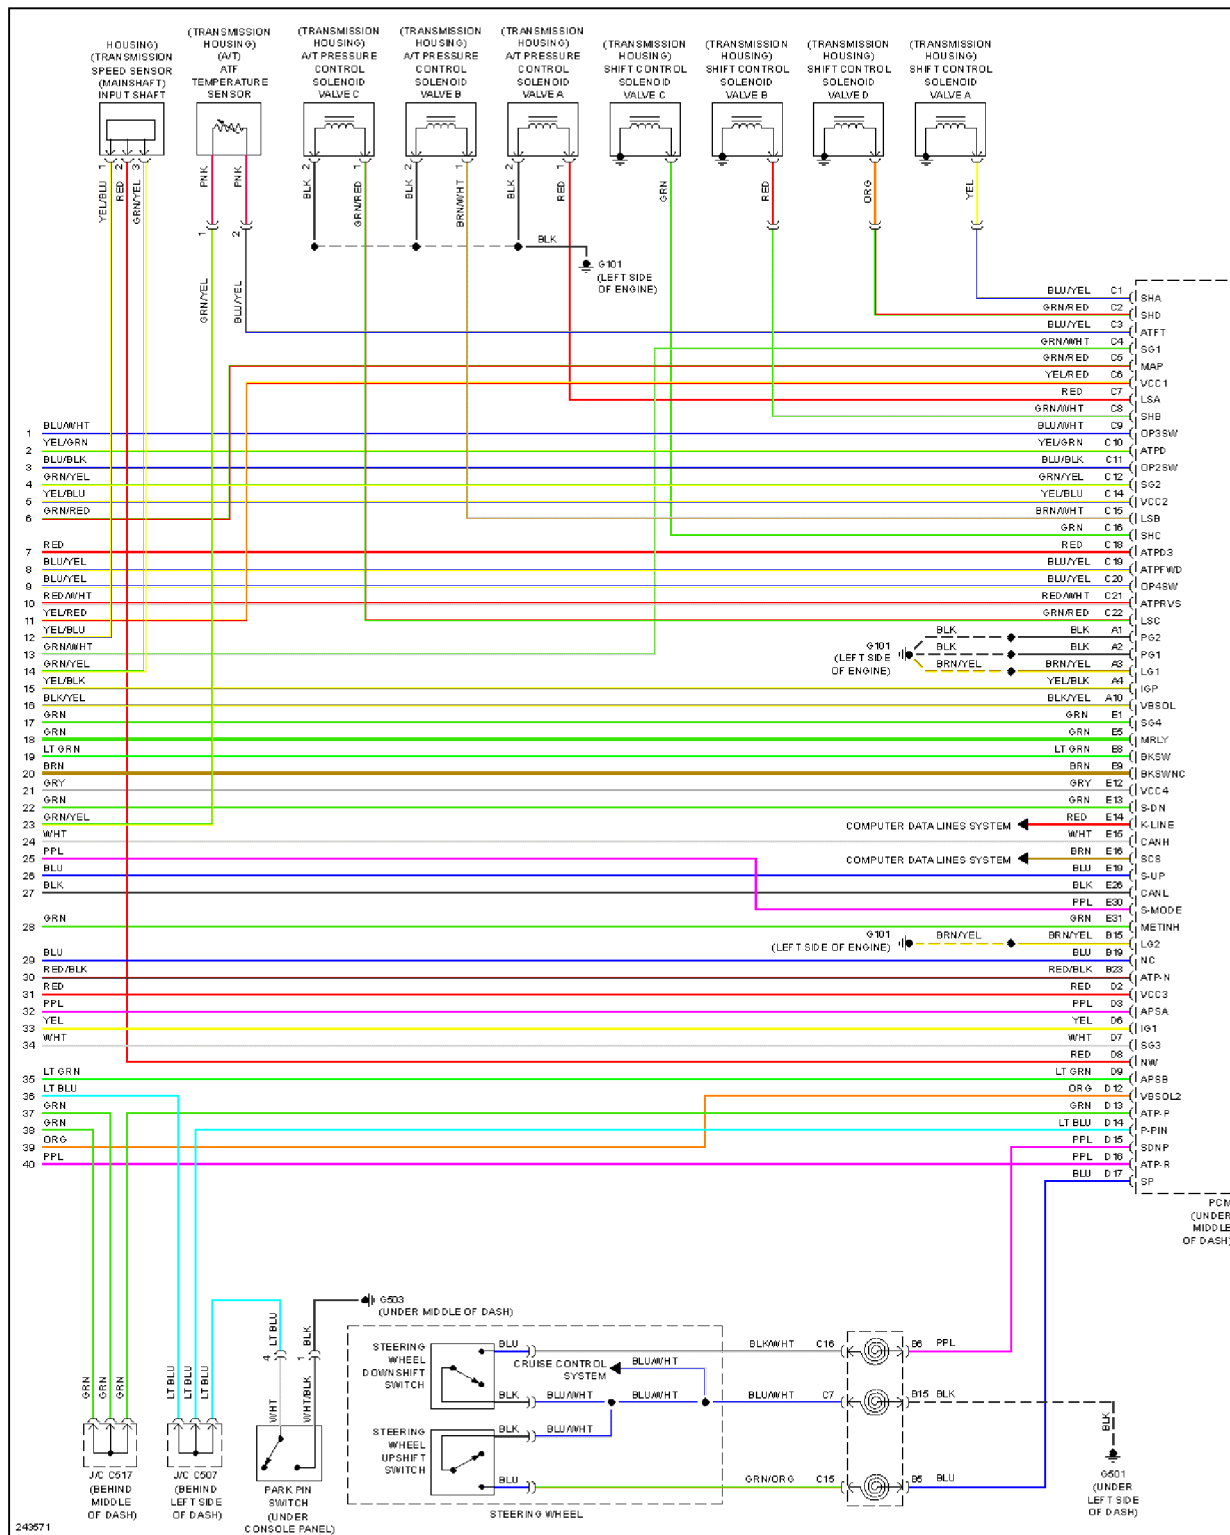


Fig. 103: Transmission Circuit (3 of 3)

TRUNK, TAILGATE, FUEL DOOR

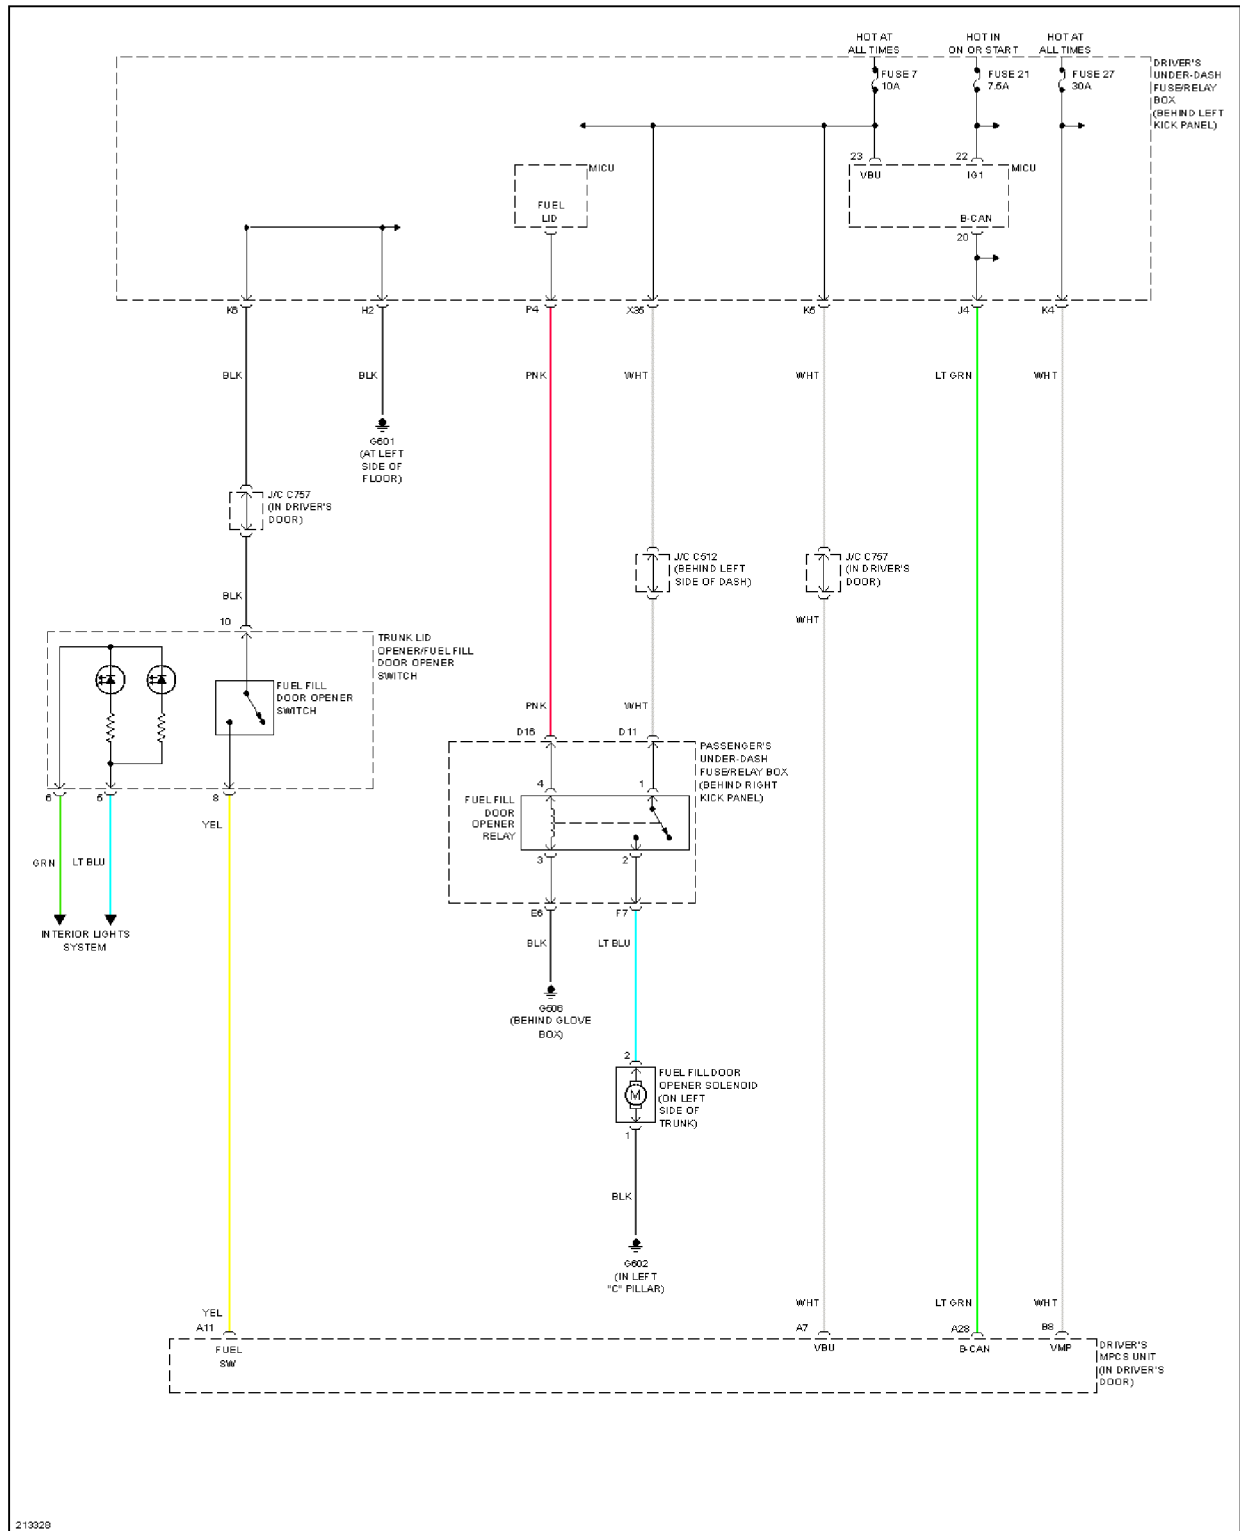


Fig. 104: Fuel Door Release Circuit

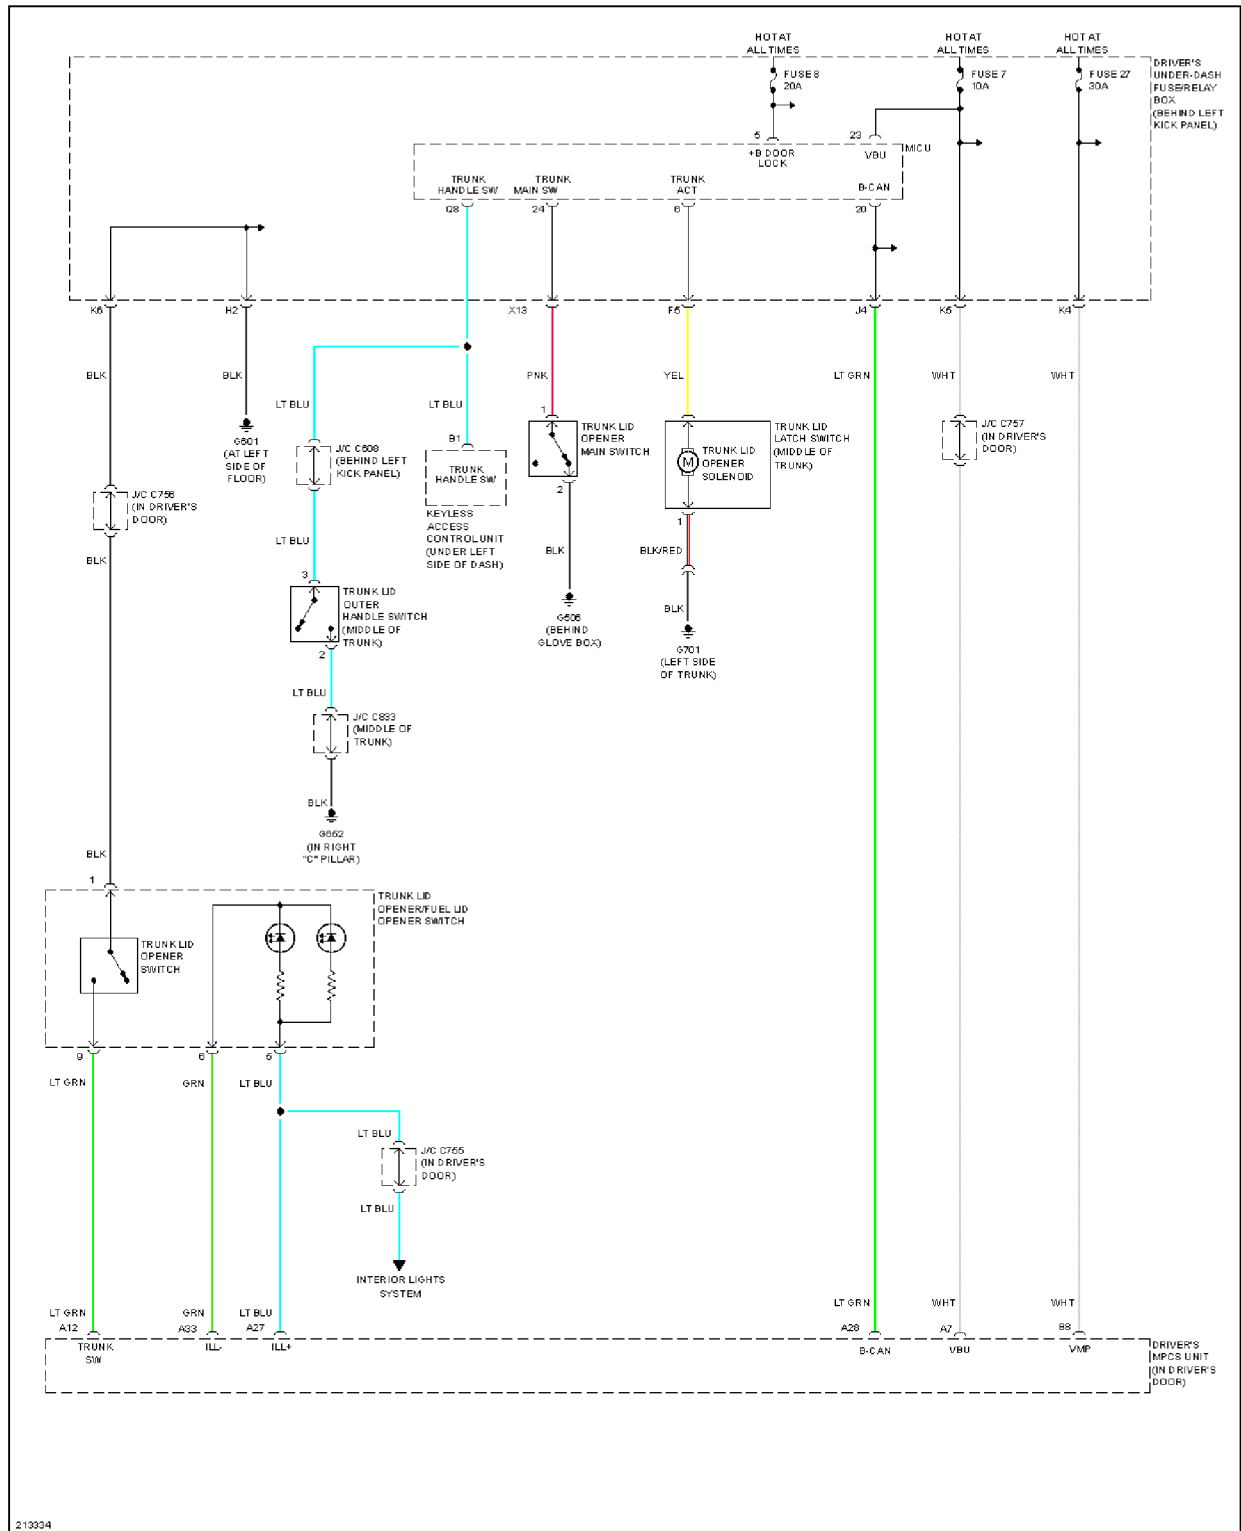


Fig. 105: Trunk Release Circuit

WARNING SYSTEMS

2006 SYSTEM WIRING DIAGRAMS Acura - RL



2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

Fig. 107: Tire Pressure Monitoring Circuit (1 of 2)

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

Fig. 108: Tire Pressure Monitoring Circuit (2 of 2)

WIPER/WASHER

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

Fig. 109: Front Wiper/Washer Circuit

2006 Acura RL

2006 SYSTEM WIRING DIAGRAMS Acura - RL

Fig. 110: Headlamp Washer Circuit